

OPERATOR'S MANUAL

UH-1H/V HELICOPTERS

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U. S. Army Aviation Systems Command, ATTN: AMSAV- MMD, 4300 Goodfellow Boulevard, St. Louis, MO 63120-1798. A reply will be furnished directly to you.

TABLE OF CONTENTS

	Page
CHAPTER 1	INTRODUCTION 1-1
CHAPTER 2	HELICOPTER AND SYSTEMS DESCRIPTION AND OPERATION 2-1
Section I	Helicopter 2-1
II	Emergency Equipment 2-13
III	Engine and Related Systems 2-13
IV	Helicopter Fuel System 2-18
V	Flight Control System 2-21
VI	Hydraulic System 2-22
VII	Power Train System 2-23
VIII	Rotors 2-10
IX	Utility Systems 2-10
X	Heating and Ventilation 2-11
XI	Electrical Power Supply and Distribution System 2-12
XII	Lighting 2-13
XIII	Flight Instruments 2-17
XIV	Servicing Parking and Mooring 2-19
CHAPTER 3	AVIONICS 3-1
Section I	General 3-1
II	Communication 3-1
III	Navigation 3-9
IV	Transponder and Radar 3-12
CHAPTER 4	MISSION EQUIPMENT 4-1
Section I	Armament 4-1
II	Cargo Handling 4-5

TABLE OF CONTENTS (CONT)

		Page
CHAPTER 5	OPERATING LIMITS AND RESTRICTIONS	5-1
Section I	General	5-1
II	System Limits	5-1
III	Power Limits	5-1
IV	Loading Limits	5-2
V	Airspeed Limits	5-2
VI	Maneuvering Limits	5-2
VII	Environmental Restrictions	5-3
VIII	Height Velocity	5-3
XI	Internal Rescue Hoist (Breeze Only)	5-3
X	Other Limitations	5-3
CHAPTER 6	WEIGHT/BALANCE AND LOADING	
Section I	General	6-1
II	Weight and Balance	6-1
III	Fuel/Oil	6-2
IV	Personnel	6-2
V	Mission Equipment	6-2
VI	Cargo Loading	6-3
VII	Center of Gravity Limits	6-4
CHAPTER 7	PERFORMANCE DATA	
Section I	Introduction	7-1
II	Torque Available	7-3
III	Hover	7-4
IV	Takeoff	7-4
V	Cruise	7-5
VI	Drag	7-6
VII	Climb-Descent	7-6
VIII	Fuel Flow	7-7
CHAPTER 8	NORMAL PROCEDURES	
Section I	Mission Planning	8-1
II	Crew Duties	8-1
III	Operating Procedures and Maneuvers	8-1
IV	Instrument Flight	8-9
V	Flight Characteristics	8-9
VI	Adverse Environmental Conditions	8-11
CHAPTER 9	EMERGENCY PROCEDURES	
Section I	Helicopter Systems	9-1
APPENDIX A	REFERENCES	A-1
B	ABBREVIATIONS AND TERMS	B-1
C	TABULAR PERFORMANCE DATA	C-1
INDEX		Index 1

LIST OF ILLUSTRATIONS

FIGURE	TITLE	PAGE
2-1	General Arrangement Diagram	2-23
2-2	Principal Dimensions Diagram — Typical	2-25
2-3	Pilot/Copilot Seats — Typical	2-26
2-4	Instrument Panel	2-27
2-5	Crew Compartment — Typical	2-28
2-6	Engine/Miscellaneous Control Panel Typical	2-31
2-7	Heating and Defrosting System	2-32
2-8	Electrical System Typical	2-34
2-9	Caution Panel — Typical	2-35
2-10	Servicing Diagram — Typical	2-36
3-1	Signal Distribution Panel SB-329/AR	3-16
3-2	Signal Distribution Panel C-1611/A/C	3-17
3-3	Signal Distribution Panel C-6533/ARC	3-18
3-4	UHF Control Panel C-6287/ARC-51BX	3-19
3-5	UHF Control Panel C-4677/ARC-51X	3-20
3-6	UHF Control Panel C-1827/ARC-55B	3-21
3-7	Control Panel AN/ARC-115	3-22
3-8	VHF Control Panel C-7197/ARC-134	3-23
3-9	VHF Control Panel 614U-6/ARC-73	3-24
3-10	Control Panel AN/ARC-114 and AN/ARC-114A	3-25
3-11	FM Radio Set Control Panel AN/ARC-131	3-26
3-12	FM Radio Set Control Panel C-3835/ARC-54	3-27
3-13	FM Control Panel and Switch Assembly AN/ARC-44	3-28
3-14	Voice Security Equipment	3-29
3-15	HF Radio Control Panel	3-31
3-16	Direction Finder Control Panel ARN-83	3-32
3-17	ADF Control Panel ARN-59	3-33
3-18	Navigation Control Panel ARN-82	3-34
3-19	VHF Navigation Receiver Control Panel ARN-305	3-34
3-20	Course Deviation Indicator ID-43/ARN-30 and ID-1347/ARN-82	3-35
3-21	Gyromagnetic Compass Indicator (RMI)	3-36
3-22	Marker Beacon Controls	3-37
3-23	DME Indicator ID-2192/ARN-124	3-38
3-24	Transponder Set AN/APX-72	3-39
3-25	Transponder Set (AN/APX-100) Control Panel	3-40
3-26	AAU-32/A Altitude Encode/Pneumatic Altimeter	3-42
3-27	AN/APN-209 Radar Altimeter (V)	3-42
3-28	Proximity Warning Panel	3-43
3-29	Radar Warning System	3-44
4-1	Mine Dispenser Control Panel — Typical	4-13
4-2	Hoist Installation — Typical	4-14
4-3	Pendant Control — Rescue Hoist	4-15
4-4	Hoist Cable Cutter Switch — Pilot — Typical	4-15
4-5	Hoist Cable Cut Switch — Hoist Operator — Typical	4-15
4-6	Control Pendant Assembly	4-16
5-1	Instrument Markings	5-4
5-2	Airspeed Operating Limits Chart	5-7

LIST OF ILLUSTRATIONS (CONT)

FIGURE	TITLE	PAGE
6-1	Helicopter Station Diagram	6-5
6-2	Fuel Loading	6-6
6-3	Personnel Loading	6-8
6-4	Hoist Loading Limitations (Lateral CG)	6-9
6-5	Hoist Loading Limitations (Longitudinal CG)	6-10
6-6	System Weight and Balance Data Sheet.	6-11
6-7	Hoist Installation Positions	6-14
6-8	Cargo Compartment	6-15
6-9	Cargo Tiedown Fitting Data	6-16
6-10	Internal Cargo Weight and Moment	6-17
6-11	External Cargo Weight and Moment	6-18
6-12	Center of Gravity Limits	6-19
7-1	Temperature Conversion Chart	7-12
7-2	Maximum Torque Available (30 Minute Operation) Chart	7-13
7-3	Hover (Power Required) Chart	7-14
7-4	Control Margin	7-16
7-5	Takeoff Chart	7-18
7-6	Cruise Chart	7-21
7-7	Drag Chart	7-48
7-8	Climb-Descent Chart	7-50
7-9	Idle Fuel Flow Chart	7-51
8-1	Danger Area	8-15
8-2	Exterior Check Diagram	8-16
9-1	Emergency Exits and Equipment	9-10
9-2	Autorotational Glide Characteristics Chart	9-11
9-3	Height Velocity Diagram	9-12

Operator's Manual for
UH-1H/V Helicopters

Placement of tables, figures, and appendixes. Full page tables, figures, and appendixes (in that order) included in this UPDATE printing are located following the chapters in which they were referenced.

User Information. The proponent agency of this manual is the US Army Aviation Systems Command (AVSCOM). Submit changes for improving this publication on DA form 2028 (Recommended changes to Publications and Blank Forms) through the aviation unit commander to US Army Aviation Systems Command, (AVSCOM), ATTN: AMSAV-MMD 4300 Goodfellow Blvd., St. Louis, MO 63120-1798.

Types of comments that should be avoided on DA Form 2028 are those that: (1) Ask a question instead of giving an answer; (2) Are based on minor differences of opinion or wording; (3) Point out obvious editorial errors, misspellings, or errors in punctuation, unless the errors change the intended meaning. (Reference AR 310-3, Chapter 1).

Distribution. Special distribution of this issue has been made in accordance with DA Form 12-31-R Requirements For Technical Manuals. The number of copies requested in Block 275 and 668 of the subscribers DA Form 12-31-R.

Resupply. Limited copies of this publication are available from the St. Louis Publications Center for emergency requirements. Users should take action to insure they are receiving the correct number by updating their DA 12-Series Forms.

Explanation of Change Symbols. Changes in text material and tables will be shown by a bar in the left margin. Correction of minor inaccuracies such as spelling, punctuations, relocation of material, etc. will not be shown unless such corrections changes the meaning of instructive information and procedures.

Chapter 1

Introduction

1-1. General These instructions are for use by the operator(s). They apply to UH-1H/V helicopter.

1-2. Warnings, Cautions, and Notes Warnings, Cautions, and Notes are used to emphasize important and critical instructions and are used for the following conditions.

WARNING

An operating procedure, practice, etc., which if not correctly followed, could result in personal injury or loss of life.

Caution

An operating procedure, practice, etc., which if not strictly observed, could result in damage to or destruction of equipment.

NOTE

An operating procedure, condition, etc., which it is essential to highlight.

1-3. Description This manual contains the best operating instructions and procedures for the UH-1H/V helicopter under most circumstances. The observance of limitations, performance and weight balance data provided is mandatory. The observance of procedure is mandatory except when modification is required because of multiple emergencies, adverse weather, terrain, etc. Your flying experience is recognized, and therefore, basic flight principles are not included. THIS MANUAL SHALL BE CARRIED IN THE HELICOPTER AT ALL TIMES.

1-4. Appendix A, References Appendix A is a listing of official publications cited within this manual applicable to and available for flight crews.

1-5. Appendix B, Abbreviations and Terms Definitions of all abbreviations and terms used throughout the manual are included in appendix B.

1-6. Index The index lists every titled paragraph contained in this manual. Chapter 7 performance data has an additional index within the chapter.

1-7. Army Aviation Safety Program Reports necessary to comply with the safety program are prescribed in AR 385-40.

1-8. Destruction of Army Material to Prevent Enemy Use For information concerning destruction of Army material to prevent enemy use, refer to TM 750-244-1-5.

1-9. Forms and Records Army aviators flight records and helicopter maintenance records which are to be used by the operators and crew members are prescribed in DA PAM 738-751 and TM 55-1500-342-23

1-10. Designator Symbols Designator Symbols **H** UH-1H and **V** UH-1V are used in conjunction with text contents, text headings and illustration titles to show limited effectivity of the material. One or more designator symbols may follow a text heading or illustration title to indicate proper effectivity, unless the material applies to all models and configurations within the manual. If the material applies to all models and configurations, no designator symbols will be used.

1-11. Use of Words Shall, Should, and May Within this technical manual, the word "shall" is used to indicate a mandatory requirement. The word "should" is used to indicate a non-mandatory but preferred method of accomplishment. The word "may" is used to indicate an acceptable method of accomplishment.

Chapter 2

Helicopter and Systems Description and Operation

Section I. HELICOPTER

2-1. General Description The UH-1H/V helicopters are thirteen-place single engine helicopters. The maximum gross weight is 9500 pounds.

2-2. General Arrangement Figure 2-1 depicts the general arrangement. Indexed items include access openings and most of the items referred to in the exterior check paragraph in section III of chapter 8.

2-3. Principal Dimensions Figure 2-2 depicts the principal dimensions.

2-4. Turning Radius Turning radius is about 35 feet when pivoted around the mast.

2-5. Fuselage The fuselage is the forward section of the airframe extending from the nose to the forward end of the tailboom. The fuselage consists primarily of two longitudinal beams with transverse bulkheads and metal covering. The main beams are the supporting structure for the cabin, landing gear, fuel tanks, transmission, engine, and tailboom. The external cargo suspension unit is attached to the main beams near the center of gravity of the helicopter.

2-6. Tailboom The tailboom section is bolted to the aft end of the fuselage and extends to the aft end of the helicopter. It is a tapered, semi-monocoque structure comprised of skins, longerons, and stringers. The tailboom supports the tail rotor, vertical fin, and synchronized elevator. It houses the tail rotor driveshaft and some electronic equipment.

2-7. Landing Gear System

a. Main Landing Gear. The main landing gear consists of two aluminum arched crosstubes mounted laterally on the fuselage with two longitudinal skid tubes attached to the crosstubes. The skid tubes are made of aluminum and have steel skid shoes attached to the bottom to minimize skid wear.

b. Tail Skid. A tubular steel tail skid is installed on the aft end of the tailboom. It acts as a warning to the pilot upon an inadvertent tail-low landing and aids in protecting the tail rotor from damage.

2-8. Crew Compartment Diagram The crew compartment is depicted in figure 2-5.

2-9. Cockpit and Cabin Doors

a. Cockpit Doors. The cockpit doors are formed aluminum frames with transparent plastic windows in the upper section (fig 2-1). Ventilation is supplied by the sliding panels in the windows. Cam-type door latches are used and doors are equipped with jet-tisonable door releases.

b. Cabin Doors. The two cabin doors are formed aluminum frames with transparent plastic windows in the upper section (fig 2-1). These doors are on rollers and slide aft to the open position allowing full access to the cargo area. Hinged doorpost panels are forward of the cabin doors. They provide a larger entrance to the cargo area. An open door lock is provided to hold the door in the aft position to prevent door separation in flight.

2-10. Pilot/Copilot Seats The pilot and copilot seats may be conventional seats or armored seats (fig 2-3). The armored seats have a release to recline the seats to aid in removal of injured personnel. The conventional seats do not have the reclining feature.

a. Pilot and Copilot Seats (Conventional). The pilot and copilot seats are vertical and fore-aft adjustable and the nonreclining type. The vertical height adjustment handle is under the right side of the seat. The fore and aft adjustment is under the left side of the seat. Webbing on the back of the seat can be removed to accept use of a back-pack parachute. The seats are equipped with lap safety belts and inertia reel shoulder harness.

b. Pilot and Copilot Seats (Armored). Armored seats can be installed in the helicopter for the pilot and copilot. They are equipped with lap safety belt and inertia-reel shoulder harness. They are adjustable fore and aft and vertically. The vertical adjustment handle is under the right side of the seat and the fore and aft handle on the left. The seats are equipped with a quick release, on each side at the back of the seat, for reclining the seat. The seat back, bottom, and sides are protected by ceramic and aluminum armor plate. Hip and shoulder areas are protected by ceramic type armor.

c. Inertia Reel Shoulder Harness. An inertia reel and shoulder harness is incorporated in the pilot and copilot seats with manual lock-unlock handle (fig 2-3). On the conventional seat, the control handles are located on the left front of the seat. On the armored seat, the control handles are located on the right front of the seat. With the control in the unlocked position (aft) and the shoulder straps properly adjusted, the reel strap will extend to allow the occupant to lean forward; however, the reel automatically locks when the helicopter encounters an impact force of 2 to 3 "G" deceleration. The reel can be locked (handle forward) from any position and will take up slack in the harness. To release the lock, it is necessary to lean back slightly to release tension on the lock and move the control handle to the unlock position. It is possible to have pressure against the seat back whereby no additional movement is possible and the lock cannot be released. If this condition occurs, it will be necessary to loosen the harness. The reel should be manually locked for emergency landing. Straps must be adjusted to fully retract within the inertia reels to prevent rebound overshoot in the event of impact. Seat belt must be securely fastened and firmly tightened prior to adjustment of shoulder harness to prevent submarining in event of impact.

2-11. Personnel Seats Various arrangements of personnel seats can be installed to accommodate from one to eleven personnel besides the pilot and copilot. The seats are constructed of tubular steel and reinforced canvas. Each seat is equipped with a

lap safety belt. These same belts, with web extensions, are provided for litter patients when helicopter is used for rescue missions. For additional information on the personnel seats, refer to chapter 6.

2-12. Instruments and Controls

a. Instrument Panel. The location of all the controls, indicators, instruments, and data placards installed on the instrument panel is depicted in figure 2-4. V Some instruments may be relocated.

b. Pedestal Panel. The panels and controls installed in the pedestal are depicted in figure 2-5.

c. Overhead Console. The location of the controls and circuit breakers installed in the overhead console is depicted in figure 2-5.

d. External Stores Jettison Handle. The external stores jettison handle is located to the left of the pilot collective when installed. Pulling up on the handle will jettison external stores through mechanical linkage.

e. Other Instruments and Controls. Instruments, controls, or indicators not shown in figure 2-5 or figure 2-6 are shown in the chapter/section which describes their related systems.

2-12.1 Wire Strike Protection System (WSPS)

The WSPS provides protection for 90% of the frontal area against impacts with horizontally strung mechanical and power transmission cables. The basic system consists of an upper cutter/deflector, a windshield protector/deflector/cutter, a lower cutter/deflector and a pair of windshield wiper deflectors (fig 2-1). The lower cutter assembly features a "Breakaway Tip" designed to shear when relatively large ground contact forces are experienced and before helicopter structural damage is incurred. However, the tip shear rivets are designed to withstand the smaller forces experienced during wire strikes and the tip will still effectively deflect wires/cables into the cutter blades.

Section II. EMERGENCY EQUIPMENT

2-13. Emergency Equipment The emergency equipment location, illustration, and emergency procedures are covered in chapter 9.

2-14. Portable Fire Extinguisher A portable hand-operated fire extinguisher is carried in a bracket located aft of the pedestal, or at the right side of the pilot seat.

2-15. First Aid Kits Four general purpose type first aid kits have been provided in the cabin area (fig 9-1). Two kits are secured to the right center doorpost. The other two kits are secured to the left doorpost. First aid kits can be easily removed for immediate use.

Section III. ENGINE AND RELATED SYSTEMS

2-16. Engine The UH-1H/V are equipped with a T53-L-13 engine.

2-17. Engine Compartment Cooling The engine compartment is cooled by natural convection through engine compartment screens.

2-18. Air Induction System Three different air induction systems are used on these helicopters. They are discussed in the following paragraphs:

a. Non-Self-Purging Particle Separator. The non-self-purging particle separator is an inertial type. A lip extending into the airstream deflects the particle-laden air into a large chamber. Large particles in the air settle in the chamber; fine particles are removed as the air is drawn through a filter assembly. Removed particles are held in porous foam box assemblies. The box assemblies can be removed and cleaned. Other components used with the particle separator are: ENG AIR FILTER CONT circuit breaker on the overhead console, an engine air differential pressure switch on the firewall, and an ENGINE INLET AIR caution light (fig 2-9) on the caution panel.

b. Self-Purging Particle Separator. Helicopters serial No. 68-15779 and subsequent are equipped with a self-purging particle separator. This is an inertial-type separator. Particle-laden air is directed through a large annular chamber and through an air cleaner. A constant supply of bleed air from the engine flows through the venturi-type ejector and carries particles overboard through airframe plumbing.

c. Foreign Object Damage Screen. Foreign Object Damage (FOD) screen prevents large particles from entering the engine inlet.

NOTE

The ice detector system is not applicable on helicopters equipped with the self-purging particle separator.

d. DE-ICE. Engine de-ice is a bleed air system activated by the DE-ICE switch on the ENGINE panel (fig 2-8). In the ON position bleed air is directed through the engine inlet to provide ice protection. Power losses caused when the system is on are shown in chapter 7. In the event of dc electrical failure or when the DE-ICE ENG circuit breaker is out, de-ice is automatically on. System power is provided by the dc essential bus and protected by the ANTI-ICE ENG circuit breaker.

e. Improved Particle Separator. Some UH-1s may be equipped with an Improved Particle Separator. This unit has a number of vortex tubes which are highly effective in removing sand and dust from the engine inlet air. The sand and dust are dumped overboard through outlets on each side of the Separator.

2-19. Engine Fuel Control System

a. Engine Mounted Components. The fuel control assembly is mounted on the engine. It consists of a metering section, a computer section and an overspeed governor.

(1) The metering section is driven at a speed proportional to N1 speed. It pumps fuel to the engine through the main metering valve or, if the main system fails, through the emergency metering valve which is positioned directly by the twist grip throttle.

(2) The computer section determines the rate of main fuel delivery by biasing main metering valve opening for N1 speed, inlet air temperature and pressure, and throttle position. It also controls the operation of the compressor air bleed and operation of the variable Inlet guide vanes.

(3) The overspeed governor is driven at a speed proportional to N2 speed. It biases the main metering valve opening to maintain a constant selected N2 rpm.

b. Starting Fuel Flow. During engine start, energizing the start fuel switch opens the fuel solenoid valve, allowing fuel from the fuel regulator to flow through the starting fuel manifold and into the combustion chamber. When N1 reaches sufficient speed, the start switch is de-energized, causing the solenoid valve to close and stop-starting fuel flow.

Starting fuel nozzles are purged by air from the combustion chamber through a check filter valve. Engine starting fuel solenoid valve is controlled by the engine starter switch on helicopters which do not have a starting fuel switch. The engine solenoid valve (engine starting fuel solenoid valve) cannot be individually controlled during engine starts.

c. *Power Controls (Throttles)*. Rotating the pilot or copilot twist grip-type throttle (fig 2-5) to the full open position allows the overspeed governor to maintain a constant rpm. Rotating the throttle toward the closed position will cause the rpm to be manually selected instead of automatically selected by the overspeed governor. Rotating the throttle to the fully closed position shuts off the fuel. An idle stop is incorporated in the throttle to prevent inadvertent throttle closure. To bypass the idle detent, press the IDLE REL switch and close the throttle. The IDLE REL switch is a momentary on, solenoid-operated switch. The IDLE REL switch is located on the pilot collective stick switch box. IDLE REL switch receives power from the 28 Vdc bus and is protected by a circuit breaker marked IDLE STOP REL. Friction can be induced in both throttles by rotating the pilot throttle friction ring counterclockwise (fig 2-5). The ring is located on the upper end of the pilot throttle.

d. *Governor Switch*. The GOV switch is located on the ENGINE control panel (fig 2-6). AUTO position permits the overspeed governor to automatically control the engine rpm with the throttle in the full open position. The EMER position permits the pilot or copilot to manually control the rpm. Because automatic acceleration, deceleration, and overspeed control are not provided with the GOV switch in the EMER position, control movements must be smooth to prevent compressor stall, overspeed, overtemperature or engine failure. The governor circuit receives power from the 28 Vdc essential bus and is protected by the GOV CONT circuit breaker.

2-20. Engine Oil Supply System

a. *Description*. The dry sump pressure type oil system is entirely automatic in its operation. The system consists of an engine oil tank with de-aeration provisions, thermostatically controlled oil cooler with by-pass valve, pressure transmitter and pressure indicator, low pressure warning switch and indicator, sight gages, and oil supply return vent, and breather lines. Drain valves have been provided for draining the oil tank and cooler. Pressure for engine lubrication and scavenging of return oil are provided by the engine-mounted and engine-driven oil pump. Oil specification and grade are specified in the Servicing Table 2-1.

b. *Oil Cooler*. Engine oil cooling is accomplished by an oil cooler. The cooler is housed within the fuselage area under the engine deck (fig 2-1). Air circulation for oil cooling is supplied by a turbine fan which operates from turbine bleed air. The fan is powered at all times when the engine is operating and no control is required except the bleed air limiting orifice.

2-21. *Ignition—Starter System* The starter-ignition switch is mounted on the underside of the pilot collective pitch control lever switch box. An additional switch may be installed on the copilot stick. The switch is a trigger switch, spring-loaded to the off position (fig. 2-5). The starter and ignition unit circuits are both connected to the trigger switches. The circuits receive power from the 28 Vdc essential bus and are protected by circuit breakers marked STARTER RELAY and IGNITION SYSTEM IGNITER SOL. The starter circuit is energized when the STARTER/GEN switch is in the START position and the trigger switch is pulled (fig 2-5). The ignition circuit is energized when the FUEL MAIN ON/OFF switch on the engine control panel is in the ON position and the trigger switch is pulled. The ignition keylock is located by the AC circuit breaker panel. The OFF position deactivates the igniters and start fuel to prevent engine starting. The ON position allows engine starting.

2-22. *Governor RPM Switch* The pilot and copilot GOV RPM INCR/DECR switches are mounted on a switch box attached to the end of the collective pitch control lever (fig 2-5). The switches are a three-position momentary type and are held in INCR (up) position to increase the power turbine (N2) speed or DECR (down) position to decrease the power turbine (N2) speed. Electrical power for the circuit is supplied from the 28 Vdc essential bus and is protected by a circuit breaker marked GOV CONT.

2-23. *Droop Compensator* A droop compensator maintains engine rpm (N2) as power demand is increased by the pilot. The compensator is a direct mechanical linkage between the collective stick and the speed selector lever on the N2 governor. No crew controls are provided or required. The compensator will hold N2 rpm to ± 40 rpm when properly rigged. Droop is defined as the speed change in engine rpm (N2) as power is increased from a no-load condition. It is an inherent characteristic designed into the governor system. Without this characteristic, instability would develop as engine output is increased resulting in N1 speed overshooting or hunting the value necessary to satisfy the new power condition. If N2 power were

allowed to droop, other than momentarily, the reduction in rotor speed could become critical.

2-24. Engine Instrument and Indicators All engine instruments and indicators are mounted in the instrument panel and the pedestal (figs 2-4 and 2-5).

a. Torquemeter Indicator. The torquemeter indicator is located in the center area of the instrument panel and is marked TORQUE PRESS (fig 2-4). The indicator is connected to a transmitter which is part of the engine oil system. The torquemeter indicates torque in pounds per square inch (psi) of torque imposed upon the engine output shaft. The torquemeter receives power from the 28 VAC bus and is protected by a circuit breaker marked TORQUE in the ac circuit breaker panel.

b. Exhaust Gas Temperature Indicator. The exhaust gas temperature indicator is located in the center area of the instrument panel and is marked EXH TEMP (fig 2-4). The indicator receives temperature indications from the thermocouple probes mounted in the engine exhaust diffuser section. The temperature indications are in degrees Celsius. The system is electrically self-generating.

c. Dual Tachometer. The dual tachometer is located in the center area of the instrument panel and indicates both the engine and main rotor rpm (fig 2-4). The tachometer inner scale is marked ROTOR and the outer scale is marked ENGINE. Synchronization of the ENGINE and ROTOR needles indicates normal operation of helicopter. The indicator receives power from the tachometer generators mounted on the engine and transmission. Connection to the helicopter electrical system is not required.

d. Gas Producer Tachometer. The gas producer indicator is located in the right center area of the instrument panel and is marked PERCENT (fig 2-4). The indicator displays the rpm of the gas producer turbine speed in percent. This system receives power from a tachometer generator which is geared to the engine compressor. A connection to the helicopter electrical system is not required.

e. Oil Temperature Indicator. The engine oil temperature indicator is located in the center area of the instrument panel and is marked OIL °C (fig 2-4). The indicator is connected to an electrical resistance-type thermocouple. The temperature of the engine oil at the engine oil inlet is indicated in degrees Celsius. Power to operate the circuit is supplied from the 28 Vdc essential bus. Circuit protection

is provided by the TEMP IND ENG & XMSN circuit breaker.

f. Oil Pressure Indicator. The engine oil pressure indicator is located in the center area of the instrument panel and is marked OIL PRESS (fig 2-4). The indicator receives pressure indications from the engine oil pressure transmitter and provides readings in pounds per square inch (psi). The circuit receives electrical power from the 28 Vac bus and circuit protection is provided by the ENG circuit breaker in the ac circuit breaker panel.

g. Oil Pressure Caution Light. The ENGINE OIL PRESS caution light is located in the pedestal mounted CAUTION panel. The light is connected to a low pressure switch. When pressure drops below approximately 25 psi, the switch closes an electrical circuit, causing the caution light to illuminate. The circuit receives power from the 28 Vdc essential bus and is protected by the circuit breaker marked CAUTION LIGHTS.

h. Engine Chip Detector Caution Light. A magnetic plug is installed in the engine. When sufficient metal particles accumulate on the magnetic plug to complete the circuit, the ENGINE CHIP DET segment illuminates. The circuit receives power from the 28 Vdc essential bus and is protected by the circuit breaker marked CAUTION LIGHTS.

i. Engine Ice Detector. The ice detector system (ENGINE ICE DET caution light) is not connected.

j. Engine Icing Caution Light. The ENGINE ICING segment of the caution panel is not connected.

k. Engine Inlet Air Filter Clogged Warning Light. On helicopters prior to Serial No. 68-16066, the ENGINE INLET FILTER CLOGGED warning light is mounted on the upper area of the instrument panel (fig 2-4). When the inlet air filter becomes clogged, a differential pressure switch senses the condition and closes contacts to energize the filter caution light. Power is supplied from the 28 Vdc bus and circuit protection is provided by the CAUTION LIGHTS circuit breaker.

l. Engine Inlet Air Caution Light. The ENGINE INLET AIR segment of the caution panel will illuminate when the inlet air filter becomes clogged. Power is supplied from the 28 Vdc bus and protection is provided by the CAUTION LIGHT circuit breaker.

m. Engine Fuel Pump Caution Light. The ENGINE FUEL PUMP caution light is located in the pedestal-mounted panel. Failure of either fuel pump element will close an electrical circuit illuminating the caution

light. The system receives power from the 28 Vdc essential bus and is protected by a circuit breaker marked CAUTION LIGHTS. One type of switch used on some aircraft will illuminate the caution light until normal operating pressure is reached. This momentary lighting does not indicate a pump element failure.

n. Emergency Fuel Control Caution Light. The emergency fuel control caution light is located in the pedestal-mounted caution panel. The illumination of the worded segment GOV EMER is a reminder to the pilot that the GOV switch is in the EMER position. Electrical power for the circuit is supplied from the

28 Vdc bus and is protected by a circuit breaker marked CAUTION LIGHTS.

o. Fuel Filter Caution Light. The FUEL FILTER caution light is located in the pedestal-mounted caution panel or a press to test light is located on the instrument panel. A differential pressure switch is mounted in the fuel line across the filter. When the filter becomes clogged, the pressure switch senses this and closes contacts to energize the caution light circuit. If clogging continues, the fuel bypass opens to allow fuel to flow around the filter. The circuit receives power from the 28 Vdc essential bus and is protected by a circuit breaker marked CAUTION LIGHTS.

Section IV. HELICOPTER FUEL SYSTEM

2-25. Fuel Supply System

a. Fuel System. The fuel system consists of five interconnected cells all filled from a single fitting on the right side of the helicopter. The two forward cells each contain a submerged boost pump. The boost pumps provide fuel pressure to prime the fuel line to the engine driven fuel pump. Each forward fuel cell is divided into two compartments by a lateral baffle fitted with a flapper valve to allow fuel flow from front to rear. The submerged boost pump is mounted on a sump assembly near the aft end of each forward cell and is connected by a hose to the pressure line outlet to the engine. Part of the pump output is diverted forward through a flow switch and hose to an ejector pump at front of cell. Induced flow of the ejector pump sends fuel through a hose over the baffle into the rear part of the cell, so that no significant quantity of fuel will be unusable in any flight attitude. The crashworthy system is designed to contain fuel during a severe, but survivable, crash impact to reduce the possibility of fire. Frangible fittings used to secure the fuel cells in the airframe are designed to fail and permit relative movement of the cells, without rupture, in event of a crash; self-sealing break-away valves are installed in the fuel lines at the fuel cell outlets and certain other locations. The break-away valves are designed to permit complete separation of components without loss of fuel. Roll-over vent valves are installed on the aft fuel cells to provide protection in the event of a helicopter roll-over during a crash. The system has .50 caliber ballistic protection in the lower two-thirds of the cell.

b. Closed Circuit Refueling System. Helicopter serial number 69-15292 and subsequent and modified helicopters provide a closed circuit refueling system

when used with the mating nozzle. This system is capable of automatic shut-off of fuel flow when full.

c. Gravity Refueling. If helicopter is equipped with closed circuit refueling system and fuel servicing vehicle is not equipped with related nozzle for closed circuit refueling, a gravity system may be used.

2-26. Controls and Indicators

a. Fuel Switches. The fuel system switches consist of a main fuel switch, start fuel switch, and fuel transfer switches (fig 2-6) The FUEL START switch is not applicable on helicopters Serial No. 66-8574 through 66-8577, 66-16034 and subsequent, and earlier models so modified.

(1) Main Fuel Switch. The FUEL MAIN ON/OFF switch is located on the pedestal-mounted ENGINE panel (fig 2-6). The switch is protected from accidental operation by a spring-loaded toggle head that must be pulled up before switch movement can be accomplished. When the switch is in the ON position, the fuel valve opens, the electric boost pump(s) are energized and fuel flows to the engine. When the switch is in the OFF position the fuel valve closes and the electric boost pump(s) are de-energized. Electrical power for circuit operation is supplied by the 28 Vdc essential bus and is protected by circuit breakers FUEL VALVES, LH BOOST PUMP and RH BOOST PUMP.

(2) Fuel Start Switch. The FUEL START ON/OFF switch is located on the ENGINE panel. In the ON position the starting fuel solenoid valve is energized when the starter-ignition switch is pulled. When the START FUEL switch is in the OFF position the igniter

solenoid valve is de-energized. Electrical power for the circuit is supplied by the 28 Vdc essential bus and is protected by circuit breaker IGNITION SYSTEM IGNITER SOL.

(3) Fuel Control. Fuel flow and mode of operation is controlled by switches on the pedestal-mounted engine control panel (fig 2-6). The panel contains the MAIN FUEL ON/OFF or FUEL ON/OFF switch, START FUEL ON/OFF switch, two INT FUEL TRANS PUMP or INT AUX FUEL switches, and GOV AUTO/EMER switch. The switchover to emergency mode is accomplished by retarding the throttle to idle or off position and positioning the GOV AUTO/EMER switch to the EMER position. In the EMER position fuel is manually metered to the engine, with no automatic control features, by rotating the throttle twist grip.

b. Fuel Quantity Indicator. The fuel quantity indicator is located in the upper center area of the instrument panel (fig 2-4). This instrument is a transistorized electrical receiver which continuously indicates the quantity of fuel in pounds. The indicator is connected to three fuel transmitters mounted in the fuel cells. Two are mounted in the right forward cell and one in the center aft cell. Indicator readings shall be multiplied by 100 to obtain fuel quantity in pounds. Electrical power for operation is supplied from the 115 Vac system and is protected by circuit breaker FUEL QTY in the ac circuit breaker panel.

c. Fuel Gage Test Switch. The FUEL GAGE TEST switch is used to test the fuel quantity indicator operation (fig 2-4). Pressing the switch will cause the indicator pointer to move from the actual reading to a lesser reading. Releasing the switch will cause the pointer to return to the actual reading. The circuit receives power from the 115 Vac system and is protected by a circuit breaker marked FUEL QTY in the ac circuit breaker panel.

d. Fuel Pressure Indicator. The fuel pressure indicator displays the psi pressure of the fuel being delivered by the boost pumps from the fuel cells to the engine (fig 2-4). The circuit receives power from the 28 Vac bus and is protected by the FUEL PRESURE circuit breaker in the ac circuit breaker panel.

e. Fuel Quantity Low Caution Light. The 20 MINUTE FUEL caution light will illuminate when there is approximately 185 pounds remaining. Electrical power is supplied from the 28 Vdc essential bus. The CAUTION LIGHTS circuit breaker protects the circuit.

f. Fuel Boost Pump Caution Lights. The LEFT FUEL BOOST and RIGHT FUEL BOOST caution lights will illuminate when the left/right fuel boost pumps fail to pump fuel. The circuits receive power from the 28 Vdc essential bus. Circuit protection is provided by the CAUTION LIGHTS, RH FUEL BOOST PUMP and LH FUEL BOOST PUMP circuit breakers. On helicopters prior to Serial No. 69-15292 a FUEL TANK SUMP PUMP circuit breaker is used instead of RH and LH BOOST PUMP circuit breakers.

2-27. Auxiliary Fuel System

Complete provisions have been made for installing an auxiliary fuel equipment kit in the helicopter cargo-passenger compartment. Two bladder type tanks can be installed on the aft bulkhead and transmission support structure. This allows the helicopter to be serviced with an additional 300 U.S. gallons of fuel (table 2-1).

a. Internal Fuel Transfer Switches. Two switches marked INT AUX FUEL LEFT/RIGHT are mounted in the ENGINE control panel (fig 2-6). Placing the switches to the forward position energizes the auxiliary fuel system. Fuel is transferred to the main fuel cells. An overfill limit switch is installed in the main fuel tank to prevent the auxiliary fuel pumps from overfilling the main fuel cells. Power is supplied by the dc essential bus and protected by the FUEL TRANS PUMP circuit breaker.

b. Auxiliary Fuel Low Caution Light. An AUX FUEL LOW caution light is provided to indicate when the auxiliary fuel tanks are empty. The light will illuminate only when the fuel transfer switches are in the forward position, and the auxiliary tanks are empty. The circuit receives power from the 28 Vdc essential bus and is protected by the CAUTION LIGHTS circuit breaker.

Section V. FLIGHT CONTROL SYSTEM

2-28. Description The flight control system is a hydraulic assisted positive mechanical type, actuated by conventional helicopter controls. Complete controls are provided for both pilot and copilot. The system includes a cyclic system, collective control system, tail rotor system, force

trim system, synchronized elevator, and a stabilizer bar.

2-29. Cyclic Control System The system is operated by the cyclic stick movement (fig 2-5). Moving the stick in any direction will produce a

corresponding movement of the helicopter which is a result of a change in the plane of rotation of the main rotor. The pilot cyclic contains the cargo release switch, radio ICS switch, armament fire control switch, hoist switch and force trim switch. Desired operating friction can be induced into the control stick by hand tightening the friction adjuster.

a. *Synchronized Elevator.* The synchronized elevator (fig 2-1) is located on the tailboom. It is connected by control tubes and mechanical linkage to the fore and aft cyclic system. Fore and aft movement of the cyclic control stick will produce a change in the synchronized elevator attitude. This improves controllability within the cg range.

b. *Stabilizer Bar.* The stabilizer bar is mounted on the main rotor hub trunnion assembly in a parallel plane, above and at 90 degrees to the main rotor blades. The gyroscopic and inertial effect of the stabilizer bar will produce a damping force in the rotor rotating control system and thus the rotor. When an angular displacement of the helicopter/mast occurs the bar tends to remain in its trim plane. The rate at which the bar rotational plane tends to return to a position perpendicular to the mast is controlled by the hydraulic dampers. By adjusting the dampers, positive dynamic stability can be achieved, and still allow the pilot complete responsive control of the helicopter.

2-30. Collective Control System The collective pitch control lever controls vertical flight (fig 2-5). When the lever is in full down position, the main rotor is at minimum pitch. When the lever is in the full up position, the main rotor is at maximum pitch. The amount of lever movement determines the angle of attack and lift developed by the main rotor, and results in ascent or descent of the helicopter.

Section VI. HYDRAULIC SYSTEM

2-33. Description The hydraulic system is used to minimize the force required by the pilot to move the cyclic, collective and pedal controls. A hydraulic pump, mounted on and driven by the transmission supplies pressure to the hydraulic servos. The hydraulic servos are connected into the mechanical linkage of the helicopter flight control system. Movement of the controls in any direction causes a valve, in the appropriate system, to open and admit hydraulic pressure which actuates the cylinder, thereby reducing the force-load required for control movement. Irreversible valves are installed on the cyclic and collective hydraulic servo cylinders to prevent main rotor feedback to the cyclic and

Desired operating friction can be induced into the control lever by handtightening the friction adjuster (fig 2-5). A grip-type throttle and a switch box assembly are located on the upper end of the collective pitch control lever. The pilot switch box contains the starter switch, governor rpm switch, engine idle stop release switch, and landing light/searchlight switches. A collective lever down lock is located on the floor below the collective lever. The copilot collective lever contains only the grip-type throttle, governor rpm switch, and starter switch when installed. The collective pitch control system has built-in breakaway (friction) force to move the stick up from the neutral (center of travel) position of eight to ten pounds with hydraulic boost ON.

2-31. Tail Rotor Control System The system is operated by pilot/copilot anti-torque pedals (fig 2-5). Pushing a pedal will change the pitch of the tail rotor blades resulting in directional control. Pedal adjusters are provided to adjust the pedal distance for individual comfort. A force trim system is connected to the directional controls.

2-32. Force Trim System Force centering devices are incorporated in the cyclic controls and directional pedal controls. These devices are installed between the cyclic stick and the hydraulic servo cylinders, and between the anti-torque pedals and the hydraulic servo cylinder. The devices furnish a force gradient or "feel" to the cyclic control stick and anti-torque pedals. A FORCE TRIM ON/OFF switch is installed on the miscellaneous control panel to turn the system on or off (fig 2-6). These forces can be reduced to zero by pressing and holding the force trim pushbutton switch on the cyclic stick grip or moving the force trim switch to off.

collective in the event of hydraulic system malfunction.

2-34. Control Switch The hydraulic control switch is located on the miscellaneous panel (fig 2-6). The switch is a two-position toggle type labeled HYD CONTROL ON/OFF. When the switch is in the ON position, pressure is supplied to the servo system. When switch is in the OFF position the solenoid valve is closed and no pressure is supplied to the system. The switch is a fail-safe type. Electrical power is required to turn the switch off.

2-35. Reservoir and Sight Glass The hydraulic reservoir is a gravity feed type and is located at the right aft edge of the cabin roof (fig 2-10). The reservoir and sight gage are visible for inspection through a plastic window in the transmission fairing.

2-36. Hydraulic Filter A line filter is installed on helicopters prior to Serial No. 68-16050. This filter has no indicator. Helicopters Serial No. 68-16050 and subsequent, or those modified by MWO have an improved filter system. When the filter is clogged it will give a visual warning by raising a red indicator button. The red button pops out when a set differential pressure across the element is exceeded. Once actuated, the indicator will remain extended until reset manually. When the indicator is

in reset position, it will be hidden from view. An inspection window may be provided to permit ready visual access to the filter indicator. The transparent window is located on forward face of the transmission bulkhead.

2-37. Hydraulic Pressure Caution Light Low hydraulic system pressure will be indicated by the illumination of HYD PRESSURE segment on the CAUTION panel. Moderate feedback forces will be noticed in the controls when moved.

2-38. Electrical Circuit Electrical power for hydraulic system control is supplied by the 28 Vdc essential bus. The circuit is protected by the HYD CONT circuit breaker.

Section VII. POWER TRAIN SYSTEM

2-39. Transmission The transmission is mounted forward of the engine and coupled to the power turbine shaft at the cool end of the engine by the main driveshaft. The transmission is basically a reduction gearbox, used to transmit engine power at a reduced rpm to the rotor system. A freewheeling unit is incorporated in the transmission to provide a quick-disconnect from the engine if a power failure occurs. This permits the main rotor and tail rotor to rotate in order to accomplish a safe autorotational landing. The tail rotor drive is on the lower aft section of the transmission. Power is transmitted to the tail rotor through a series of driveshafts and gearboxes. The rotor tachometer generator, hydraulic pump, and main dc generator are mounted on and driven by the transmission. A self-contained pressure oil system is incorporated in the transmission. The oil is cooled by an oil cooler and turbine fan. The engine and transmission oil coolers use the same fan. The oil system has a thermal bypass capability. An oil level sight glass, filler cap, and magnetic chip detector are provided. A transmission oil filter is mounted in a pocket in upper right aft corner of sump case, with inlet and outlet ports through internal passages. The filter incorporates a bypass valve for continued oil flow if screens become clogged. The transmission external oil filter is located in the cargo-sling compartment on right side wall, and is connected into the external oil line. A bypass valve is incorporated, set to open at a set differential pressure to assure oil flow if filter element should become clogged. A bypass condition will be indicated by extension of a red indicator on the filter head.

2-40. Gearboxes

a. Intermediate Gearbox—42 Degree. The 42 degree gearbox is located at the base of the vertical fin. It provides 42 degree change of direction of the tail rotor driveshaft. The gearbox has a self-contained wet sump oil system. An oil level sight glass, filler cap, vent (fig 2-10) and magnetic chip detector are provided.

b. Tail Rotor Gearbox—90 Degree. The 90 degree gearbox is located at the top of the vertical fin. It provides a 90 degree change of direction and gear reduction of the tail rotor driveshaft. The gearbox has a self-contained wet sump oil system. An oil level sight glass, vented filler cap (fig 2-10) and magnetic chip detector are provided.

2-41. Driveshafts

a. Main Driveshaft. The main driveshaft connects the engine output shaft to the transmission input drive quill.

b. Tail Rotor Driveshaft. The tail rotor driveshaft consists of six driveshaft and four hanger bearing assemblies. The assemblies and the 42 degree and 90 degree gearboxes connect the transmission tail rotor drive quill to the tail rotor.

2-42. Indicators and Caution Lights

a. Transmission Oil Pressure Indicator. The TRANS OIL pressure indicator is located in the center area of the instrument panel (fig 2-4). It displays the transmission oil pressure in psi. Electrical power for the circuit is supplied from the 28 Vac bus and is protected by the XMSN circuit breaker in the ac circuit breaker panel.

b. *Transmission Oil Pressure Low Caution Light.* The XMSN OIL PRESS segment in the CAUTION panel will illuminate when the transmission oil pressure drops below about 30 psi. The circuit receives power from the essential bus. Circuit protection is supplied by the CAUTION LIGHTS circuit breaker.

c. *Transmission Oil Temperature Indicator.* The transmission oil temperature indicator is located in the center area of the instrument panel. (Fig 2-4). The indicator displays the temperature of the transmission oil in degrees Celsius. The electrical circuit receives power from the essential bus and is protected by the TEMP IND ENG — XMSN circuit breaker in the dc breaker panel. This is a wet bulb system dependent on fluid for valid indication.

d. *Transmission Oil Hot Caution Light.* The XMSN OIL HOT segment in the CAUTION panel will illuminate when the transmission oil temperature is above 110°C (230°F). The circuit receives power from the essential bus and is protected by the CAUTION LIGHTS circuit breaker. This is a wet bulb system dependent on fluid for valid indication.

e. *Transmission and Gearbox Chip Detector.*

(1) *Chip Detector Caution Light.* Magnetic inserts are installed in the drain plugs of the transmission sump, 42 degree gearbox, and the 90 degree gearbox. When sufficient metal particles collect on the plugs to close the electrical circuit the CHIP DETECTOR segment in the CAUTION panel will illuminate. A self-closing, spring-loaded valve in the drain plug permits the magnetic plugs to be removed without the loss of oil. The circuit is powered by essential bus and protected by the CAUTION LIGHTS circuit breaker.

(2) *Chip Detector Switch.* A CHIP DET switch (fig 2-6) is installed on a pedestal mounted panel. The switch is labeled BOTH, XMSN, and TAIL ROTOR and is spring loaded to the BOTH position. When the CHIP DETECTOR segment in the CAUTION panel lights up position the switch to XMSN, then TAIL ROTOR, to determine the trouble area. CHIP DET caution light will remain on when a contaminated component is selected. The light will go out if the noncontaminated component is selected.

Section VIII. ROTORS

2-43. Main Rotor

a. *Description.* The main rotor is a two blades, semi-rigid, seesaw type. The two all metal blades are connected to a common yoke by blade grips and pitch change bearing with tension straps to carry centrifugal forces. The rotor assembly is connected to the mast with a nut. The nut has provisions for hoisting the helicopter. A stabilizer bar is mounted on the trunnion 90 degrees to the main rotor. Blade pitch change is accomplished by movements of the collective and cyclic controls. The main rotor is driven by the transmission through the mast. The mast is tilted 5 degrees forward.

a1. *Hub Spring.* As an aid in controlling rotor flapping, a hub spring kit has been installed in the rotor system for those helicopters modified by MWO 55-1520-242-50-1. Two nonlinear elastomeric springs are attached to a support affixed to the mast. The hub springs provide an additional

margin of safety in the event of an inadvertent excursion of the helicopter beyond the approved flight envelope.

b. *RPM Indicator.* The rpm indicator is part of the dual tachometer (fig 2-4). The tachometer inner scale displays the rotor rpm. The inner scale pointer is marked with an "R".

2-44. *Tail Rotor* The tail rotor is a two-bladed, semi-rigid delta-hinge type. Each blade is connected to a common yoke by a grip and pitch change bearings. The hub and blade assembly is mounted on the tail rotor shaft with a delta-hinge trunnion and a static stop to minimize rotor flapping. Blade pitch change is accomplished by movement of the anti-torque pedals which are connected to a pitch control system through the tail rotor (90 degree) gearbox. Blade pitch change serves to offset torque and provide heading control.

Section IX. UTILITY SYSTEMS

2-45. *Pitot Heater* The pitot tube is equipped with an electrical heater (fig 2-1). The PITOT HTR switch is on the overhead console panel (fig 2-5). ON position activates the heater in the tube and prevents ice from forming in the pitot tube. OFF position de-activates the heater. The electrical circuit for the system receives power from the

essential bus and is protected by the PITOT TUBE HTR circuit breaker.

2-46. *Heated Blanket Receptacles* Two or six electrical receptacles are provided to supply 28 Vdc for heated blankets. They are mounted on the inside cabin roof structure aligned with the forward edge of

the transmission support structure. The electrical circuit for the receptacles receive power from the nonessential bus. Circuit protection is provided by the HEATED BLANKET circuit breakers.

2-47. Data Case A data case for maps, flight reports, etc., has been provided and is located at the aft end of the pedestal.

2-48. Blackout Curtains Provisions have been made for installing blackout curtains behind pilot and copilot seats and between forward and aft cabin sections. Other blackout curtains may be installed over both cabin door windows and window in removable doorpost.

2-49. Blood Bottle Hangers Provisions have been made for six blood bottle hangers on the inside of the cabin roof structure within easy reach of the medical attendant station, for administration of blood to litter patients in flight.

2-50. External Cargo Rear View Mirror A mirror is installed under the right lower nose window to give the pilot clear visibility of the external cargo. This mirror may be removed and stowed in the heater compartment when provisions are installed.

Section X. HEATING AND VENTILATION

2-52. Ventilating System

a. Description. The ventilating system consists of four independently controlled exterior air scoop ventilators. Two single orifice air scoops are located on top of the cockpit section, and two double orifice air scoops are on top of cabin. The amount of air entering the cabin through the ventilators is regulated by the butterfly valve control.

b. Operation. Rotate butterfly valve control to desired position to provide outside air for flight.

2-53. Heating and Defrosting System Three different types of heating and defrosting systems may be used on these helicopters. They are the bleed air heater, combustion heater, and the auxiliary exhaust heat exchanger. Each system is described separately in the following paragraphs.

a. Bleed Air Heating and Defrosting System. There are some differences in the bleed air heating systems in use. These differences are shown in figure 2-7 with the following exception: helicopters prior to Serial No. 65-9565 have under-seat heater outlets; subsequent helicopters have aft pedestal outlets instead of the under-seat outlets. Heat is supplied to

2-51. Windshield Wiper

Caution

Do not operate the wiper on a dry or dirty windshield.

a. Two windshield wipers are provided, one for the right section of the windshield and one for the left section of the windshield.

b. The wipers are driven by electric motors with electric power supplied by the dc electrical system. Circuit protection is provided by WINDSHIELD WIPER PILOT and WINDSHIELD WIPER COPILOT circuit breakers on the dc circuit breaker panel.

c. The windshield wiper switches on the overhead console mounted MISC panel (fig 2-5) have five positions: HIGH, MED, LOW, OFF, and PARK.

d. The panel also has a selector which permits the operation of windshield wiper for pilot, copilot or both as desired.

all bleed air heaters by the compressor bleed air system. Electric power for operation of the controls is supplied from the essential bus and is protected by the CABIN HEATER CONT circuit breaker. On helicopters Serial No. 66-16868 through 70-16518, temperature is controlled by a thermostat located on the right doorpost. Helicopters Serial No. 71-20000 and subsequent are protected by two circuit breakers marked CABIN HEATER OUTLET VALVE and CABIN HEATER AIR VALVE. Refer to figure 2-7 for controls and their function.

b. Combustion Heating and Defrosting System. With the combustion heater installed, a combination of bleed air heat and combustion heat is available for heating. Bleed air may be used for defrosting and combustion heat for heating, or combustion heat may be used for defrosting only with bleed air heat off. The MAIN FUEL switch must be ON, actuating the right boost pump, before fuel is available for combustion heater operation (fig 2-6). A purge switch keeps the blowers operating after shutdown to prevent residual heat buildup. If blower air pressure drops too low, the combustion heater will stop automatically. An overheat switch also automatically turns the heater off in the event of malfunction. The

starting cycle has to be repeated to start the combustion heater. Electric power to operate the heater controls is supplied from the essential bus and is protected by the CABIN HEATER CONT circuit breaker. Refer to figure 2-7 for controls and their function.

c. *Auxiliary Exhaust Heater System.* The auxiliary exhaust heater system consists of an exhaust gas

exchanger, and a bleed air driven fan for circulating ambient air through the heat exchanger. A mixing valve controls air to maintain the desired outlet temperature. The exhaust heater system controls consist of the cabin heating panel (fig 2-7), a thermostat dial on the right doorpost and the air directing lever on the pedestal.

Section XI. ELECTRICAL POWER SUPPLY AND DISTRIBUTION SYSTEM

2-54. DC and AC Power Distribution Figure 2-8 depicts the general schematic of the dc and ac power distribution system. The dc power is supplied by the battery, main generator, standby starter-generator, or the external power receptacle. The 115 Vac power is supplied by the main or spare inverters. The 28 Vac power is supplied by a transformer which is powered by the inverter.

2-55. DC Power Supply System The dc power supply system is a single conductor system with the negative leads of the generator grounded in the helicopter fuselage structure. The main generator voltage will vary from 27 to 28.5 depending on the average ambient temperature. In the event of a generator failure the nonessential bus is automatically de-energized. The pilot may override the automatic action by positioning the NON-ESS BUS switch on the DC POWER control panel to MANUAL ON.

2-56. External Power Receptacle The external power receptacle (fig 2-1) transmits the ground power unit 28 Vdc power to the power distribution system. A 7.5 KW GPU is recommended for external starts.

2-57. Battery

WARNING

If battery overheats, do not open battery compartment. Battery fluid will cause burns. An overheated battery may cause thermal burns and may explode.

The battery supplies approximately 24 Vdc power to the power distribution system when the generators and external power receptacle are not in operation (fig 2-1).

2-58. Main and Standby Starter-Generator The 30 volt 300 ampere main generator is mounted on and driven by the transmission. A standby

starter-generator, rated at 300 amperes is mounted on the engine accessory drive section. The standby furnishes generator power in the event of main generator failure.

2-59. DC Power Indicators and Controls

a. *Main Generator Switch.* The MAIN GEN switch (fig 2-5) is on the overhead console DC POWER panel. In the ON position the main generator supplies power to the distribution system. The RESET position is spring-loaded to the OFF position. Momentarily holding the switch to RESET position will reset the main generator. The OFF position isolates the generator from the system. The circuit is protected by the GEN & BUS RESET in the dc circuit breaker panel.

b. *Battery Switch.* The BAT switch is located on the DC POWER control panel (fig 2-5). ON position permits the battery to supply power. ON position also permits the battery to be charged by the generator. The OFF position isolates the battery from the system.

c. *Starter-Generator Switch.* The STARTER GEN switch is located on the DC POWER control panel (fig 2-5). The START position permits the starter-generator to function as a starter. The STBY GEN position permits the starter-generator to function as a generator.

d. *Nonessential Bus Switch.* The NON-ESS BUS switch is located on the DC POWER control panel (fig 2-5). The NORMAL ON position permits the nonessential bus to receive dc from the main generator. The MANUAL ON position permits the nonessential bus to receive dc from the starter-generator when it has automatically been de-energized by a main generator failure.

e. *DC Voltmeter Selector Switch.* The VM switch is located on the DC POWER control panel (fig 2-5). The switch permits monitoring of voltage being deliv-

ered from any of the following: BAT, MAIN GEN, STBY GEN, ESS BUS, and NON-ESS BUS.

f. DC Voltmeter. The dc voltmeter is located in the center area of the instrument panel and is labeled VOLT DC (fig 2-4). Direct current voltage is indicated on the voltmeter as selected by the VM switch in the overhead console.

g. DC Loadmeters—Main and Standby. Two direct current loadmeters are mounted in the lower center area of the instrument panel (fig 2-4). The MAIN GEN loadmeter indicates the percentage of main generator rated capacity being used. The STBY GEN loadmeter indicates the percentage of standby generator rated capacity being used. The loadmeters will not indicate percentage when the generators are not operating.

2-60. Circuit Breaker Panel The dc circuit breaker panel is located in the overhead console (fig 2-5). In the "pushed in" position the circuit breakers provide circuit protection for dc equipment. In the "pulled out" position the circuit breakers de-energize the circuit. In the event of an overload the circuit breaker protecting that circuit will "pop out". Each breaker is labeled for the particular circuit it protects. Each applicable breaker is listed in the paragraph describing the equipment it protects.

2-61. AC Power Supply System Alternating current is supplied by two inverters (fig 2-8). They receive power from the essential bus and are controlled from the AC POWER control panel (fig 2-5).

2-62. Inverters Either the main or spare inverter (at the pilots option) will supply the necessary 115 Vac to the distribution system. The inverters also supply 115 Vac to the 28 volt ac transformer which in turn supplies 28 Vac to the necessary equipment. Circuit protection for the inverters is provided by the MAIN INVTR PWR and SPARE INVTR PWR circuit breakers.

2-63. AC Power Indicators and Controls

a. Inverter Switch. The INVTR switch is located on the AC POWER control panel in the overhead console (fig 2-5). The switch is normally in the MAIN ON position, to energize the main inverter. In the event of a main inverter failure the switch can be positioned to SPARE ON to energize the spare inverter. Electrical power to the INVTR switch is supplied from the essential bus. Circuit protection is provided by the INVTR CONT circuit breaker.

b. AC Failure Caution Light. The INST INVERTER caution light will illuminate when the inverter in use fails or when the INVTR switch is in the OFF position.

c. AC Voltmeter Selector Switch. The AC PHASE VM switch is located on the AC POWER control panel (fig 2-5). The switch is used to select any one of the three phases of the 115 Vac three-phase, current for monitoring on the ac voltmeter. The three positions on the switch are: AB, AC and BC. Each position indicates that respective phase of the 115 Vac on the ac voltmeter.

d. AC Voltmeter. The ac voltmeter is mounted on center area of the instrument panel (fig 2-4). The ac voltage output from the inverter (main or spare) is indicated on this instrument. The voltage indicated on any of the three selected positions should be 112 to 118 Vac.

2-64. AC Circuit Breaker Panel The ac circuit breaker panel is located on the right side of the pedestal panel (fig 2-5). The circuit breakers in the "pushed in" position provide circuit protection for the equipment. The breakers in the "pulled out" position de-energize the circuit. The breakers will "pop out" automatically in the event of a circuit overload. Each breaker is labeled for the particular circuit it protects. Each applicable breaker is listed in the paragraph describing the equipment it protects.

Section XII. LIGHTING

NOTE

Visible light means the light is visible to the unaided eye. NVG light means the light is visible only with the aid of the Night Vision Goggles.

a. Visible Position Light Lights.

(1) *Configurations.* Two red lights are mounted on the left side of the fuselage, one above and one below the cabin door. Two green lights are mounted on the right side of the fuselage, one above and one below the cabin door. Two white lights are mounted on top of the fuselage just inboard of the red and green lights. One white light is mounted on the bot-

2-65. Position Lights. The position lights consist of eight visible lights and five NVG lights (fig 2-1).

tom center of the fuselage, and one white light is mounted on the tailboom vertical fin. Electric power to operate the lights is supplied from the essential bus. Circuit protection is provided by the NAV LIGHTS circuit breaker in the dc circuit breaker panel. The position lights may be protected by the FUS LIGHTS circuit breakers.

(2) *Operation of Visible Position Lights.* The position lights are controlled by the POSITION switches on the EXT LTS panel on the overhead console (fig 2-5). A three-position switch permits selection of STEADY, OFF, or FLASH. Another two-position switch controls brilliance and is marked DIM and BRIGHT. When the three-position switch is in STEADY position, all eight navigation lights are illuminated. In FLASH position, on helicopters prior to Serial No. 64-13901, the colored lights illuminate alternately with the white lights. On later models only the colored lights and the aft white light flash.

b. NVG Position Lights.

(1) *Configuration.* These lights are invisible to the unaided eye. They are designed to provide observed aircraft position, attitude, and distance during covert formation NVG flight and other covert multi-aircraft NVG operations. Lights are located on the top left and right side above the jump door of each side and one each under the pilot and copilot doors. The rear NVG position light is located on a mount under the visible position light.

(2) *Operation of the NVG Position Lights.* The control panel for the lights is located in the front-most panel of the left overhead console (fig 2-5). Five intensity positions are provided on the control panel; OFF, 1, 2, 3, 4, and BRT (BRIGHT). The lights are invisible to the unaided eye and must be checked or otherwise viewed with AN/PVS-5, AN/PVS-6, or AN/PVS-7 NVG. The visible position EXT LTS must be in the off position when the NVG lights are used. The NVG lights must be in the off position when not being used with NVG. The NVG lights do not flash.

2-66. Anti-Collision Light.

a. General. The anti-collision light is located on the top aft fuselage area (fig 2-1). Electric power to operate the light is supplied from the essential bus. Circuit protection is provided by the ANTI COLL LIGHT circuit breaker.

b. Operation. The ON position of the ANTI COLL light switch illuminates the anti-collision light and

starts rotation of the light (fig 2-5). OFF position de-energizes the light.

NOTE

UH-1H and UH-1V differ in that the UH-1H has the IR band-pass filter on the searchlight, not on the landing light. The UH-1V has the IR band-pass filter on the landing light, not on the searchlight.

2-67. Landing Light.

a. UH-1H.

(1) *General.* The landing light is flush-mounted to the underside of the fuselage (fig 2-1). It may be extended or retracted to improve forward illumination. Electric power to operate the system is supplied from the essential bus. Circuit protection is provided by the LDG LIGHT PWR and LDG SEARCH LIGHT CONT circuit breakers.

(2) *Operation.* Landing light switches are on the pilot collective lever switch box (fig 2-5). The ON position of the LDG LT switch causes the landing light to illuminate; OFF turns the light off. The EXT position of the LDG LT EXT OFF RETR extend the landing light to the desired position; RETR position retracts the light. The OFF position stops the light during extension or retraction. The light automatically stops at the full extend/retract position.

b. UH-1V.

(1) *General.* The landing light on UH-1V aircraft has a filtering lens for assisting NVG flight. Other than the NVG infrared band pass filter, the UH-1V landing light is functionally the same as the UH-1H.

(2) *Operation.* The UH-1V landing light operates the same as the UH-1H landing light, except that NVG must be worn to use it.

2-68. Searchlight.

a. UH-1V.

(1) *General.* The searchlight is flush-mounted to the underside of the fuselage (fig 2-1). The light can be extended and retracted for search illumination. At any desired position in the extend or retract arc, the light may be stopped and rotated to the left or right. Electric power to operate the light is supplied from the essential bus. Circuit protection is

provided by the SEARCHLIGHT PWR and LDG & SEARCHLIGHT CONT circuit breakers.

(2) *Operation.*

a. *Searchlight Switch.* The pilot SL switch ON position illuminates the light (fig 2-5). The OFF position deactivates the light. The STOW position retracts the light into the fuselage well.

b. *Searchlight Control Switch.* The pilot SEARCH CONT switch EXT position extends the light from the fuselage well and moves it forward (fig 2-5). RETR position moves the light aft. The L and R position rotates the light left and right.

b. *UH-1H.*

(1) *General.* The searchlight differs functionally from the UH-1V searchlight only in that an infrared band pass filter is installed over the light to assist in NVG flight.

(2) *Operation.* The operation of the NVG searchlight is identical to the operation of the UH-1V searchlight, except that the NVG filter provides assistance for NVG flight.

2-69. Dome Lights.

a. *General.* The dome lights provide overhead lighting for the cabin area. The forward light is controlled by the FWD switch on the DOME LT panel when installed on the overhead console. When the DOME LT panel is not installed the FWD and AFT DOME LT are controlled by the aft switch in the roof. The aft dome lights are controlled by the switch on the AFT DOME LTS panel on the roof. Electric power to operate the dome light is supplied from the 28 Vdc essential bus. Circuit protection is provided by the DOME LIGHTS circuit breaker.

b. *Operation.* To operate the FWD dome light, position the FWD switch to WHITE for white light, NVG for green light and OFF to turn light off. The aft dome lights panel has two switches. The WHITE/OFF NVG switch functions are the same as the FWD switch. Rotation of the rheostat marked OFF/MED/BRT increases or decreases the brightness of the aft dome lights.

2-70. Cockpit Map Lights.

a. *General.* Two cockpit lights (NVG green) are provided, one above the pilot and one above the copilot (fig 2-5). Each light is controlled individually. The lights receive power from the essential

bus and are protected by the COCKPIT LIGHTS circuit breaker.

b. *Operation.* Rheostat switches are part of each light assembly. Brightness is increased by turning the rheostat clockwise or dimmed by turning counterclockwise. These lights are for NVG or unaided eye use.

2-71. *Instrument Lights.* The instrument lights control panel is located in the overhead console (fig 2-5). The panel contains six switch/rheostats for activating and controlling the brightness of the various instrument lights. Each switch/rheostat functions the same. OFF position de-energizes the circuit, clockwise rotation increases brightness of the lights and counterclockwise rotation decreases brightness. The lights of all instruments receive electric power from the 28 Vdc essential bus, except the pilot attitude indicator, the pilot RMI, and the turn and bank indicators which receives 5 Vdc from the essential bus through resistor R24, which drops the voltage to 5 Vdc. On UH-1V aircraft, the pilot attitude indicator, the pilot RMI, and the turn and bank indicators receive the 5 Vdc from the pilot solid state device for providing 5 Vdc from the 28 Vdc essential bus. All other UH-1V instruments are illuminated by 28 Vdc from the 28 Vdc essential bus. On UH-1H aircraft the instrument lighting is protected by CONSOLE PEDLIGHTS, INST PANEL LIGHTS, and INST SEC LIGHTS circuit breakers. On UH-1V aircraft the instrument lights are protected by the same circuit breakers as the UH-1H aircraft, except the PILOT 5 VOLT LIGHTS circuit breaker is included in the protection. On UH-1V aircraft the "HI" and "LO" indicators and the digital readout illumination levels on the radar altimeter are jointly controlled by the independent altimeter rheostat.

a. *Pilot Instrument Lights.* The pilot instrument lights furnish illumination for the following instruments; gas producer tachometer, torque meter, exhaust temperature indicator, dual tachometer, airspeed indicator, clock, vertical velocity indicator, turn and slip indicator, altimeter, attitude indicator, radio magnetic indicator, DME indicator, standby compass, pilot collective switch box and radar altimeter (if installed). These lights are all on one circuit and are controlled by the switch/rheostat marked PILOT on the INST LTG control panel. Circuit protection is provided by the INST PANEL LIGHTS and PILOT 5 VOLT LIGHTS (UH-1V) circuit breakers.

b. On UH-1V aircraft when the radar altimeter, AN/APN-209 is installed, turning the rheostat to OFF provides full illumination to the digital readout and HI-LO warning lights on the pilot and copilot height indicators. This feature enables the pilot and copilot to read the displays during daytime operations.

c. *Copilot Instrument Lights.* The copilot instrument lights furnish illumination for the instruments on the copilot section of the instrument panel. These instruments consist of an airspeed indicator, attitude indicator, radar altimeter (if installed on UH-1V), altimeter, vertical velocity indicator and radio magnetic indicator. The copilot instrument lights are all on one circuit, and are controlled by the switch/rheostat marked COPILOT on the INST LTG control panel. Circuit protection is provided by INST PANEL LIGHTS circuit breaker. Circuit protection is provided by INST PANEL LIGHTS and COPILOTS 5 VOLT LIGHTS circuit breaker.

d. *Engine Instrument Lights.* The engine instrument lights furnish illumination for the following instruments: transmission oil temperature, fuel quantity, transmission oil pressure, engine oil pressure, loadmeters, ac voltmeter, fuel pressure indicator, engine oil temperature gage, and dc voltmeter. Each instrument is individually illuminated and control is accomplished by the switch/rheostat marked ENGINE on the INST LTG control panel. Circuit protection is provided by the INST PANEL LIGHTS circuit breaker.

e. *Secondary Instrument Lights.*

(1) The four secondary instrument lights are spaced across the top of the instrument panel shield (fig 2-4). These lights furnish secondary illumination for the instrument panel face. The lights are activated and controlled by the switch/rheostat marked SEC on the INST LTG control panel. Circuit protection is provided by the INST SEC LIGHTS circuit breaker.

(2) *Pedestal Utility Light.* The pedestal utility light is provided for general use but also provides illumination for radio which are not illuminated. The light is operated by an OFF and ON switch on the panel on which it is mounted. The intensity of the light is controllable from full bright to dim or OFF, by the same control. The light is protected by the COCKPIT LTS circuit breaker in the overhead panel.

f. *Emergency Lighting.* Master Caution Fire Warning and Low RPM Indicators. The Master Caution, Fire, and Low RPM Warning Indicators are equipped with flip filters for use during NVG operations. The

indicators must be uncovered for unaided operations during daylight and night.

2-72. **Overhead Console Panel Lights** The overhead console panel lights furnish illumination for all overhead panels (fig 2-5). Each panel is individually illuminated and control is accomplished by the switch/rheostat, marked CONSOLE on the INST LTG control panel. Circuit protection is provided by the CONSOLE PED LIGHTS circuit breaker.

NOTE

All "press-to-test" and cateye indicators are dimming type NVG green. Differentiation as to which indicator is illuminated must be determined by location since color coding is not used. In addition, the operator must return all indicators to the full bright position to assure visibility. On applicable indicators, dimming may be accomplished during pre-flight check to meet the operator's needs.

2-73. **Pedestal Lights** The pedestal lights provide illumination for the control panels on the pedestal (fig 2-5). Most panels are individually illuminated and intensity control is accomplished by the switch/rheostat marked PED on the INST LTG control panel overhead. On some panels, the internal lighting has been discontinued. These panels are illuminated by the goosenecked utility light mounted to the rear of the pedestal. The illumination can be placed on any area of the pedestal by adjusting the gooseneck position. The intensity and ON-OFF function is controlled by the switch/rheostat mounted on the panel with the utility light. Circuit protection for the pedestal lighting is provided by the CONSOLE PED LIGHTS circuit breaker.

2-74. **Transmission Oil Level Light** A transmission oil level light is installed to provide illumination to check the transmission oil sight gage. The circuit is activated by a button-type switch marked XMSN OIL LEVEL LT SWITCH and is located on the right side of the transmission forward bulkhead. Electric power for the transmission oil level light circuit is supplied by the battery. Circuit protection is provided by the battery voltmeter circuit breaker located in the oil cooler compartment or forward radio compartment.

2-75. **Spare Lamp Kit** The spare lamp kit is located on the left side of the overhead console. The kit contains spare light bulb for the segment panel lights, the instrument lights, pedestal and overhead

console lights, master caution and segment caution lights, all press to test lights, the rpm and fire warning lights, and the dome lights. All bulbs except

the dome light bulbs may be replaced without the use of tools.

Section XIII. FLIGHT INSTRUMENTS

2-76. Airspeed Indicators The pilot and copilot airspeed indicators display the helicopter indicated airspeed (IAS) in knots (fig 2-4). The IAS is obtained by measuring the difference between impact air pressure from the pitot tube and the static air pressure from the static ports (fig 2-1).

NOTE

Indicated airspeeds are unreliable below 20 knots due to rotor downwash.

2-77. Turn and Slip Indicator The turn and slip indicator displays the helicopter slip condition, direction of turn and rate of turn (fig 2-4). The ball displays the slip condition. The pointer displays the direction and rate of the turn. The circuit receives power from the essential bus and is protected by the TURN & SLIP IND circuit breaker.

2-78. Vertical Velocity Indicator The vertical velocity indicator displays the helicopter ascent and descent speed in feet per minute (fig 2-4). The indicator is actuated by the rate of atmospheric pressure change.

2-79. Pressure Altimeter The pressure altimeter (ALT) furnishes direct readings of height above sea level and is actuated by the pitot static system (fig 2-4). Two altimeters are provided, one for the pilot and one for the copilot. (Refer to chapter 3 for operation.)

2-80. Attitude Indicators

a. Pilot Attitude Indicator. The pilot attitude indicator is located on the pilot section of the instrument panel (fig 2-4). The indicator displays the pitch and roll attitude of the helicopter. An OFF warning flag in the indicator is exposed when electrical power to the system is removed. However, the OFF flag will not indicate internal system failure. The attitude indicator has an electrical trim in the roll axis in addition to the standard pitch trim. The attitude indicator is operated by 115 Vac power, supplied by the inverter. Circuit protection is provided by the PILOT ATTD circuit breakers in the ac circuit breaker panel.

Caution

The copilot attitude indicator shall be caged only in a straight and level attitude. The caging knob shall never be pulled violently.

b. Copilot Attitude Indicator. The copilot attitude indicator is located in the copilot section of the instrument panel (fig 2-4). It is operated by 115 Vac power supplied by the inverter. Circuit protection is provided by the COPILOT ATTD circuit breakers in the ac circuit breaker panel. In a climb or dive exceeding 27 degrees of pitch the horizontal bar will stop at the top or bottom of the case and the sphere then becomes the reference. The copilot attitude indicator may be caged manually by pulling the PULL TO CAGE knob smoothly away from the face of the instrument to the limit of its travel and then releasing quickly.

2-81. Free-Air Temperature Indicator (FAT) The free-air temperature indicator is located at the top center area of the windshield (fig 2-5). The indicator displays the free air temperature in degrees Celsius.

2-82. Standby Compass The standby (magnetic) compass is mounted in a bracket at the center right edge of the instrument panel (fig 2-4). A deviation in magnetic compass indications will occur when the landing light, searchlights or pitot heat are turned on.

2-83. Fire Detector Warning System A FIRE WARNING light is located in the upper right section of the instrument panel (fig 2-4). The press to test (FIRE DETECTOR TEST) test switch is located to the left of the fire warning light. Excessive heat in the engine compartment causes the FIRE light to illuminate. Pressing the press-to-test switch also causes the light to illuminate for testing. Electric power for the circuit is supplied from the 28 Vdc essential bus and is protected by the FIRE DET circuit breaker.

2-84. Master Caution System

NOTE

Aircraft are equipped with NVG compatibility devices, flip-filters for the "Master Caution," "Low RPM," and "Fire Warning" indicators. These filters must be flipped over away from the indicators during visual flight conditions. A slide drawer filter is also provided for the caution panel. This filter must be stowed in the pedestal stowing position during visual flight conditions. To stow, lift the front end of the filter to the vertical position and allow the filter to gently slide into the vertical cavity in the pedestal above the caution panel.

a. NVG Flight Conditions.

(1) Follow all procedures used for visual flight conditions, except the "Master Caution," "Low RPM," and "Fire Warning" flip-filters and "Caution Panel" slide drawer filter must be placed over the indicators.

(2) Flip instrument panel indicator filters over indicators and press lightly in place to avoid light leakage around edges.

(3) Gently pull the slide drawer filter up from stowed position until it is at the top vertical position and place it over the caution panel.

b. *Master Caution Indicator.* The master caution indicator light on the instrument panel will illuminate when fault conditions occur (fig 2-4). This illumination alerts the pilot and copilot to check the caution panel for the specific fault condition.

c. *Caution Panel.* The CAUTION panel is located on the pilot side of the pedestal (fig 2-9). Worded segments illuminate to identify specific fault conditions. The worded segments are readable only when the light illuminates. When a light illuminates, indicating a fault condition, it will remain illuminated until the fault condition is corrected. Refer to figure 2-9 for explanation of the fault conditions.

(1) *Bright-Dim Switch.* The BRIGHT-DIM switch on the CAUTION panel permits the pilot to manually select a bright or dimmed condition for all the individual worded segments and the master caution indicator. The dimming switch position will work only when the pilot instrument lights are on. The master caution system lights will be in bright illumination after

each initial application of electrical power; when the pilot instrument lights are turned OFF, or a loss of power from the dc essential bus occurs.

(2) *Reset-Test Switch.* The RESET-TEST switch on the CAUTION panel enables the pilot to manually reset and test the master caution system. Momentarily placing the switch in the RESET position, extinguishes and resets the master caution indicator light so it will again illuminate should another fault condition occur. Momentarily placing the switch in TEST position will cause the illumination of all the individually worded segments and the master caution indicator. Only the lamp circuitry is tested; the condition circuitry is not. Testing of the system will not change any particular combination of fault indications which might exist prior to testing. The worded segments will remain illuminated as long as fault condition or conditions exist, unless the segment is rotated.

d. *Electrical Power.* Electric power for the master caution system is supplied from the essential bus. Circuit protection is provided by the CAUTION LIGHTS circuit breakers.

2-85. RPM High-Low Limit Warning System The rpm high-low limit warning system provides the pilot with an immediate warning of high and low rotor or engine rpm. Main components of the system are a detector unit, warning light and audio signal circuit, low RPM AUDIO/OFF switch, and electrical wiring and connectors. The warning light and audio warning signal systems are activated when any one of the following rpm conditions exist:

a. Warning light only:

(1) For rotor rpm of 329-339 (High Warning).

(2) For rotor rpm of 300-310 (Low Warning).

(3) For engine rpm of 6100-6300 (Low Warning).

(4) Loss of signal (circuit failure) from either rotor tachometer generator or power turbine tachometer generator.

b. Warning light and audio warning signal combination:

(1) For rotor rpm of 300-310 and engine rpm of 6100-6300 (Low Warning).

(2) Loss of signal (circuit failure) from both rotor tachometer generator and power turbine tachometer generator.

NOTE

It is possible to have an unmodified warning system in the aircraft. On unmodified warning systems, an audio signal will be heard if either rotor or engine RPM drops below low limits.

c. *Rotor Tachometer Generator and Power Turbine Tachometer Generator.* The rotor tachometer generator and power turbine tachometer generator both send signals to the high-low rpm warning light and audio warning circuits. When the warning light only is energized, determine the cause of indication by checking the torquemeter and cross referencing other engine instruments. A normal indication signifies that the engine is functioning properly, and that there is a tachometer generator failure or an open circuit to the warning system rather than an actual

engine failure. Electrical power for system operation is supplied by the 28 vdc essential bus.

d. *Light—High Low Limit RPM Warning.* The high low warning light (fig 2-4) is located on the instrument panel. This light illuminates to provide a visual warning of low rotor rpm, low engine rpm, or high rotor rpm.

e. *Switch—Low RPM Audio/Off.* The LOW RPM AUDIO/OFF switch is on the engine control panel (fig 2-6). When in OFF position, the switch prevents the audio warning signal from functioning during engine starting. Current production helicopters use a spring-loaded switch. When the switch has been manually turned off for engine starting, it will automatically return to the AUDIO position when normal operating range is reached.

Section XIV. SERVICING PARKING AND MOORING

2-86. Servicing

a. *Servicing Diagram.* Refer to figure 2-10.

b. *Approved Military Fuels, Oils and Fluids.* Refer to table 2-1.

c. *Fuel Sample.* Settling time for AVGAS is 15 minutes per foot of tank depth and one hour per foot depth for Jet (JP) fuels. Allow the fuel to settle for the prescribed period before any fuel samples are taken. Tank depth is about 29 inches.

2-87. Fuel System Servicing

WARNING

Servicing personnel shall comply with all safety precautions and procedures specified in FM 10-68, Aircraft Refueling Field Manual.

a. Refer to table 2-1 for fuel tank capacities.

b. Refer to table 2-1 for approved fuel.

c. The helicopter is serviced as follows:

(1) Refer to figure 2-10 for fuel filler location.

(2) Assure that fire guard is in position with fire extinguisher.

(3) Ground servicing unit to ground stake.

(4) Ground servicing unit to helicopter.

(5) Ground fuel nozzle to ground receptacle located adjacent to fuel receptacle on helicopter.

Caution

Ensure that servicing unit pressure is not above 125 psi while refueling.

(6) Closed circuit.

(a) Remove fuel filler cap, and assure that refueling module is in locked position. Refer to figure 2-10.

(b) Remove nozzle cap and insert nozzle into fuel receptacle and lock into position.

(c) Activate flow control handle to ON or FLOW position. Fuel flow will automatically shut off when fuel cell is full. Just prior to normal shut off, fuel flow may cycle several times as maximum fuel level is reached.

(d) Assure that flow control handle is in OFF or NO FLOW position and remove nozzle.

(7) Gravity or open port:

(a) Remove fuel filler cap.

(b) Using latch tool, attached to filler cap cable, open refueling module.

(c) Remove nozzle cap and insert nozzle into fuel receptacle.

- (d) Fill to specified level.
- (e) Remove nozzle.
- (f) Close refueling module by pulling cable until latch is in locked position. Refer to figure 2-10.
- (8) Replace fuel nozzle cap.
- (9) Replace fuel filler cap.
- (10) Disconnect fuel nozzle ground.
- (11) Disconnect ground from helicopter to servicing unit.
- (12) Disconnect servicing unit ground from ground stake.
- (13) Return fire extinguisher to designated location.
- d. Rapid (Hot) Refueling.
- (1) Before rapid refueling.
- (a) Throttle—Idle.
- (b) FORCE TRIM—ON or controls frictioned.
- (c) Refuel as described in paragraph c above.

WARNING

In case of helicopter fire, observe fire emergency procedures in chapter 9.

(2) During rapid refueling. A crewmember should observe the refueling operation (performed by authorized refueling personnel) and stand fire guard as required. One crewmember shall remain in the helicopter to monitor controls. Only emergency radio transmission should be made during RAPID refueling.

(3) After rapid refueling, the pilot shall be advised by the refueling crew that fuel cap is secure and grounding cables have been removed.

2-88. Approved Commercial Fuel, Oils, and Fluids

- a. Fuels. Refer to table 2-1.
- b. Oils. Refer to table 2-1.
- c. Fluids. Refer to table 2-1.

2-89. Use of Fuels

a. There are no special limitations on the use of Army standard or alternate fuels but certain limitations are imposed when emergency fuels are used. A fuel mixture which contains over 10 percent leaded gasoline shall be recorded as all leaded gasoline. The use of emergency fuels shall be recorded in the FAULT/REMARKS column of DA Form 2408-13, Aircraft Maintenance and Inspection Record noting the type of fuel, additives, and duration of operation.

b. When mixing of fuel in helicopter tanks or changing from one type of authorized fuel to another, for example JP-4 to JP-5, it is not necessary to drain the helicopter fuel system before adding the new fuel.

Table 2-1
Servicing Table of Approved Fuels, Oils, and Fluids

System	Specification
Fuel.....	MIL-T-5624 (JP-4) ¹
Crashworthy System—	
Total: 208.5 U.S. gallons (789.2 liters).	
Usable: 206.5 U.S. gallons (781.6 liters)...	
Internal Auxiliary Tanks—	
Usable: 300 U.S. gallons (1135.5 liters)...	
Oil:	
Engine.....	MIL-L-23699 ² *
	*MIL-L-7808 ² *
Transmission.....	MIL-L-23699 ² *
	*MIL-L-7808 ² *
42° Gearbox.....	MIL-L-23699 ² *
	*MIL-L-7808 ² *
90° Gearbox.....	MIL-L-23699 ² *
	*MIL-L-7808 ² *
Hydraulic System.....	MIL-H-5608 ² *
	MIL-H-83282 ² *
Main Rotor Grip.....	MIL-L-46152 ² *
	MIL-L-23699 ² *
	*MIL-L-7808 ² *
	MIL-L-2104 ² *
	MIL-L-46167 ² *
Pillow Block Oil.....	MIL-L-23699 ² *
	*MIL-L-7808 ² *
	MIL-L-2104 ² *
	MIL-L-46152 ² *
	MIL-L-46167 ² *

FOOTNOTES

¹ Army Standard fuel is MIL-T-5624 (JP-4) NATO code is F-40 Alternate fuels are MIL-T-5624 (JP-5) (NATO F-44) and MIL-T-83133 (JP-8) (NATO F-34). Emergency fuel is MIL-G-5572 (any AV gas) (NATO F-12, F-18, F-22). Refer to TM 55-9150-200-24.

The helicopter shall not be flown when emergency fuel has been used for a total cumulative time of 50 hours. (25 hours when TCP is used in fuel.)

CAUTION

* Lubrication oil made to MIL-L-7868 by Shell Oil Company under their part number 287, identification number 7D-1 shall not be used in the engine or aircraft systems. It contains additives which are harmful to seals in the systems.

* MIL-L-7800 NATO code is 6-148. For use in ambient temperatures below minus 32°C/25°F. May be used when MIL-L-23699 oil is not available. Not for use in main rotor hub P/N 224-012-101-31.

CAUTION

Under no circumstances shall MIL-L-23699 oil be used in ambient temperatures below minus 32°C/25°F.

* MIL-L-23699 NATO code is 6-156. For use in ambient temperatures above minus 32°C/25°F. Not for use in main rotor hub P/N 224-012-101-31.

* Do not mix MIL-L-2104, MIL-L-46152, MIL-L-46167, MIL-L-23699, and/or MIL-L-7800 oils, except during an emergency. If the oils are mixed the system should be flushed within six hours and filled with the proper oil. An entry on DA Form 2428-13 is required when the oils are mixed.

* MIL-H-5600 NATO code is H-515. For use in ambient temperatures below minus 35°C/30°F. (Refer to TS 55-1500-344-25.)

* For use in ambient temperatures above minus 35°C/30°F.

CAUTION

Prolonged contact with hydraulic fluid or its mist can irritate eyes and skin. After any prolonged contact with skin, immediately wash contacted area with soap and water. If fluid contacts eyes, flush immediately with clear water. If fluid is swallowed, do not induce vomiting; get immediate medical attention. When fluid is decomposed by heating, toxic gases are released.

* It is not advisable to mix MIL-H-5600 and MIL-53263 fluids, except during an emergency. An entry on DA Form 2428-13 is required when the fluids are mixed. When changing from MIL-H-5600 to MIL-H-53263, not more than two percent of MIL-H-5600 may be present in the system.

* Refer to stencil on grip assembly to determine proper lubrication requirements.

* MIL-L-2104, MIL-L-46152, and MIL-L-46167, must be used in hub P/N 224-012-101-31 as follows:

Average Temp Range	Specifications
+5°C and above	MIL-L-2104, Grade 45, NATO Code 0-230
-15°C to +5°C	MIL-L-2104, Grade 30, NATO Code 0-250 or MIL-L-46152, Grade 30
-25°C to -15°C	MIL-L-2104, Grade 10, NATO Code 0-250 or MIL-L-46152, Grade 10W20
-54°C to -25°C	MIL-L-46167, DEXRON II Automatic transmission fluid.

Approved domestic commercial fuels (spec. ASTM D-1555-70; Manufacturer's designation—

Jet B-JP4 Type	Jet A—JP5 Type	Jet A-1—JP5 Type
American JP-4 Aerojet B	American Type A Aerojet A	Aerojet A-1 Hottel A B.P.A.T.G.

Cater Jet B

Conoco JP-4
Gulf Jet B
EXXON Turbo Fuel B
Mobil Jet B
Philjet JP-4
Aeroshell JP-4

Chemon B
Texaco Avjet B
Union JP-4

CITSO A

Conoco Jet-B3
Gulf Jet A
EXXON A

Mobil Jet A
Prager A-50
Aeroshell 510
Superjet A
Jet A Kerosene
Chemon A-50
Avjet A
78 Turbine Fuel

Cater Jet A-1

Conoco Jet-B3
Gulf Jet A-1
EXXON A-1

Mobil Jet A-1
Aeroshell 553
Superjet A-1
Jet A-1 Kerosene
Chemon A-1
Avjet A-1

Approved foreign commercial fuels:

Country	P-60	P-66
Belgium	SA-PP-20	
Canada	SGP-22P	3-EP-24e
Denmark	JP-4 MIL-T-5524	
France	AF 3407A	
Germany (West)	YTL-9130-000	UTL 9130-007/UTL 9130-010
Greece	JP-4 MIL-T-5524	
Italy	AA-M-C-1421	AMG-143
Netherlands	JP-4 MIL-T-5524	D. Eng Rd 2455
Norway	JP-4 MIL-T-5524	
Portugal	JP-4 MIL-T-5524	
Turkey	JP-4 MIL-T-5524	
United Kingdom (Britain)	D. Eng Rd 2454	E. Eng Rd 2456

NOTE: Anti-icing and Microbial Additive for Commercial Turbine Engine Fuel—The fuel system icing inhibitor must conform to MIL-I-27686. The additive provides anti-icing protection and also functions as a biocide to kill microbial growth in helicopter fuel systems. Icing inhibitor conforming to MIL-I-27686 shall be added to commercial fuel, not containing an icing inhibitor, during refueling operations, regardless of ambient temperatures. Refueling operations shall be accomplished in accordance with accepted commercial procedures. Commercial product "PPST" conforms to MIL-I-27686.

Approved domestic commercial oils for MIL-L-7800: Manufacturer's designation—
PQ Turbine Oil 8395
ESSO/ENCO Turbo Oil 2399
RM-184A/RM-201A/J1

CAUTION

Do not use Shell Oil Co., part No. 327, qualification No. 7D-1 oil (MIL-L-7868). It can be harmful to seals made of silicone.

Approved domestic commercial oils for MIL-L-23699: Manufacturer's designation—
PQ Turbine Lubricant 5247/ 8423/8703/7731/8878/9595
Brayco 888/889-G/889-G
Castrol 255
Jet Engine Oil 5
STD-2189/STD-2189A/STD-6530
HATCOL 3211/3511
Turbo Oil 2382 (WS-660)/2385 (WS-648)/2390/2395
Mobil Jet B RM-136A/Mobil Jet B RM-157A/Amex E Turbo 265
Noyco 559 (C-015)/8925C/Glauffer Jet II
Aeroshell Turbine Oil 503
Aeroshell Turbine Oil 553

Chevron Jet Engine Oil 5
Stauffer 6924/Jet II
SATO 7377/7730, TL-8090

Approved domestic commercial fluids for MIL-H-83282:

Manufacturers designation—

“PO” 4226
Brayco 757B
Brayco 756C
Brayco 7561D
Hyspin A
Univis J41
Aero HFB
Petrofluid 5806B
Petrofluid 4807

Royco 756C/D

Royco 782

XSL 7828

PED 3565

PED 3337

TL-5874

Aero Hydroll 500

YT-283

FP-221

Approved domestic commercial fluids for MIL-H-83282:


Brayco Micronic 882

Hanover R-2

HF 832


XRM 230A

XRM 231A

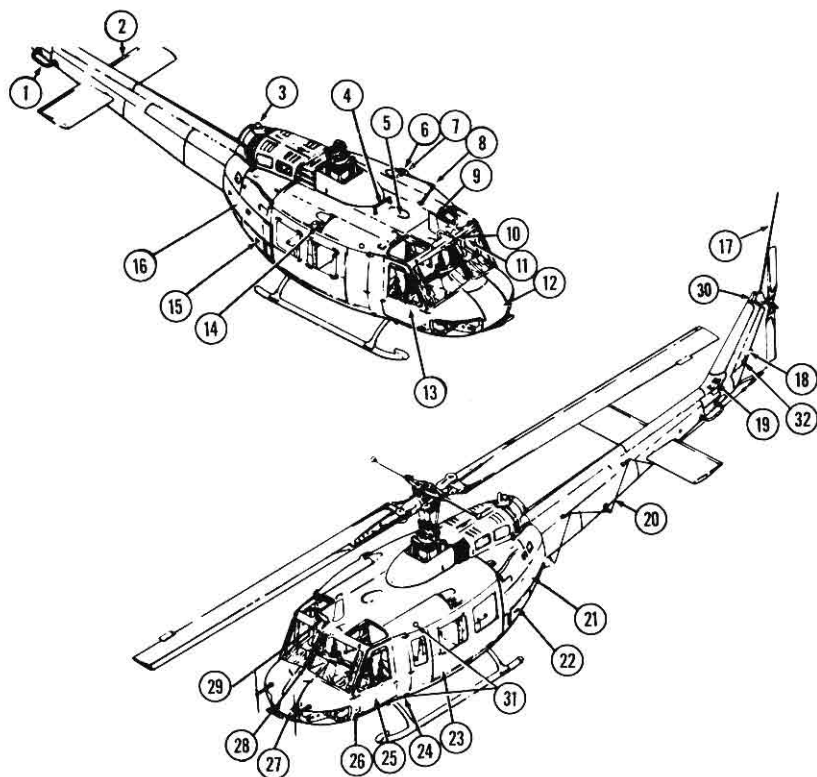


- | | |
|--|--|
| 1. VHF navigation (Omni) antenna | 17. FM communications antenna No.1 |
| 2. Synchronized elevator | 18. Aft position light (White) |
| 3. Anti-collision light | 19. 42 degree gearbox |
| 4. FM homing antenna No.1 | 20. HF long wire antenna |
| 5. Loop (ADF) antenna | 21. Electrical compartment access door |
| 6. Position light (White) | 22. Aft radio compartment access doors |
| 7. Position light (Red) | 23. Cabin door |
| 8. FM communications antenna No.2 | 24. Position light (Red) |
| 9. VHF/UHF antenna | 25. Copilot door |
| 10. Pitot tube | 26. Static port |
| 11. WSPS Windshield Wiper Deflector | 27. Pitot tube. |
| 12. Radio compartment and fwd battery location access door | 28. WSPS Windshield Deflector |
| 13. Pilot door | 29. WSPS Upper Cutter |
| 14. Position lights (Green upper and lower) | 30. 90 degree gearbox |
| 15. Heater compartment access door | 31. Position light (NVG) |
| 16. Oil cooler fan access door | 32. Aft position light (NVG) |

Figure 2-1. General Arrangement Diagram—Typical (Sheet 1 of 2)

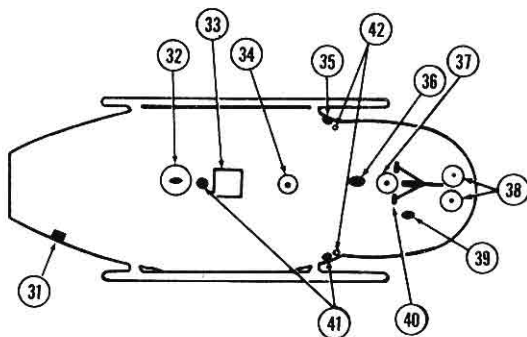


- 31. External power receptacle
- 32. Cargo suspension hook
- 33. Sense antenna
- 34. Landing light (V NVG)
- 35. Position light
- 36. Marker beacon antenna
- 37. Searchlight (NVG)
- 38. Radar altimeter antenna (V)
- 39. IFF Antenna
- 40. WSPS Lower Cutter
- 41. Position light
- 42. Position light (NVG)

Figure 2-1. General Arrangement Diagram—Typical (Sheet 2 of 2)

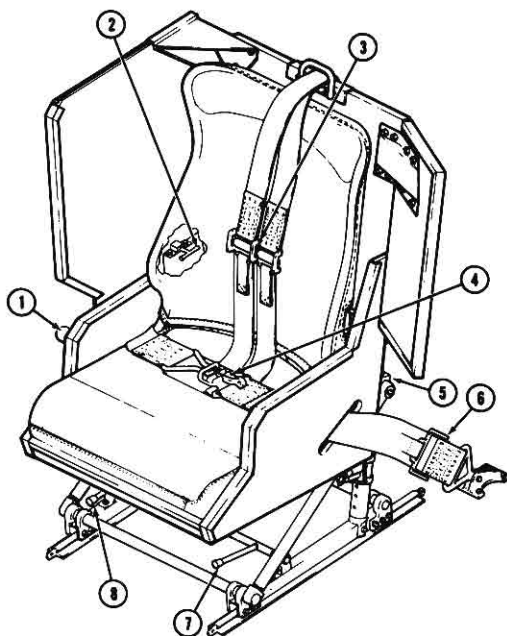

1. Shoulder harness lock — unlock control
2. Armor plate adjustment lock
3. Shoulder harness adjuster
4. Seat belt latch
5. Quick release
6. Seat belt adjuster
7. Seat adjustment fore and aft
8. Seat adjustment vertical

Figure 2-3. Pilot/Copilot Seat—Typical

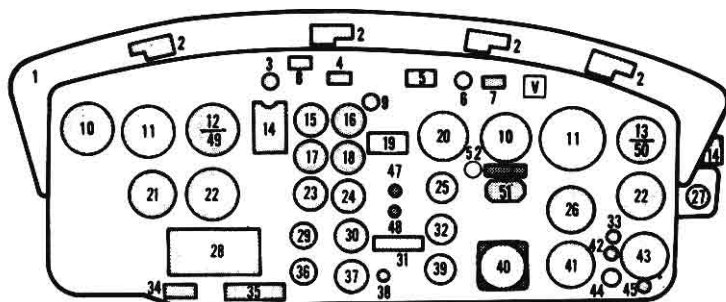

- | | |
|--|---|
| 1. Glareshield | 26. Radio Compass Indicator |
| 2. Secondary Lights | 27. Magnetic Compass |
| 3. Engine INlet Filter Clogged Warning Light | 28. Operating Limits Decal |
| 4. Master Caution | 29. Main Generator Loadmeter |
| 5. RPM Warning Light | 30. DC Voltmeter |
| 6. Fire Detector Test Switch | 31. Engine Caution Decal |
| 7. Fire Warning Indicator Light | 32. Gas Producer Tachometer Indicator |
| 8. Radio Call Designator | 33. Marker Beacon Light |
| 9. Fuel Gauge Test Switch | 34. Engine Installation Decal |
| 10. Airspeed Indicator | 35. Transmitter Selector Decal |
| 11. Attitude Indicator | 36. Standby Generator Loadmeter |
| 12. Altimeter Indicator (AAU-32/A) | 37. AC Voltmeter |
| 13. Altimeter Indicator (AAU-31/A) | 38. Compass Slaving Switch |
| 14. Compass Correction Card Holder | 39. Exhaust Gas Temperature Indicator |
| 15. Fuel Pressure Indicator | 40. Turn and Slip Indicator |
| 16. Fuel Quantity Indicator | 41. Omni Indicator |
| 17. Engine Oil Pressure Indicator | 42. Marker Beacon Sensing Switch |
| 18. Engine Oil Temperature Indicator | 43. Clock |
| 19. Cargo Caution Decal | 44. Marker Beacon Volume Control |
| 20. Dual Tachometer | 45. Cargo Release Armed Light |
| 21. Radio Compass Indicator | 47. IFF Code Hold Light |
| 22. Vertical Velocity Indicator | 48. IFF Code Hold Switch |
| 23. Transmission Oil Pressure Indicator | 49. ☐ Height Indicator Remote |
| 24. Transmission Oil Temperature Indicator | 50. ☐ Receiver - Transmitter, Height Indicator |
| 25. Torquemeter Indicator | 51. ☐ DME Indicator |
| | 52. ☐ DME Hold Light |

Figure 2-4. Instrument Panel (Typical)

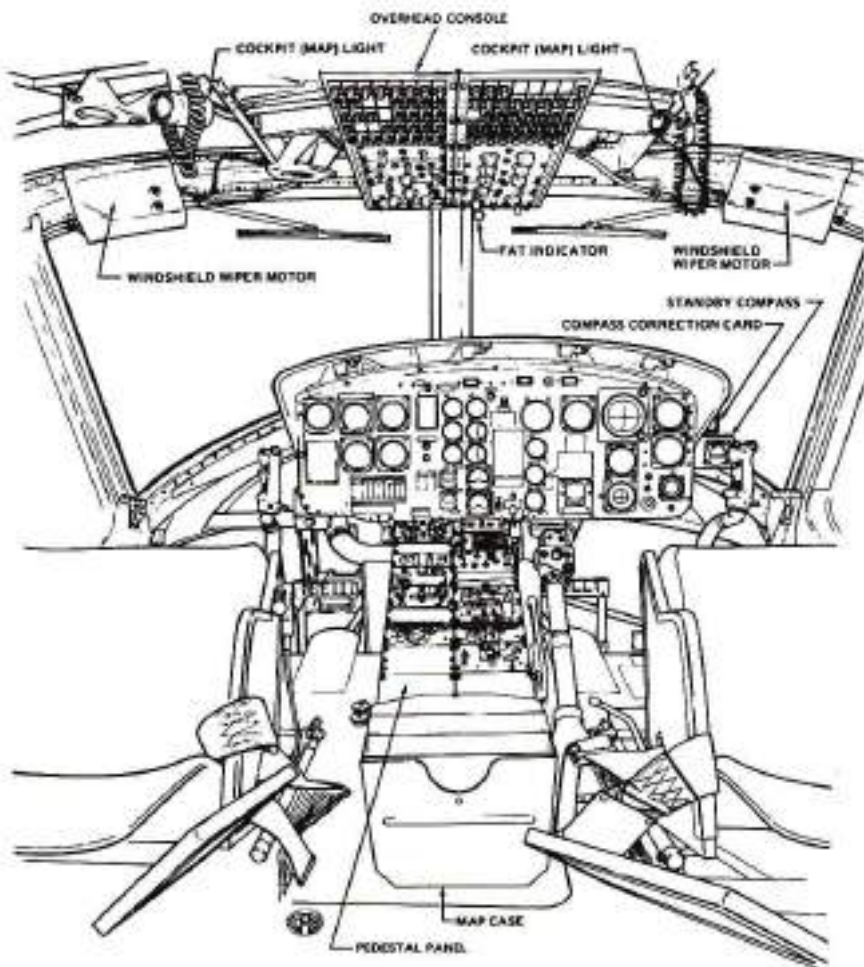


Figure 2-5. Crew Compartment—Typical (Sheet 1 of 3)

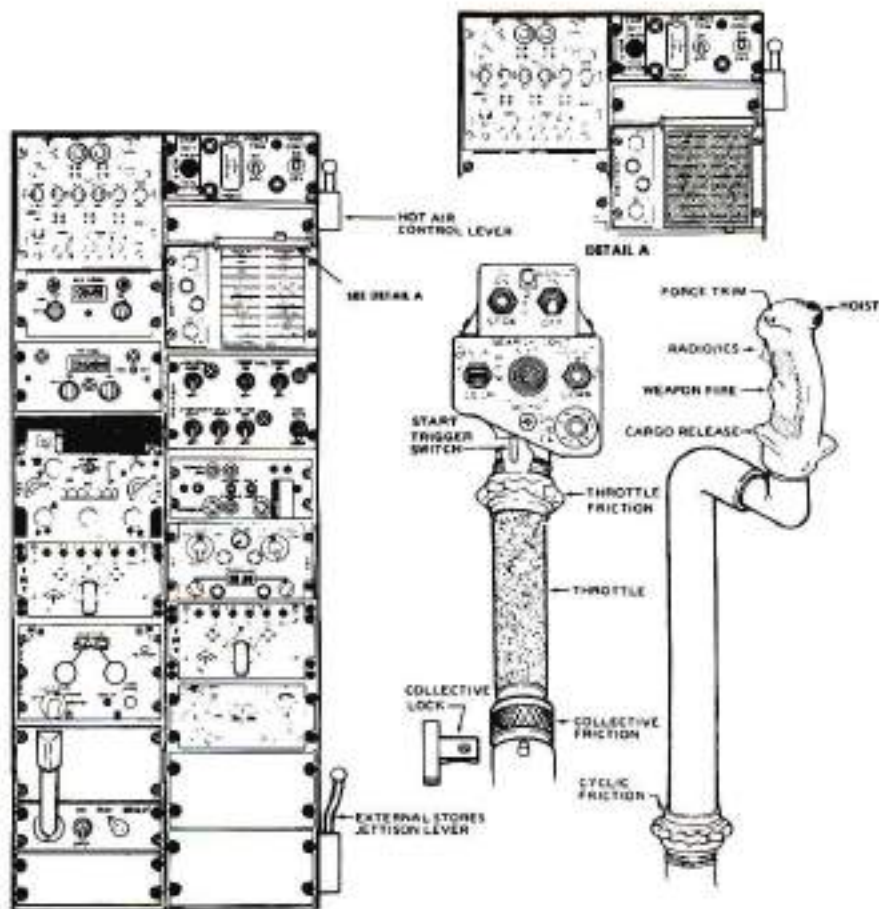


Figure 2-5. Crew Compartment—Typical (Sheet 2 of 3)

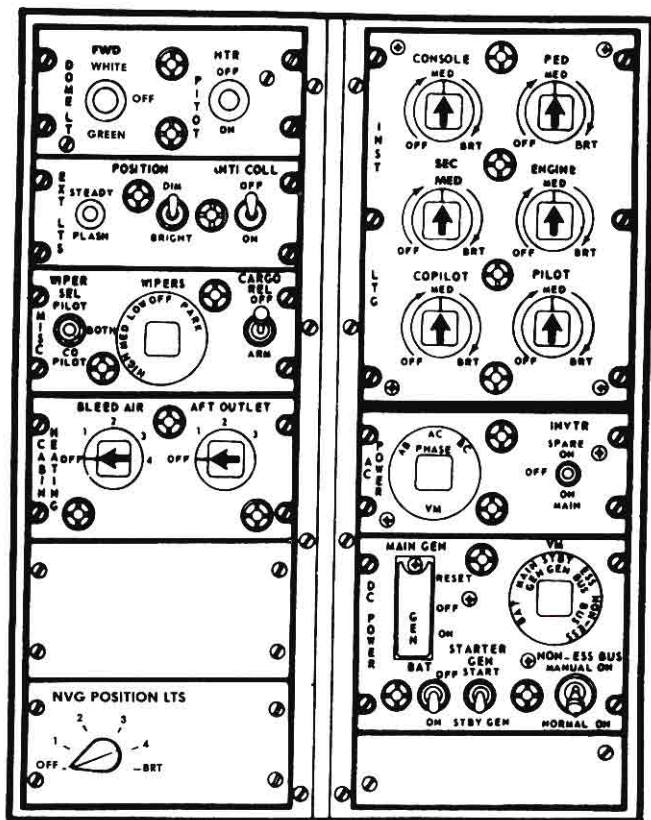


Figure 2-5. Overhead Console—Typical (Sheet 3 of 3)







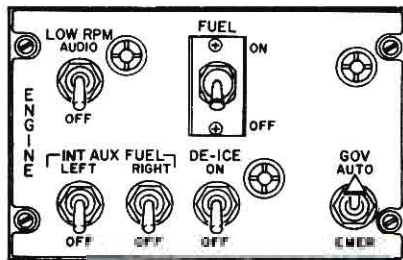


Figure 2-6. Engine and Miscellaneous Control Panel—Typical

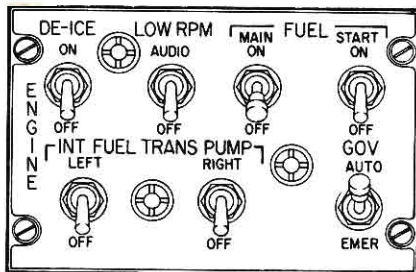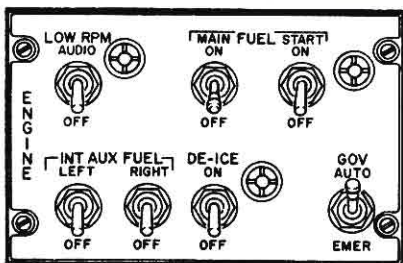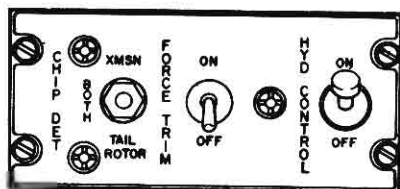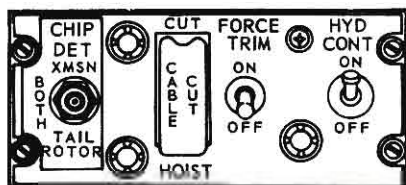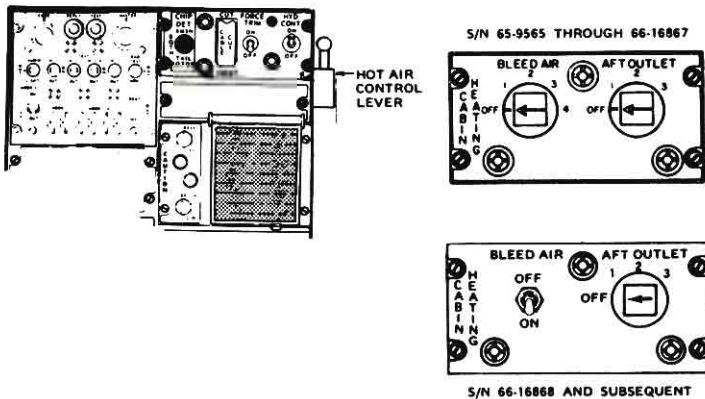

SWITCH/CONTROL	POSITION	FUNCTION
BLEED AIR (Rotary)	Clockwise Rotation	Increases amount of heated air.
AFT OUTLET	OFF	Turns bleed air off.
	Clockwise Rotation	Increases amount of air to doorpost outlets.
	OFF	Doorpost are closed, all air is direct to pedestal outlets.
Pedestal Lever	Full Forward	All heated air to defrost nozzles.
	Full Aft	All heated air to cockpit and cabin.
	Intermediate	Partial defrost and partial cockpit and cabin heat.
BLEED AIR (ON/OFF)	ON	Turns bleed air heat on.
	OFF	Turns bleed air heat off.


Figure 2-7. Heating and Defrosting System—Typical (Sheet 1 of 2)

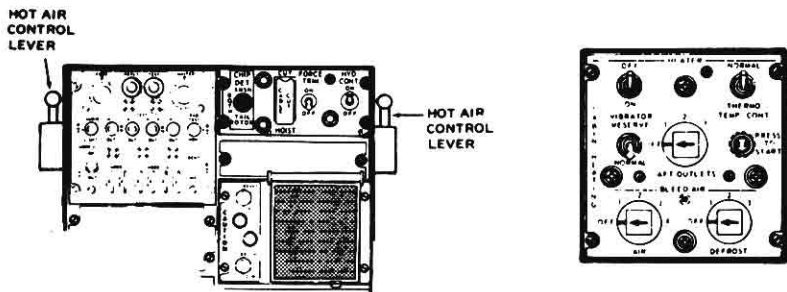

HEATER PANEL AND CONTROLS (PRIOR TO S/N 65-9565)

SWITCH/CONTROL	POSITION	FUNCTION
ON/OFF	ON OFF	Energizes the blower. Stops combustion heater operation.
VIBRATOR	NORMAL RESERVE	Builds up electrical charge for starting. Builds up reserve charge, used only if combustion does not occur in NORMAL.
PRESS TO START	OFF	Turns vibrator off.
NORMAL/THERMO	Press THERMO TEMP. CONT. NORMAL	Closes ignition circuit. VIBRATOR Actuates thermostatic control. Thermostat is not actuated. must be in NORMAL or RESERVE.
AFT OUTLETS	1 - 2 - 3	Clockwise rotation increases heat.
AIR	1 - 2 - 3 - 4	Clockwise rotation increases air volume.
DEFROST	OFF 1 2 3	100% of air to underseat outlets. 33% defrost - 67% underseat outlets. 67% defrost - 33% underseat outlets. 100% of air to defrost nozzles
Pedestal Lever	AFT	Actuates bleed air system.
Right Inboard	FORWARD	Shuts off bleed air.
Pedestal Levers	AFT	Admits air to underseat outlets.
Outboard	FORWARD	Closes valve to underseat outlets.

Figure 2-7. Heating and Defrosting System—Typical (Sheet 2 of 2)

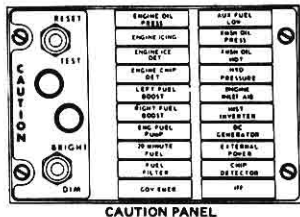

CAUTION PANEL WORDING	FAULT CONDITION
ENGINE OIL PRESS	Engine oil pressure below 25 psi
*ENGINE ICING	Engine icing detected
*ENGINE ICE DET.	Not connected
ENGINE CHIP DET	Metal particles in engine oil
LEFT FUEL BOOST	Left fuel boost pump inoperative
RIGHT FUEL BOOST	Right fuel boost pump inoperative
ENG FUEL PUMP	Engine fuel pump malfunction
20 MINUTE FUEL	Fuel quantity about 185 lb
FUEL FILTER	Fuel filter impending bypass
*GOV EMER	Governor switch in emergency position
AUX FUEL LOW	Auxiliary fuel tank empty
XMSN OIL PRESS	Transmission oil pressure below 30 psi
XMSN OIL HOT	Transmission oil temperature above 110° C
HYD PRESSURE	Hydraulic pressure low
*ENGINE INLET AIR	Engine air filter clogged
INST INVERTER	Failure of inverter
DC GENERATOR	DC Generator failure
EXTERNAL POWER	External power access door open
CHIP DETECTOR	Metal particles present in 42° or 90° gearbox or main transmission
*IFF	IFF System inoperative

*May not be installed on all configurations.

Figure 2-9. Cautions Panel—Typical

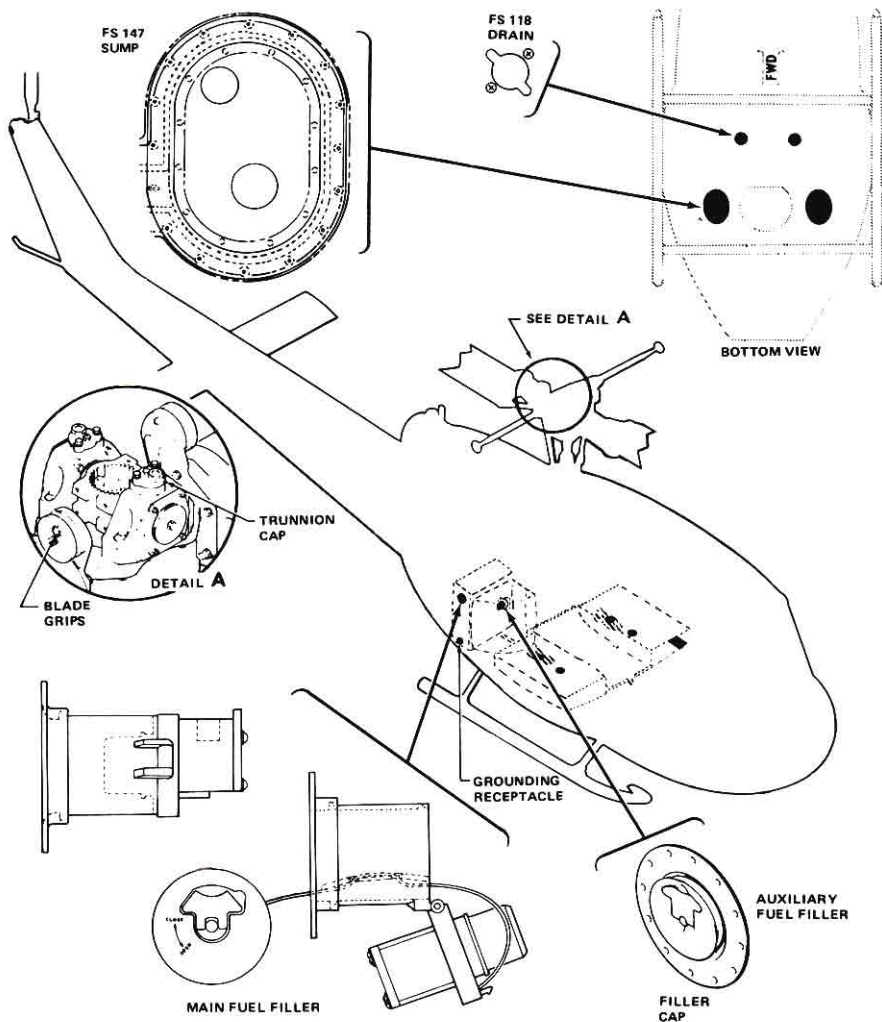


Figure 2-10. Servicing Diagram—Typical (Sheet 1 of 2)

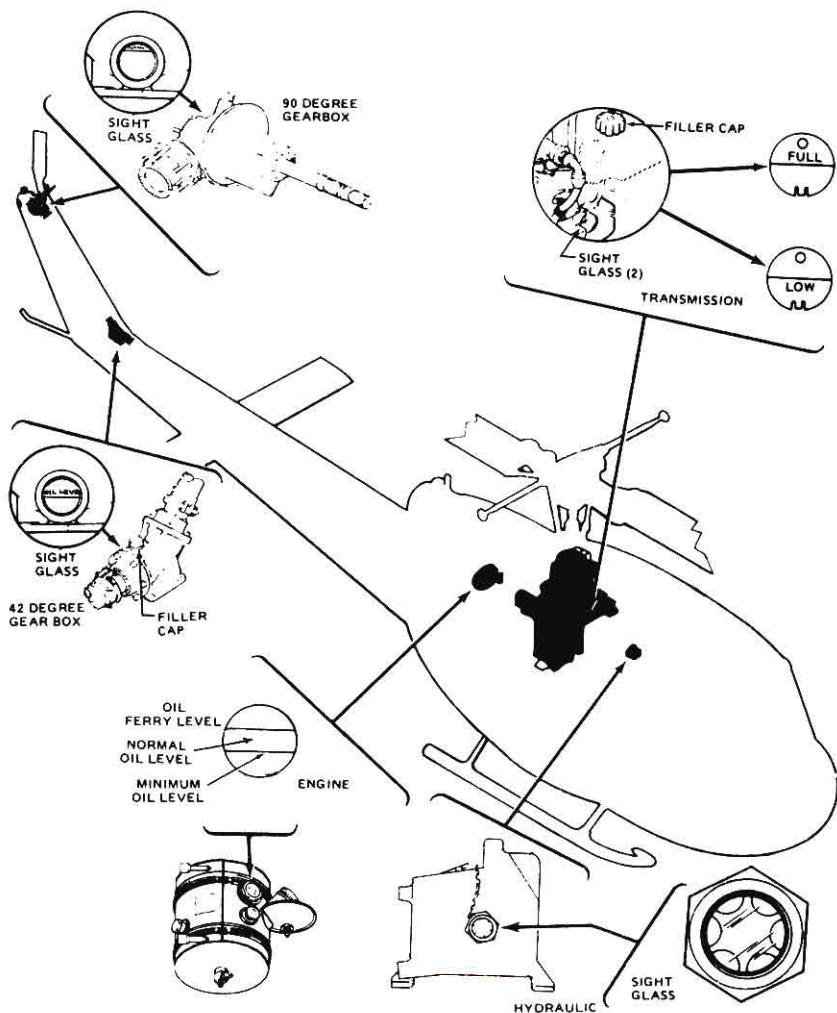


Figure 2-10. Servicing Diagram—Typical (Sheet 2 of 2)

Chapter 3

Avionics

Section I. GENERAL

3-1. General This chapter covers the avionics equipment configuration. It includes a brief description of the avionics equipment, its technical characteristics, capabilities, and location. The chapter also contains complete operating instructions for all avionics equipment installed. For mission avionics equipment, refer to chapter 4, Mission Equipment.

3-2. Avionics Equipment Configuration The configuration consists of the following:

a. Headset Cordage. The pilot and copilot cordage connectors are located at their respective sides near the aft portion of the overhead console. The crew cordage connectors are located near the overhead mounted signal distribution panel (figs 3-1, 3-2, and 3-3) at each crew station.

b. Keying Switches. A trigger type keying switch is located on each (pilot and copilot) cyclic control stick grip. The half depressed (first detent) position

of the trigger switch is used for keying the interphone. The fully depressed (second detent) position of the trigger switch keys the radio selected with the transmit-interphone selector switch on the signal distribution panel. A foot-operated type keying switch (pilot and copilot) is located at each side of the center console, between the center console and cyclic control stick, and on the cabin floor at each crew station. The depressed position of the foot-operated switch keys the radio or interphone selected with the rotary selector switch at the appropriate signal distribution panel.

c. Power Supply and Circuit Breakers. Refer to figure 2-8.

d. Operation. The operation of the avionics equipment in this helicopter is dependent on the operation of the interphone system (figs 3-1, 3-2, and 3-3). Do not turn interphone system off until the end of flight day.

Section II. COMMUNICATIONS

3-3. Signal Distribution Panel—SB-329/AR

a. Description. The Signal Distribution Panel, located at each crewmember station, amplifies and controls the distribution of audio signals between each headset-microphone, to and from radio transmitters and receivers, and from navigation receivers. The system is used for intercommunications between crewmembers and for monitoring communication and navigation receivers singly or in combination.

b. Controls and Functions. Refer to figure 3-1.

c. Operation.

(1) FM Switch panel AN/ARC-44 number 3ICS switch-up.

(2) RECEIVERS switches—As desired.

(3) TRANS selector switch—As desired.

(4) VOL control—Adjust.

3-4. Signal Distribution Panel C-1611/AIC

a. Description. The Signal Distribution Panel amplifies and controls the distribution of audio signals applied to or from each headset-microphone, to or from communication receivers and transmitters, from navigation receivers, intercommunication between crewmembers, and for monitoring the communication and navigation receivers singly or in combination. In addition the C-1611/AIC panel permits the operator to control four receiver-transmitters. A private interphone line is also provided.

When the selector switch is in the PVT position it provides a hot line (no external switch is used) to any station in the helicopter which also has PVT selected. A HOT MIC switch is also provided on the C-1611/AIC control panel at the medical attendants station. Four C-1611/AIC units may be installed in serial no. 63-8739 and subsequent. One each of the units are installed for the pilot and copilot, and two are installed in the crew/passenger compartment of the crew. All four of the C-1611/AIC units are wired to provide interphone operations for the crew, and full transmit and receive facilities for all communication and navigation equipment.

b. Controls and Functions. Refer to figure 3-2.

c. Operation.

(1) Transmit interphone selector switch—As desired.

(2) RECEIVERS switches—As desired.

(3) Microphone switches—As desired.

(4) VOL control—Adjust.

3-5. Signal Distribution Panel C-6533/ARC

a. Description. Two panels are installed in the pedestal for the pilot and copilot and two panels are installed in the cabin roof aft of the overhead console for the right and left crewmembers. The system is used for intercommunications and radio control. The system has three modes of operation; two way radio communications, radio monitoring, and interphone.

b. Controls and Functions. Refer to figure 3-3.

c. Operation.

(1) NAV receiver switch—As desired.

(2) AUX receiver switch—As desired.

(3) Transmit-interphone selector switch—As desired.

(4) Receiver switches—As desired.

(5) HOT MIKE switch—As desired.

(6) VOL control—Adjust.

3-6. UHF Radio Set AN/ARC-51BX

a. Description. The Radio Set provides two way communications in the UHF (225.0 to 399.9 MHz) band. The set located at the left side of the pedestal, tunes in 0.05 MHz increments and provides 3500 channels. The set also permits 20 preset channels and monitoring of the guard channel. Transmission and reception are conducted on the same frequency.

b. Controls and Functions. Refer to figure 3-4.

c. Operation.

(1) UHF function select switch—T/R (T/R+G as desired).

(2) UHF mode selector switch—PRESET CHAN.

(3) RECEIVERS switch No. 2—ON

(4) Channel—Select.

NOTE

An 800-cps audio tone should be heard during channel changing cycle.

(5) SQ DISABLE switch—OFF.

(6) VOL—Adjust.

(7) Transmit-interphone selector switch—No. 2 position.

d. Emergency Operation.

(1) UHF mode switch—GD XMIT.

(2) UHF function switch—T/R+G.

3-7. UHF Radio Set AN/ARC-51X

a. Description. The radio set provides two way communications in the UHF (225.0 to 399.9 MHz) band. The set located at the left side of the pedestal, tunes in 0.1 MHz increments and provides 1750 channels. The set also permits monitoring of the guard channel. Transmission and reception are conducted on the same frequency.

b. Controls and Functions. Refer to figure 3-5.

c. Operation.

(1) UHF function selector switch—T/R (T/R+G as desired). Allow five minute warmup.

(2) Frequency—Select.

(3) RECEIVERS switch No. 2—ON.

(4) SENS and VOL controls—Adjust.

(5) Transmit-interphone selector switch—No. 2 position.

d. Emergency Operation. Select guard frequency 243.0 MHz.

3-8. UHF Radio Set AN/ARC-55B

a. Description. The UHF command set provides two way, amplitude-modulated communications on any of 1750 channels within 225.0 to 399.9 MHz. Channel selection is manual and the guard channel may be monitored.

b. Controls and Functions. Refer to figure 3-6.

c. Operation.

(1) UHF function selector switch—As desired.

(2) Frequency—Select.

(3) RECEIVERS switch No. 2—ON.

(4) UHF VOL-SENS controls—Adjust.

(5) Transmit-interphone selector switch—No. 2 position.

d. Emergency Operation. Select guard frequency 243.0 MHz.

3-9. VHF Radio Set AN/ARC-115

a. Description. The VHF Radio Set provides amplitude-modulated, narrow band voice communications within the frequency range of 116.000 to 149.975 MHz on 1360 channels for a distance of approximately 50 miles line of sight. A guard receiver is incorporated and fixed tuned to 121.50 MHz. The panel is labeled VHF AM COMM and mounted on the left side of the pedestal.

b. Controls and Functions. Refer to figure 3-7.

c. Operation.

(1) Function selector—As desired.

(2) Frequency—Select.

(3) RCVR TEST—Press to test.

(4) AUDIO—Adjust.

(5) Transmit-interphone selector switch—No. 3 position.

(6) RADIO transmit switch—Press.

d. Emergency Operation. Select guard frequency 121.50 MHz.

3-10. VHF Radio Set—AN/ARC-134

a. Description. The set transmits and receives the same frequency. The panel (VHF COMM) is located on the left side of the pedestal. The set provides voice communications in the VHF range of 116.000 through 149.975 MHz on 1360 channels spaced 25 kHz apart.

b. Controls and Functions. Refer to figure 3-8.

c. Operation.

(1) OFF/PWR switch—PWR. Allow set to warm up.

(2) Frequency—Select.

(3) RECEIVERS switch No. 3—ON.

(4) Volume—Adjust. If signal is not audible with VOL control fully clockwise, press COMM TEST switch to unquench circuits.

(5) Transmit-interphone selector switch—No. 3 position.

(6) OFF/PWR switch—OFF.

d. Emergency Operation. Select guard frequency 121.500 MHz.

3-11. VHF Radio Set—AN/ARC-73

a. Description. The VHF Command Set is an alternate set for the UHF radio. The set provides transmission and reception of AM radio signals in the VHF range. The receiver may be tuned within its frequency range of 116.00 to 151.95 MHz in 50 kHz increments to any of the 720 available channels. The transmitter may be tuned within its frequency range of 116.00 to 149.95 MHz in 50 kHz increments to any one of its 680 available channels. The distance range is limited to line of sight or a distance of approximately 50 miles.

b. Controls and Functions. Refer to figure 3-9.

c. Operation.

(1) POWER switch—ON.

(2) Frequency—Select.

(3) RECEIVERS switch No. 3—ON.

(4) SQ and VOL controls—Adjust.

(5) Transmit-interphone selector switch—No. 3 position.

d. Emergency Operation. Select guard frequency 121.500 MHz.

3-12. FM Radio Set—AN/ARC-114 and -114A

a. Description. The FM Radio Set provides two way frequency modulated (FM) narrow band voice communications and homing capability within the frequency range of 30.00 to 75.95 MHz on 920 channels for a distance range limited to line of sight. A guard receiver is incorporated in the set and is fixed tuned to 40.50 MHz. It has the additional capability for retransmission of voice, or X-mode communications in conjunction with radio set AN/ARC-131. The radio set is marked VHF FM COMM and is mounted on the center console, on helicopter serial Nos. 71-20000 and subsequent.

b. Controls and Functions. Refer to figure 3-10.

c. Operation.

(1) Two Way Voice Communication.

(a) Function selector—As desired.

(b) Frequency—Select.

(c) RCVR TEST—Press to test.

(d) AUDIO—Adjust.

(e) Transmit-interphone selector—No. 5 position.

(2) Retransmission.

NOTE

For transmission both FM circuit breakers must be in.

(a) Frequencies—Select (both FM sets).

(b) Communications—Establish with each facility by selecting number 1 position and then number 5 position on the transmit-interphone selector.

(c) Function selectors—RETRAN (both FM sets).

(d) Receivers switches—Number 1 and number 5 positions as desired for monitoring.

d. Emergency Operation. Select guard frequency 40.50 MHz.

3-13. FM Radio Set—AN/ARC-131

a. Description. The FM Radio Set consists of a receiver-transmitter, remote control panel unit, communication antenna and a homing antenna. The radio set provides 920 channels spaced 50 kHz apart within the frequency range of 30.00 to 75.95 MHz. Circuits are included to provide transmission sidetone monitoring. The control panel is located on the pedestal. Homing data is displayed by the course indicator (fig 3-21) on the instrument panel. A channel changing tone should be heard in the headset while radio set is tuning. When the tone stops, the radio set is tuned. Operation in DIS position is possible; however flags on course indicator will be inoperative. When the first FM radio set is in the homing mode, the homing indicator may deflect left or right of on course indication while the second FM radio set is keyed.

b. Controls and Functions. Refer to figure 3-11.

c. Operation. Depending on the settings of the control panel controls, the radio set can be used for the following types of operation: Two way voice communication and homing (fig 3-12).

(1) Two Way Voice Communication.

(a) Mode control switch—T/R (allow two minute warm up).

(b) Frequency—Select.

(c) RECEIVERS No. 1 switch—ON.

(d) VOL control—Adjust.

(e) SQUELCH control—Set for desired squelch mode.

(f) TRANS selector switch—No. 1.

(2) Homing Operation.

(a) Mode control switch—HOME.

(b) Frequency—Adjust to frequency of selected homing station.

(c) SQUELCH control may be set to CARR or TONE, however, the carrier squelch is automatically selected by an internal contact arrangement on HOME position.

(d) Fly helicopter toward the homing station by heading in direction that causes homing indicator right-left vertical pointer to position itself in the cen-

ter of indicator scale. To ensure that helicopter is not heading away from homing station, change the heading slightly and note that the homing indicator vertical pointer deflects in direction opposite that of the turn.

(3) *Retransmit Operation.* Start the equipment and proceed as follows for retransmit operation:

(a) Mode controls (both control units)—RETRAN.

(b) SQUELCH controls (both control units)—Set as required. Do not attempt retransmit operation with the SQUELCH controls set to DIS. Both controls must be set to CARR or TONE. To operate satisfactorily, the two radio sets must be tuned to frequencies at least 3 MHz apart.

(c) Frequency adjust (both control units) for the desired operation.

(4) *Stopping Procedure.* Mode control switch—OFF.

3-14. FM Radio Set AN/ARC-54

a. *Description.* The FM Radio Set provides the helicopter with two way communications within the frequency range of 30.00 to 69.95 MHz. Also, voice communication permits selective calling (TONE) and, when used with the homing antenna and course indicator, the pilot is provided with a homing facility. A channel changing tone should be heard in the headset while radio set is tuning. When the tone stops, the radio set is tuned. Voice reception is possible in HOME position. With two or more FM radio sets installed and the first FM radio set is in the homing mode, the homing indicator may deflect left or right of on course indication while the second FM radio set is keyed.

b. *Controls and Functions.* Refer to figure 3-12.

c. *Operation.*

(1) *Two Way Voice Communications.*

(a) FM mode selector switch—PTT (allow three minute warmup).

(b) Frequency—Select.

(c) FM VOL control—Adjust.

(d) FM SQUELCH control—CARR (or as desired).

(e) RECEIVERS switch No. 1—ON.

(f) TRANS selector switch—No. 1.

(g) Microphone switch—Press.

(2) *Homing Operation.* FM mode selector switch—HOME.

(3) *Retransmit Operation.* Start the equipment and perform the following for retransmit operation:

(a) Mode controls (both control units)—RETRAN.

(b) SQUELCH controls (both control units) set as desired.

NOTE

Do not attempt retransmit operation with the SQUELCH controls set to DIS. Both controls must be set to CARR or TONE.

(c) Adjust frequency (both control units) desired operation. To operate satisfactorily, the two radio sets must be tuned to frequencies at least 5 MHz apart.

(4) *Stopping Procedure.* FM mode selector switch—OFF.

3-15. FM Radio Set AN/ARC-44

a. *Description.* The FM Radio Set provides two way communications within the frequency range of 24.0 to 51.9 MHz on 280 preset channels. Signal distribution panel SB-329 and control panel assembly 204-075-219 (FM switch assembly), to provide squelch control and power to the antenna group, are used in conjunction with the FM Liaison Radio Set (fig 3-2 and fig 3-14). The set provides a homing facility on signals between 24.0 and 49.0 MHz. Cycling may take place in the receiver-transmitter. This will be indicated by a 400-cycle-per-second signal heard in the headset.

b. *Controls and Functions.* Refer to figure 3-13.

c. *Operation.*

(1) *Preliminary Setup.*

(a) FM power switch—ON.

(b) FM home switch—Down.

(c) TRANS selector switch—No. 1 position.

(d) REM-LOCAL switch—LOCAL.

(e) Frequency—Select.

(2) *Starting Procedures.*

- (a) BAT switch—ON (OFF for APU).
- (b) INT and FM circuit breakers—In.
- (c) ICS switch—Up (allow three minute warm up).

(3) *Interphone Operation.*

- (a) Microphone switch—Press.
- (b) Speak into the microphone—Adjust interphone volume.

(4) *FM Receive-Transmit Operation.*

- (a) ICS switch—Up.
- (b) FM ON-OFF power switch—ON.
- (c) FM VOL control—As desired.
- (d) TRANS selector switch—No. 1 position.
- (e) Microphone switch—Press to transmit
- (5) *FM Home Operation.* FM HOME switch—Up.
- (6) *Stopping Procedures.*
 - (a) FM HOME switch—Down.
 - (b) FM POWER switch—OFF.
 - (c) ICS switch—Down.

3-16. Voice Security Equipment

a. *Description.* The Voice Security Equipment is used with the FM Command Radio to provide secure two way communication (figs 3-11 through 3-14). The equipment is controlled by the control-indicator mounted in the pilot right console. The POWER switch must be in the ON position, regardless of the mode of operation, whenever the equipment is installed.

b. *Controls and Functions.* Refer to figure 3-14.

c. *Operation.* Normal operation will exist without its encoder/decoder and control indication being installed in the helicopter. However, two operation modes are available when they are installed. PLAIN mode for unciphered radio transmission or reception and CIPHER mode for ciphered radio transmission or reception. Both modes may be operated with or without retransmission units.

(1) *Preliminary.*

- (a) Set the control indicator POWER switch to ON.
- (b) Apply power to FM radio set.
- (c) When power is initially applied, an automatic alarm procedure is initiated.

1 A constant tone is heard in the headset and after approximately two seconds the constant tone will change to an interrupted tone.

2 To clear the interrupted tone, press and release the press to talk switch, the interrupted tone will no longer be heard, and the circuit will be in a standby condition ready for either transmission or reception. No traffic will be passed if the interrupted tone is still heard after pressing and releasing the press to talk switch.

(d) Set control unit function switch for desired type of operation (2 and 3 below).

(2) *Plain Mode.*

- (a) Set the control indicator POWER switch to ON.
- (b) Set the PLAIN-CIPHER switch to PLAIN (indicated by red light).

(c) Set the RE-X-REG switch to REG; except when operating with retransmission units, at which time switch will be placed in the RE-X position.

(d) Press the press to talk switch and speak into the microphone to transmit. Release the press to talk switch for reception.

(3) *Cipher Mode.*

(a) Set the PLAIN-CIPHER switch to CIPHER (indicated by a green light).

(b) Place the RE-X-REG switch to REG, except when operating with retransmission units, at which time the switch will be placed in RE-X position.

(c) To transmit, press the press to talk switch. NO NOT TALK; in approximately one-half second, a beep will be heard. This indicates the receiving station is now capable of receiving your message. Transmission can now commence. Only one voice security system can transmit on a given frequency. Always listen before attempting to transmit to assure that no one else is transmitting.

(d) When transmission is completed, release the press to talk switch. This will return equipment to the standby condition.

(e) To receive, it is necessary for another station to send you a signal first. Upon receipt of a signal the cipher equipment will be switched automatically to the receive condition, which will be indicated by a short beep heard in the headset. Reception will then be possible. Upon loss of the signal, the cipher equipment will be automatically returned to the standby condition.

3-16.1 Voice Security Equipment TSEC/KY-58

a. *Description.* The voice security equipment is used with the FM Command Radio to provide secure two way communication. The equipment is controlled by the control-indicator (Z-AHP) mounted in the right pedestal panel. The POWER switch must be in the ON position, regardless of the mode of operation, whenever the equipment is installed.

b. *Controls and Functions.* Refer to Figure 3-14.

c. *Operating Procedures.*

(1) Operating procedures for secure voice.

NOTE

To talk in secure voice, the KY-58 must be "Loading" with any number of desired variables.

(a) Set to MODE switch to OP.

(b) Set the FILL switch to the storage register which contains the crypto-net variable (CNV) you desire.

(c) Set the POWER switch to ON.

(d) Set the PLAIN C/RAD switch to C/RAD.

(e) If the signal is to be retransmitted, set the DE-LAY switch to (ON).

(f) At this time a crypto alarm, and background noise, in the aircraft audio intercom system should be heard. To clear this alarm, press and release PTT in the aircraft audio/intercom system. Secure voice communication is now possible.

NOTE

When operating in either secure or clear (plain) voice operations the VOLUME must be adjusted on the aircraft radio and intercom equipment to a comfortable operating level.

(2) Clear Voice Procedures:

(a) To operate in clear voice (plain text) simply:

1 Set the Z-AHP(RCU) PLAIN-C/RAD switch to PLAIN.

2 Operate the equipment

(3) Zeroing Procedures

NOTE

Instructions should originate from the Net Controller or Commander as to when to zeroize the equipment

(a) To zeroize the KY-58: (Power must be on).

1 Lift the red ZEROIZE switch cover on the RCU.

2 Lift the spring-loaded ZEROIZE switch. This will zeroize positions 1-6.

3 Close the red cover.

The equipment is now zeroized and secure voice communications are no longer possible.

(4) Automatic Remote Keying Procedures

NOTE

Automatic Remote Keying (AK) causes an "old" crypto-net variable (CNV) to be replaced by a "new" CNV. Net Controller simply transmits the "new" CNV to your KY-58.

(a) The Net Controller will use a secure voice channel, with directions to stand by for an AK transmission. Calls should not be made during this standby action.

(b) Several beeps should now be heard in your headset. This means that the "old" CNV is being replaced by a "new" CNV.

(c) Using this "new" CNV, the Net Controller will ask you for a "radio check."

(d) After the "radio check" is completed, the Net Controller instructions will be to resume normal communications. No action should be taken until the net controller requests a "radio check."

(5) Manual Remote Keying Procedures.

(a) The Net Controller will make contact on a secure voice channel with instructions to stand by for a new crypto-net variable (CNV) by a Manual Remote Keying (MK) action. Upon instructions from the Net Controller:

1 Set the Z-AHP FILL switch to position 6. Notify the Net Controller by radio, and stand by.

2 When notified by the Net Controller, set the Z-AHP MODE switch to RV (receive variable). Notify the Net Controller, and stand by.

3 When notified by the Net Controller, set the Z-AHP FILL switch to any storage position selected to receive the new CNV (May be unused or may contain the variable being replaced). Notify the Net Controller, and stand by.

NOTE

When performing Step 3, the storage position (1 through 6) selected to receive the new CNV may be unused, or it may contain the variable which is being replaced.

(b) Upon instructions from the Net Controller:

1 Listen for a beep on your headset.

2 Wait two seconds

3 Set the the RCU MDOE switch to OP

4 Confirm

(c) If the MK operation was successful, the Net Controller will now contact you via the new CNV.

(d) If the MK operation was not successful, the Net Controller will contact you via clear voice (plain) transmission; with instructions to set your Z-AHP FILL selector switch to position 6, and stand by while the MK operation is repeated.

(6) It is important to be familiar with certain KY-58 audio tones. Some tones indicate normal operation, while other indicate equipment malfunction. These tones are:

(a) Continuous beeping, with background noise, is cryptoterror. This occurs when power is first applied to the KY-58, or when the KY-58 is zeroized. This beeping is part of normal KY-58 operation. To clear this tone, press and release the PTT button on the Z-AHQ (after the Z-AHQ LOCAL switch has been pressed. Also the PTT can be pressed in the cockpit.

(b) Background noise indicates that the KY-58 is working properly. This noise should occur at TURN ON of the KY-58, and also when the KY-58 is generating a cryptovariable. If the background noise is not heard at TURN ON, the equipment must be checked out by maintenance personnel.

(c) Continuous tone, could indicate a "parity alarm." This will occur whenever an empty storage register is selected while holding the PTT button in. This tone can mean any of three conditions:

1 Selection of any empty storage register.

2 A "bad" cryptovariable is present.

3 Equipment failure has occurred. To clear this tone, follow the "Loading Procedures" in TM 11-5810-262-OP. If this tone continues, have the equipment checked out by maintenance personnel.

(d) Continuous tone could also indicate a cryptoterror. If this tone occurs at any time other than in (c) above, equipment failure may have occurred. To clear this tone, repeat the "Loading Procedures" in TM 11-5810-262-OP. If this tone continues, have the equipment checked out by maintenance personnel.

(e) Single beep, when RCU is not in TD (Time Delay), can indicate any of three normal conditions:

1 Each time the PTT button is pressed when the KY-58 is in C (cipher) and a filled storage register is selected, this tone will be heard. Normal use (speaking) of the KY-58 is possible.

2 When the KY-58 has successfully received a cryptovariable, this tone indicates that a "good" cryptovariable is present in the selected register.

3 When you begin to receive a ciphered message, this tone indicates that the cryptovariable has

passed the "parity" check, and that it is a good variable.

(f) A single beep, when the RCU is in TD (Time Delay) occurring after the "preamble" is sent, indicates that you may begin speaking.

(g) A single beep, followed by a burst of noise after which exists a seemingly "dead" condition indicates that your receiver is on a different variable than the distant transmitter. If this tone occurs when in cipher text mode: Turn RCU FILL switch to the CNV and contact the transmitter in PLAIN text and agree to meet on a particular variable.

3-17. HF Radio Set AN/ARC-102

a. *Description.* HF AM/SSB Radio Set AN/ARC-102 is a long range, high frequency (hf), single side band (ssb), transceiver that transmits and receives in the 2.0 to 30.0 MHz range. The control panel is located on the right side of the pedestal and tunes in one MHz stops to any of 28,000 manually selected frequencies. The primary mode of operation is ssb. However, it can also transmit and receive compatible amplitude modulated (am) signals.

b. *Controls and Functions.* Refer to figure 3-15.

c. *Operation.*

WARNING

When ground testing ARC-102 equipment, be sure that personnel are clear of antenna. Serious burns can result if body contact is made with the antenna during ground testing.

(1) Function selector switch—As desired.

(2) Frequency controls—Desired frequency. If the function selector is moved from the OFF position to an operating mode and the desired operating frequency is already set up on the control panel, rotate the first selector knob one digit off frequency and then back to the operating frequency. This will allow the system to return to the frequency.

(3) RF-SENS—Adjust.

(4) Intercommunications HF switch—As desired.

d. *Emergency Operation.* The AN/ARC-102 HF radio has two built-in protective devices that could cause the set to stop operating. The condition and corrective steps are as follows:

(1) A protective circuit is designed to turn the receiver-transmitter off, when a short exists in the output circuit. To restore the receiver-transmitter to operation, move the function selector to OFF position and then back to the desired operating mode.

(2) When the associated antenna coupler is required to complete several consecutive tuning cycles it may become overheated. In this event a thermal relay in the coupler unit is designed to turn off the receiver-transmitter. If the receiver-transmitter stops operating after a series of tuning cycles, position the function selector switch to OFF position, allow the thermal relay to cool for two minutes, and return the function selector to the desired operating mode.

(3) If the above procedure does not return the HF radio set to normal operation, place the function selector in the OFF position and report the failure to the maintenance personnel.

Section III. NAVIGATION

3-18. ADF Set AN/ARN-83

a. *Description.* The Automatic Direction Finder set provides radio aid to navigation, on helicopter serial Nos. 66-746 and subsequent, within the 190 to 1750 kHz frequency range. In automatic operation, the set presents continuous bearing information to any selected radio station and simultaneously provides aural reception of the stations transmission. In manual operation, the operator determines the bearing to any selected radio station by controlling the aural null of the directional antenna. The set may also be operated as a receiver.

b. *Controls and Functions.* Refer to figure 3-16.

c. *Operation.*

(1) *Automatic Operation.*

(a) RECEIVERS NAV switch—ON.

(b) Mode selector switch—ADF.

(c) Frequency—Select.

(d) Volume—Adjust.

(2) *Manual Operation.*

(a) Mode selector switch—LOOP.

(b) BFO switch—ON.

(c) LOOP L/R switch—Press right or left and rotate loop for null.

3-19. ADF Set AN/ARN-59

a. *Description.* The Direction Finder Set is a radio compass system to provide continuous automatic visual indication of the direction from which an incoming selected radio signal is received. It may also be used for homing and position fixing, or as a manually operated direction finder. The control panel, located in the pedestal, provides control for aural reception of AM signals in the 190 to 1750 kHz range.

b. *Controls and Functions.* Refer to figure 3-17.

c. *Operation.*

(1) *Automatic Operation.*

(a) ADF VOL control—ON.

(b) RECEIVERS NAV switch—ON.

(c) Frequency—Select.

(d) Function switch—COMP.

(2) *Manual Operation.*

(a) Function switch—LOOP.

(b) BFO switch—ON.

(c) LOOP switch—Press right or left and rotate loop for null.

3-20. VHF Navigation Set AN/ARN-82

a. *Description.* The Navigation Receiver set provides reception on 200 channels, with 50 kHz spacing between 108.0 and 126.95 MHz. This permits reception of the VHF omnidirectional range (VOR) between 108.0 and 117.95 MHz. The localizers are received on odd-tenth MHz, between 108.0 and 112.0 MHz and energized as selected. Both VOR and localizer are received aurally through the interphone system. The VOR is presented visually by the course indicator and the number 2 pointer on the bearing indicator and the localizer is presented visually by the vertical needle on the course deviation indicator (CDI) (fig 3-20). When the R-1963/ARN Glideslope/Marker Beacon Receiver is installed, the glideslope

frequency is selected by tuning an associated localizer frequency on the control panel.

b. *Controls and Functions.* Refer to figure 3-18.

c. *Operation.*

(1) Function switch—PWR.

(2) RECEIVERS NAV switch—ON.

(3) Frequency—Select.

(4) VOL—Adjust.

3-21. VHF Navigation Set—AN/ARN-30E

a. *Description.* The VHF Navigation Receiver Set provides reception of 190 channels at 0.1 MHz intervals between 108.0 and 126.95 MHz. The VOR ILS control panel is located on the pedestal and permits reception and interpretation of VHF omnidirectional range and localizer signals broadcast by ground stations. Line of sight operation varies from 12 nautical miles at 100 feet altitude to 160 nautical miles at 20,000 feet altitude.

b. *Controls and Functions.* Refer to figure 3-19.

c. *Operation.*

(1) VOL-OFF switch—On and adjust.

(2) SQUELCH control—Counterclockwise.

(3) Frequency selectors—Select.

The warning flag for the vertical pointer is an indication of signal strength and reliability. Under no circumstances should navigation be attempted if the flag is visible. If the TO-FROM indicator remains blank, do not attempt VOR navigation.

(4) Vertical pointer and TO-FROM indicators (fig 3-20)—Masked.

(5) SQUELCH control—Adjust.

3-22. Course Deviation Indicators ID-453 and ID-1347

a. *Description.* The Course Deviation Indicator, used with the VHF Navigation Receiver system, is installed in the instrument panel (figs 3-18 and 3-19). The purpose of the indicator is to depict bearing and deviation of the helicopter from the selected station. Also, information is presented from the FM Receiver when the mode selector switch is in HOME position (figs 3-10, 3-11, 3-12, and 3-13). When the R-1963/ARN Marker Beacon/Glideslope

Receiver is installed, data is presented by the horizontal pointer and GS warning flag.

b. *Controls and Functions.* Refer to figure 3-20.

c. *Operation.* Refer to the applicable VHF Navigation Receiver and/or FM Radio set operating procedures.

3-23. Gyromagnetic Compass Set

a. *Description.*

(1) The Gyromagnetic Compass Set is a direction sensing system which provides a visual indication of the magnetic heading (MAG) of the helicopter. The information which the system supplies may be used for navigation and to control flight path of the helicopter. The system may also be used as a free gyro (DG) in areas where the magnetic reference is unreliable.

(2) A radio magnetic indicator is installed in the pilot instrument panel. A second radio magnetic indicator (not shown) is installed in the copilot's instrument panel. The copilot indicator is a repeater type instrument similar to the pilot indicator except that it has no control knobs. The moving compass card on both indicators displays the gyromagnetic compass heading. The number 1 pointer on the indicators indicate the bearing to the NDB or course to the VOR station. The number 2 pointer indicates the VOR course to station.

(3) The system does not have a "fast-slewing" feature. If the compass is 180° off the correct helicopter heading when the system is energized it will take approximately 1 hour and 30 minutes (2° per minute) for the compass to slave to the correct headings.

b. *Controls and Functions.* Refer to figure 3-21.

c. *Operation.*

(1) INV switch—MAIN or STBY.

(2) Radio magnetic indicator (pilot only)—Check power failure indicator is not in view.

(a) Slaved gyro mode.

1 COMPASS switch—MAG.

2 Synchronizing knob—Center (Null) annunciator.

3 Magnetic heading—Check.

(b) Free gyro mode.

1 COMPASS switch—DG.

2 Synchronizing knob—Set heading.

3 Annunciator—Center position and then does not change (annunciator is de-energized in the free gyro (DG) mode).

(c) Inflight operation.

1 Set the COMPASS switch to DG or MAG as desired for magnetically slaved or free gyro mode of operation. Free gyro (DG) mode is recommended when flying in latitudes higher than 70°.

2 When operated in the slaved (MAG) mode, the system will remain synchronized during normal flight maneuvers. During violent maneuvers the system may become unsynchronized, as indicated by the annunciator moving off center. The system will slowly remove all errors in synchronization however, if fast synchronization is desired turn the synchronizing knob in the direction indicated by the annunciator until the annunciator is centered again.

3 When operating in the free gyro (DG) mode, periodically update the heading to a known reference by rotating the synchronizing knob.

3-24. Marker Beacon Receiver

a. *Description.* The Marker Beacon Receiver set is a radio aid to navigation. It receives 75 MHz marker beacon signals from a ground transmitter to provide the pilot with aural and visual information. The marker beacon controls and indicator are located on the instrument panel to aid in determining helicopter position for navigation or instrument approach.

b. *Controls and Functions.* Refer to figure 3-22.

c. *Operation.*

(1) VOLUME OFF/INCR control—ON.

(2) Receiver NAV switch (MB switch if SB-329/AR panel is used)—ON.

(3) Volume—Adjust.

(4) SENSING HIGH/LOW switch—As desired.

d. *Stopping Procedures.* VOLUME OFF/INCR control—OFF.

3-24.1 Distance Measuring Equipment (DME) AN/ARN-124.

a. Description.

The AN/ARN-124 DME consists of a receiver-transmitter (interrogator), antenna, indicator and hold light.

The interrogator is installed in the aft left radio-electronics compartment. The indicator and hold light are installed on the pilot's instrument panel.

The indicator displays distance in nautical miles from the helicopter to the DME ground station and controls power to the interrogator. The interrogator contains 200 channels covering a frequency range

of 962 MHz through 1213 MHz. Signals from the interrogator are responded to by a DME ground station, resulting in a readout on the indicator. DME frequency selection is controlled by the VOR control panel, C-6873B/ARN-82. VOR-DME frequencies are automatically paired. The hold light is controlled by the indicator. Illumination of the hold light indicates a DME frequency is in the hold mode. ILS glideslope indications are not possible with the switch in the hold position. Use of the hold mode permits a change of VOR frequency without changing the DME frequency. DME station identification is accomplished by a continuous 1350 Hz tone in the ICS. Power to operate the DME is from the dc essential bus, through the DME ARN-124 circuit breaker.

b. Controls and Functions. Refer to figure 3-23.

Section IV. TRANSPONDER AND RADAR

3-25. Transponder Set AN/APX-72

a. Description. The APX-72 provides radar identification capability. Five independent coding modes are available. The first three modes may be used independently or in combination. Mode 1 provides 32 possible code combinations, any one of which may be selected in flight. Mode 2 provides 4,096 possible code combinations but only one is available since the selection dial is not available in flight and must be preset before flight. Mode 3/A provides 4,096 possible codes, any of which may be selected in flight. Mode C is used with the AAU-32/A Encoding Altimeter (AIMS). Mode 4, which is connected to an external computer, can be programmed prior to flight to display any one of many classified operational codes for security identification. The effective range depends on the capability of interrogating radar and line of sight. The transponder set is mounted on the center pedestal. The IFF CODE HOLD switch on the instrument panel interfaces with MODE 4 (fig 2-4). This allows the crew to hold the classified operational code that has been programmed. The IFF CODE HOLD switch must be momentarily held in the ON position prior to turning the CODE switch to HOLD. The CODE switch must be in HOLD a minimum of 20 seconds prior to turning MASTER control OFF.

b. Controls and Functions. Refer to figure 3-24.

c. Operation.

(1) MASTER control—STBY. Allow approximately 2 minutes for warmup.

(2) MODE and CODE—Select as required.

(3) TEST M-1, 2, 3/A and C—As required.

(4) MASTER control—NORM or LOW as required.

(5) IDENT—As required.

(6) STOPPING procedure. MASTER control—OFF.

d. Emergency Operation. MASTER control—EMER.

3-26. Transponder Set AN/APX-100.

a. Description. The transponder set AN/APX-100 enables the helicopter to identify itself automatically when properly challenged by friendly surface and airborne radar equipment. The control panel enables the set to operate in modes 1, 2, 3A, 4 and test. Mode 4 is operational when computer KIT-1/A/TSC (classified) is installed, properly code keyed, and IFF caution advisory light is not on. The range of the receiver-transmitter is limited to line of sight transmission since its frequency of operation is in the UHF band making range dependent on altitude.

b. Controls and functions—Transponder Set. Refer to figure 3-25.

c. Operation—Transponder Set.

(1) MASTER control—STBY. Allow approximately 2 minutes for warmup.

(2) MODE and CODE—As required.

(3) MASTER control—NORM.

(4) TEST—As required.

(5) ANT—As desired.

(6) IDENT—As required.

(7) Stopping procedure. MASTER control—OFF.

d. Emergency Operation—Transponder Set. MASTER control—EMERG.

3-27. Mode 4 Operation (APX-72 and APX-100)

a. Before Exterior Check.

(1) MASTER switch—OFF.

(2) IFF CODE HOLD switch (on the instrument panel)—HOLD. If the IFF CODE HOLD switch is OFF and the MASTER switch is in any position other than OFF, MODE 4 codes will zeroize when the battery switch is turned off during the BEFORE EXTERIOR check.

b. Aircraft Runup—Test.

(1) MASTER switch—STBY for 2 minutes.

(2) CODE switch—A.

(3) MODE 4 TEST/ON/OUT switch—ON.

(4) MODE 4 AUDIO/LIGHT/OUT switch—AUDIO.

(5) MODE 4 TEST/ON/OUT switch—TEST momentarily. The REPLY light should be on. If the REPLY light is not on or the IFF caution light goes on when the switch is at TEST, a malfunction is indicated and MODE 4 shall not be used. Release the switch to the ON position. Further testing to check for correct coding responses is done with ground test equipment by a qualified technician when ground test is used to interface with the mode 4 systems the following indications should be observed:

(6) APX-72.

(a) REPLY light should go on.

(b) Audio tone should be heard.

(c) If the above indications do not occur, select the opposite code (A or B) and repeat the check.

(7) APX-100.

(a) REPLY light should go on.

(b) If the REPLY light does not illuminate and/or the audio tone is heard, select the opposite code (A

or B) and repeat check.

(8) If the aircraft transponder does not respond correctly to ground test interrogation, the IFF caution light should illuminate. If there is any indication of an unsatisfactory test, MODE 4 shall not be used.

c. Zeroizing. Mode 4 codes may be zeroized by either of the following methods:

(1) CODE switch—ZERO.

(2) MASTER switch—OFF. If the switch is returned to NORMAL within about 20 seconds, zeroizing may not occur.

(3) Aircraft electrical power—OFF. If the IFF CODE HOLD switch (on the instrument panel) is at HOLD and the CODE switch has been moved to HOLD 20 seconds prior to removing electrical power, zeroizing will not occur in (1) and (2) above.

d. Before Takeoff. IFF CODE HOLD switch (on the instrument panel)—OFF.

e. Engine Shutdown.

(1) If MODE 4 codes are to be held (not zeroized):

(a) IFF CODE HOLD switch (on the instrument panel)—HOLD.

(b) CODE switch—HOLD and release at least 20 seconds prior to moving MASTER switch to OFF or removing all electrical power.

(2) If MODE 4 codes are to be zeroized, use any of the zeroizing methods.

3-28. Altitude Encoder/Pneumatic Altimeter AAU-32/A

a. Description. The AAU-32/A pneumatic counter-drum-pointer altimeter is a self-contained unit which consists of a precision pressure altimeter combined with an altitude encoder (fig. 3-26). The display indicates and the encoder transmits, simultaneously, pressure altitude reporting. Altitude is displayed on the altimeter by a 10,000 foot counter, a 1,000 foot counter and a 100 foot drum. A single pointer indicates hundreds of feet on a circular scale, with 50 foot center markings. Below an altitude of 10,000 foot a diagonal warning system will appear on the 10,000 foot counter. A barometric pressure setting knob is provided to insert the desired altimeter setting in inches of Hg. A dc powered vibrator operates inside the altimeter whenever the

aircraft power is on. If dc power to the altitude encoder is lost, a warning flag placarded CODE OFF will appear in the upper left portion of the instrument face indicating that the altitude encoder is inoperative and that the system is not reporting altitude to ground stations. The CODE OFF flag monitors only the encoder function of the altimeter. It does not indicate transponder condition. The AIMS altitude reporting function may be inoperative without the AAU-32/A CODE OFF flag showing, in case of transponder failure or improper control settings. It is also possible to get a "good" MODE C test on the transponder control with the CODE OFF flag showing. Display of the CODE OFF flag only indicates an encoder power failure or a CODE OFF flag failure. In this event, check that dc power is available and that the circuit breakers are in. If the flag is still visible, radio contact should be made with a ground radar site to determine whether the AIMS altitude reporting function is operative, and the remainder of the flight should be conducted accordingly.

b. Operation.

(1) *Normal Operation.* The AIMS altimeter circuit breaker should be closed prior to flight. The Mode C switch (M-C) on the transponder control should be switched to ON for altitude reporting during flight. The AAU-32/A altimeter indicates pneumatic altitude reference to the barometric pressure level as selected by the pilot. At ambient pressure, altimeters should agree with ± 70 feet of the field elevation when the proper barometric pressure setting is set in the altimeter. If there is an error of greater than ± 70 feet, do not use the altimeter for IFR flight. A red flag marked CODE OFF is located in the upper left portion of the altimeters face. In order to supply Mode C information to the IFF transponder, the CODE OFF flag must not be visible. A vibrator, powered by the dc essential bus, is contained in the altimeter and requires a minimum of one minute warmup prior to checking or setting the altimeter.

(2) *Abnormal Operation.*

(a) If the altimeters internal vibrator becomes inoperative due to internal failure or dc power failure, the pointer and drum may momentarily hang up when passing from 9 through 0 (climbing) or from 0 through 9 (descending). This hang-up will cause lag, the magnitude of which will depend on the vertical velocity of the aircraft and the friction in the altimeter. Pilots should be especially watchful for this type failure when the minimum approach altitude lies within the 8-1 part of the scale (800 to 1100, 1800 to 2100, etc.).

(b) If the CODE OFF flag is visible, the dc power is not available, the circuit breaker is not in, or there is an internal altimeter encoder failure.

(c) If the altimeter indicator does not correspond within 70 feet of the field elevation (with proper local barometric setting) the altimeter needs zeroing or there has been an internal failure.

(d) If the baroset knob binds or sticks, abnormal force should not be used to make the setting as this may cause internal gear failure resulting in altitude errors. Settings can sometimes be made by backing off and turning at a slower rate.

3-29. Proximity Warning System YG-1054

a. Description. The proximity warning transponder, control panel located at the forward left side of the pedestal, operates at frequency 5.08 GHz. The system provides audio and visual intruder indications of similarly equipped aircraft within 5,000 feet laterally and 300 feet vertically. Vertical operation is influenced by barometric pressure from the helicopters pitot static tube.

b. Controls and Functions. Refer to figure 3-27.

c. Operation.

- (1) POWER switch—ON.
- (2) Test—CONFIDENCE TEST.
- (3) RANGE SELECT—As desired.
- (4) LIGHT INTENSITY—As desired.
- (5) AUDIO—Adjust.
- (6) POWER—OFF.

3-30. Radar Warning Set

a. Description. The radar warning set AN/APR-39 provides the pilot with visual and audible warning when a hostile fire-control threat is encountered. The equipment responds to hostile fire-control radars but nonthreat radars are generally excluded. The equipment also receives missile guidance radar signals and, when the signals are time-coincident with a radar tracking signal, the equipment identifies the combination as an activated hostile surface to air (SAM) radar system. The visual and aural displays warn the pilot of potential threat so that evasive maneuvers can be initiated.

Caution

To prevent damage to equipment, do not operate the AN/APR-39 within 60 yards of a ground based radar antenna.

b. Controls and Functions. Refer to figure 3-29.

c. Operation.

(1) System Operation.

(a) PWR switch—ON

(b) AUDIO control—Adjust.

(c) Intensity control—Adjust.

(d) NIGHT—DAY control—Adjust.

(2) Self-Test Operation.

(a) DSCRM switch—ON.

(b) Press SELF TEST switch, verify that within approximately three seconds the indicator displays a forward (0 degrees) or aft (180 degrees) strobe and an audio tone is heard.

(c) Approximately three seconds later, the opposite strobe should appear and the audio tone becomes stronger.

(3) Stopping Procedure. PWR switch—OFF.

3-31. V Radar Altimeter—AN/APN-209

a. Description. The radar altimeter set is a high resolution pulse radar that provides an indication of absolute clearance over all types of terrain. The set consists of the following: a panel mounted height indicator receiver transmitter (located on copilot instrument panel); a panel mounted remote height indicator (located on pilot instrument panel) and two flush mounted antennas on the underside of the helicopter. The controls and displays of the height indicator receiver-transmitter (IRT) and the remote height indicator (RI) are identical (see fig 3-27). Absolute altitude is displayed by a pointer and a digital readout. The pointer operates against a fixed dial and indicates tens of feet between 0 to 200 feet, and hundreds of feet between 200 to 1500 feet. Above 1500 feet the pointer is driven behind a mask. The digital display has a four digit readout. The readout is displayed in one foot increments up to 255 feet. At 256 feet the display is rounded up to 260 feet. Between 260 and 1500 feet the readout is displayed in tens of feet. The LO SET control knob functions as the on-off switch and is the low altitude trip point adjustment. Clockwise rotation turns the set on. Continuing a clockwise rotation provides for


the setting of the low altitude bug. The HI SET control knob provides for the setting of the high altitude bug. Depressing the HI SET control knob places the altimeter set in the self-test mode. The IRT sends a simulated signal of 1000 feet to both indicators. The indicators display the information via the pointer and digital readout. Whenever the indicated altitude drops below the low altitude bug setting the LO altitude warning lamp is activated. Whenever the indicated altitude goes above the high altitude bug setting, the HI altitude warning lamp is activated. When the LO SET control knob is turned to OFF, or during periods of unreliable operation, the OFF flag comes into view.

(b) Operation. The following procedures apply to both indicators (IRT on copilot instrument panel, and RI on pilot instrument panel). Accomplish procedures using controls on each indicator.

(1) Initial Operation. Turn the IRT and RI on by turning the LO SET control knob clockwise. Set the low altitude warning bug to 80 feet by turning LO SET control knob clockwise. Set the high altitude warning bug to 800 feet by turning the HI SET control knob clockwise. The indicators should display a track condition within two minutes from the time indicator was turned on. The OFF flag should disappear from view; the pointer read 0 to 3 feet; the digital display -0 to +3 feet; and the LO warning lamp illuminate. Press and hold the HI SET control knob (push to test operation). The indicator pointer should read 1000 ± 175 feet; the digital display $1,000 \pm 100$ feet; the LO warning lamp should be off and the HI warning lamp on.


(2) Normal Operation. Adjust LO SET control knob to desired setting for low altitude warning bug. The LO warning lamp will illuminate when indicated altitude drops below this setting. Adjust HI SET control knob to desired setting for high altitude warning bug. The HI warning lamp will illuminate when indicated altitude goes above the high altitude warning bug setting. For daylight operations, set the pilot instrument lighting control (overhead console) to OFF. This setting provides lighting at full brightness to the warning lamps and digital displays on both indicators. Turning the instrument lighting controls (pilot and copilot) controls clockwise dims the indicator lighting. In the event of loss of track due to helicopter attitude (30 degrees pitch or 45 roll) or to operation beyond the range of the altimeter, the altitude pointer swings behind the no-track mask and the digital readout is totally blanked. In addition, the OFF flag comes into view.

(3) Stopping Procedure. Turn LO SET control knob (on each indicator) fully counterclockwise.

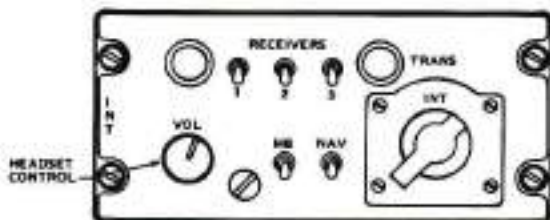


CONTROL/INDICATOR	FUNCTION
Receive switches	The switches marked 1, 2, 3 MB and NAV are for connecting or disconnecting receiver audio signals to the associated headset. The up position is on and connects the receiver. The down position is off and disconnects the receiver. The number 1 switch is for the FM receiver, number 2 switch is for the UHF receiver and switch number 3 is for the VHF receiver when installed. The switch marked MB connects audio from the marker beacon receiver, and the switch marked NAV connects audio from the ADF or VHF navigation receivers.
TRANS selector switch	This is a rotary type switch with indicator window at the top. The switch has four positions, INT, 1 (FM), 2 (UHF), and 3 (VHF). Positions 1, 2, and 3 select the receiver-transmitter to be used to receive or transmit regardless of the position of the RECEIVERS 1, 2, 3 switches. The INT position connects signal distribution panels for interphone operation. The operator will hear side tone when transmitting. The other crewmember will hear the interphone message regardless of the position of their TRANS selector switch.
VOL control	Adjusts the volume level of the audio applied to the headset associated with the INT signal distribution panel.

Figure 3-1. Signal Distribution Panel SB-329/AR

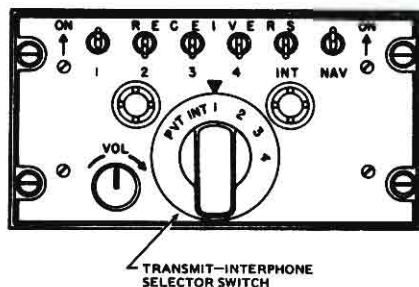

CONTROL	FUNCTION
RECEIVERS switches 1 (FM), 2 (UHF), 3 (VHF), and 4 (#2 FM/HF)	Turns audio from associated receiver ON or OFF.
INT switch	ON position enables operator to hear audio from the interphone.
NAV switch	ON position enables operator to monitor audio from the navigation receiver.
VOL control	Adjusts audio on receivers except NAV receivers.
Transmit-interphone selector switch	Positions 1 (FM), 2 (UHF), 3 (VHF), 4 (#2 FM/HF) and INT permits INT or selected receiver-transmitter to transmit and receive. The cyclic stick switch or foot switch must be used to transmit. PVT position keys interphone for transmission.


Figure 3-2. Signal Distribution Panel C-1611/AIC

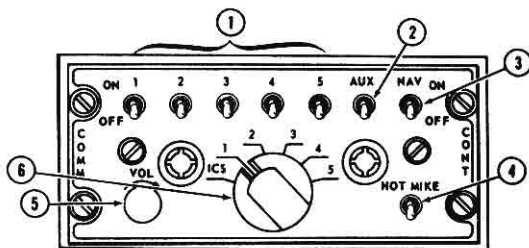

CONTROL/INDICATOR	FUNCTION
1. Receiver Switches 1 — FM No. 1 ARC-54 or ARC-131 2 — UHF ARC-51BX 3 — VHF ARC-115 4 — HF ARC-102 5 — FM No. 2 ARC-114	Connect (ON) or disconnect OFF) communications receivers from the headsets.
2. AUX Receiver Switch	Connects (ON) or disconnects (OFF) VOR omni receiver ARN-82 from the headset.
3. NAV Receiver Switch	Connects (ON) or disconnects (OFF) ADF navigation receiver ARN-83 from the headset.
4. HOT MIKE Switch	Permits hand-free intercommunications with transmit-interphone selector in any position.
5. VOL Control	Adjusts volume from receivers. Adjusts intercommunications volume.
6. Transmit-Interphone Selector 1 — FM No. 1 ARC-54 or ARC-131 2 — UHF ARC-51BX 3 — VHF ARC-115 4 — HF ARC-102 5 — FM No. 2 ARC-114 ICS	Selects transmitter to be keyed and connects microphone to transmitters. Connects the microphone to the intercommunications system only, disconnecting microphone from transmitters.

Figure 3-3. Signal Distribution Control Panel (C-6533/ARC)


1. Mode selector
2. Preset channel control
3. Function select switch
4. 0.05 megahertz control
5. 1 megahertz control
6. 10 megahertz control

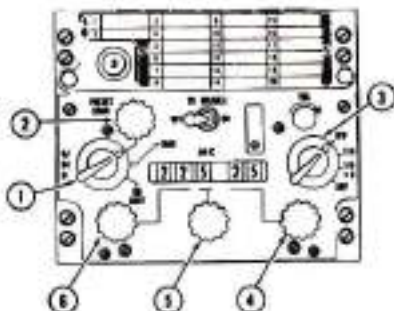

CONTROL/INDICATOR	FUNCTION
Function select switch	Applies power to radio set and selects type of operation as follows: OFF position — Removes operating power from the set. T/R position — Transmitter and main receiver ON. T/R + G position — Transmitter, main receiver and guard receiver ON. ADF position — Energizes UHF-DF system when installed.
VOL control	Controls the receiver audio volume.
SQ DISABLE switch	In the ON position squelch is disabled. In the OFF position, the squelch is operative.
Mode selector	Determines the manner in which the frequencies are selected as follows: PRESET CHAN position — Permits selection of one of 20 preset channels by means of preset channel control. MAN position — Permits frequency selection by means of megacycle controls. GD XMIT position — Receiver-transmitter automatically tunes to guard channel frequency (243.00 MHz).
PRESET CHANNEL	Permits selection of any one of 20 preset channels.
Preset channel indicator	Indicates the preset channel selected by the preset channel control.
Ten megahertz control	Selects the first two digits (or ten-megahertz number).
One megahertz control	Selects the third digit (or one-megahertz number).
Five-hundredths megahertz control	Selects the fourth and fifth digits (or 0.05 megahertz number).

Figure 3-4. UHF Control Panel C-6287/ARC-51BX


1. Frequency selector (first two digits)
2. Frequency selector (third digit)
3. Frequency selector (fourth digit)
4. Function selector switch

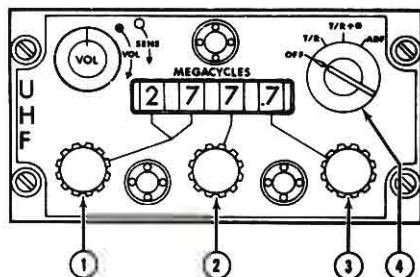

CONTROL/INDICATOR	FUNCTION
Function select switch	Applies power to the radio and selects type of operation as follows: OFF position — Removes operating power from radio set. T/R position — Applies power to the set and permits transmission and reception; guard receiver is not operative. T/R + G position — Permits transmission and reception; guard receiver is operative. ADF position — Not used.
VOL control	Controls the receiver audio volume.
SENS control	Adjusts main receiver sensitivity. When rotated fully clockwise the control disables the squelch.
Ten-megahertz control	Selects the first two digits (or ten-megahertz number).
One-megahertz control	Selects the third digit (or one-megahertz number).
One-tenth megahertz control	Selects the fourth digit (or tenth-megahertz number).


Figure 3-5. UHF Control Panel C-4677/ARC-51X

1. Function selector switch
2. Frequency selector (first two digits)
3. Frequency selector (third digit)
4. Frequency selector (fourth digit)

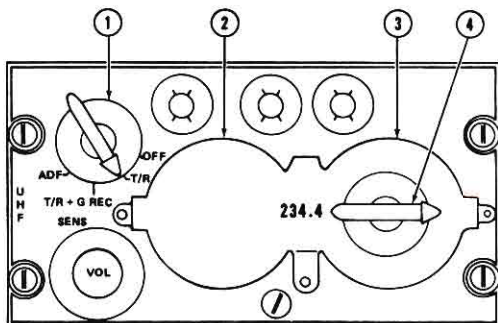

CONTROL/INDICATOR	FUNCTION
Selector switch	Applies power to the radio set and selects the mode of operation. OFF position — turns off primary power. T/R position — transmitter and main receiver are on. T/R + G REC position — transmitter, main receiver and guard receiver are on. ADF position — not used.
Volume sensitivity control	This is a dual purpose rotary control. The larger or outer knob is marked SENS, and controls receiver sensitivity. The smaller or inner knob is marked VOL, and controls receiver volume.
Tuning controls	The tuning controls consist of two large control knobs, an inner control knob, and an indicator window. The large knob on the left side selects the first two digits (or ten megahertz number). The large knob on the right side selects the third digit (or one megahertz number). The inner knob selects the fractional (or tenth megahertz number).


Figure 3-6. UHF Control Panel C-1827/ARC-55B

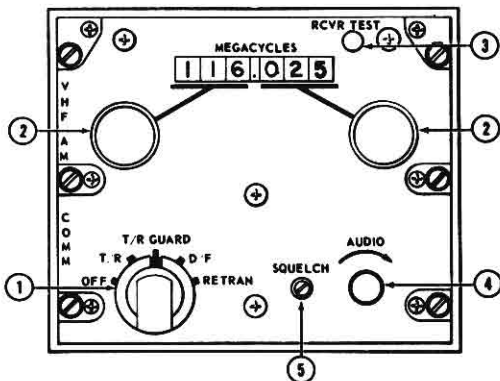

CONTROL/ INDICATOR	FUNCTION
1. Function Selector	
OFF	Power off.
T/R	Receiver — On; Transmitter — Standby.
T/R GUARD	Receiver — On; Transmitter — Standby; Guard Receiver — On.
	NOTE
	Reception on guard frequency is unaffected by frequencies selected for normal communications.
D/F	Not used.
RETRAN	Not used.
2. Frequency Selectors	
Left	Selects first three digits of desired frequency.
Right	Selects fourth, fifth and sixth digits of desired frequency.
3. RCVR TEST switch	When pressed, audible signal indicates proper receiver performance.
4. AUDIO control	Adjusts receiver volume.
5. SQUELCH control	Squelch control adjusted by maintenance personnel only.

Figure 3-7. Control Panel AN/ARC-115


1. Frequency indicator
2. Communication test switch
3. Volume control
4. Kilohertz selector
5. Off/power switch
6. Megahertz selector

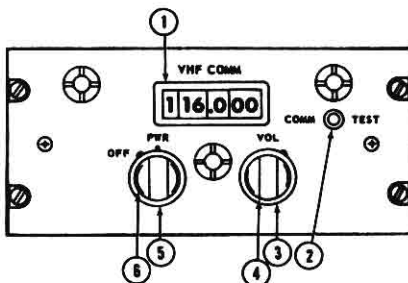

CONTROL/INDICATOR	FUNCTION
OFF-PWR switch	Turns power to the set ON-OFF.
VOL control	Controls the receiver audio volume.
COMM-TEST switch	Turns squelch on or off.
Megahertz control	Selects whole number part of operating frequency.
Kilohertz control	Selects the decimal number part of the operating frequency


Figure 3-8. VHF Control Panel C-7197/ARC-134

1. Megahertz control knob
2. Kiloherzt control knob

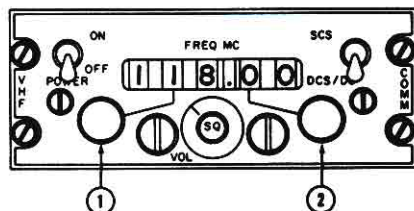

CONTROL/INDICATOR	FUNCTION
POWER switch	Turns primary power to the radio set ON or OFF
VOL control knob	Controls the receiver audio volume.
SQ control knob	Adjusts the squelch threshold level of the receiver output.
Megahertz control knob	Selects receiver and transmitter frequency in 1-mhz steps.
Kiloherzt control knob	Selects receiver and transmitter frequency in 50-khz steps.
FREQ MC indicator window	Indicates receiver and transmitter frequency selected.
SCS-DCS/DCD switch	Not used.


Figure 3-9. VHF Control Panel 614U-6/ARC-73

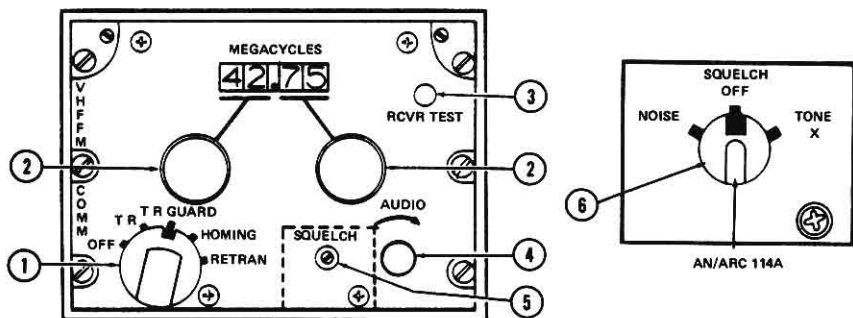

CONTROL/INDICATOR	FUNCTION
1. Function Selector	
OFF	Power Off
T/R	Receiver — On; Transmitter — Standby.
T/R GUARD	Receiver — On; Transmitter — Standby; Guard Receiver — On.
	NOTE
	Reception on guard frequency is unaffected by frequencies selected for normal communications.
HOMING	Not Used.
RETRAN	Activates the Retransmission Mode in Conjunction with Radio Set ARC-54 or ARC-131.
2. Frequency Selectors	
Left Selector	Selects first two digits of desired frequency
Right Selector	Selects third and fourth digits of desired frequency.
3. RCVR TEST	When pressed audible signal indicates proper receiver performance.
4. AUDIO	Adjusts receiver volume.
5. SQUELCH (ARC 114)	Squelch control adjusted by maintenance personnel only.
6. SQUELCH (ARC 114A)	
OFF	Disables squelch.
NOISE	Enables noise squelch.
TONE X	Enables tone squelch.

Figure 3-10. Control Panel AN/ARC-114 and AN/ARC-114A


1. Tens megahertz digit frequency selector
2. Frequency indicators
3. Units megahertz digit frequency selector
4. Tenths megahertz digit frequency selector
5. Frequency indicators
6. Hundredths megahertz digit frequency selector
7. Mode control switch

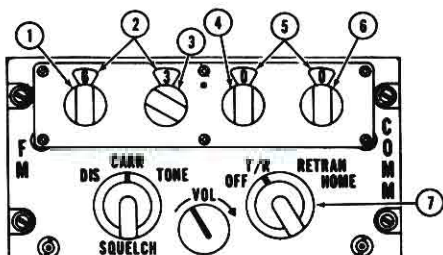

CONTROL/INDICATOR	FUNCTION
Mode control switch (four-position switch)	
OFF	Turns off primary power.
T/R (transmit/receive)	Radio set operates in normal communication mode (reception). (Aircraft transmit switch must be depressed to transmit.)
RETRAN (retransmit)	Radio set operates as a two-way relay station. (Two radio sets are required set at least 3 MHz apart.)
HOME	Radio set operates as a homing facility. (Requires a homing antenna and indicator.)
VOL control	Adjusts the audio output level of the radio set.
SQUELCH switch (three-position rotary switch)	
DIS (disable)	Squelch circuits are disabled.
CARR (carrier)	Squelch circuits operate normally in presence of any carrier.
TONE	Squelch opens (unsquelches) only on selected signals (signals containing a 150-cps tone modulation).
Frequency indicator	
Tens megahertz frequency selector	Selects the tens megahertz digit of the operating frequency.
Units megahertz frequency selector	Selects the units megahertz digit of the operating frequency.
Tenths megahertz frequency selector	Selects the tenths megahertz digit of the operating frequency.
Hundredths megahertz frequency selector	Selects the hundredths megahertz digit of the operating frequency.
Frequency indicator	Displays the operating frequency of the radio set.

Figure 3-11. FM Radio Set Control Panel AN/ARC-131

1. Frequency selector (first two digits)
2. Frequency selector (fifth digit)
3. Frequency selector (fourth digit)
4. Frequency selector (third digit)
5. Function selector switch

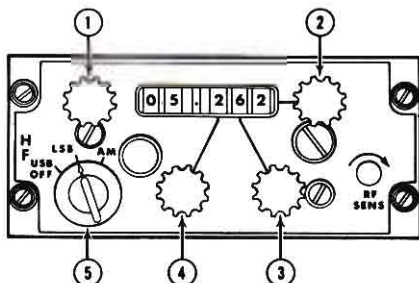


CONTROL/ INDICATOR	FUNCTION
Function selector switch (4-position rotary switch)	OFF position — Turns off primary power to the radio set. USB position — Energizes radio set for upper sideband mode of operation. LSB position — Energizes radio set for lower sideband mode of operation. AM position — Energizes radio set for amplitude modulation mode of operation.
Megahertz select knobs	Four knobs used to select the desired frequency as follows: Upper left knob selects the first two digits of the desired frequency. Left center knob selects the third digit. Right center knob selects the fourth digit. Upper right knob selects the last digit of the operating frequency.
RF SENS knob	Controls the receiver audio volume.

Figure 3-15. HF Radio Control Panel




CONTROL/ INDICATOR	FUNCTION
Band selector switch	Selects the desired frequency band.
TUNE control	Selects the desired frequency.
Tuning meter	Facilitates accurate tuning of the receiver.
GAIN control	Controls receiver audio volume.
Mode selector switch	Turns set OFF and selects ADF, ANT and LOOP modes of operation.
LOOP L-R switch	Controls rotation of loop left or right.
BFO switch	Turns BFO, on or off.

Figure 3-16. Direction Finder Control Panel ARN-63

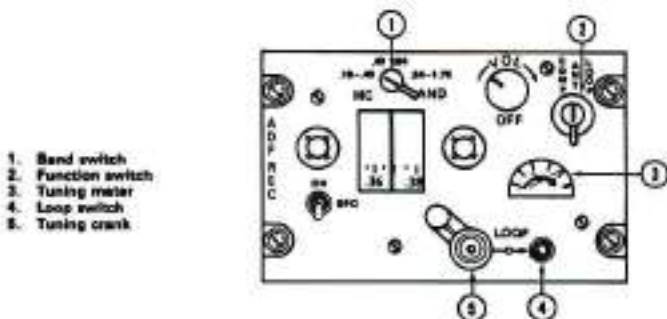


CONTROL/ INDICATOR	FUNCTION
MC BAND switch	Selects the desired frequency band.
VOL-OFF control	Turns direction finder set on or off and adjusts receiver audio volume.
Function switch	COMP position — Receiver operates on combined loop and sense antennas as a radio compass. ANT position — receiver operates with sense antenna. Loop position — receiver operates with loop antenna.
LOOP switch	Positions the loop antenna when the function switch is in either COMP or LOOP position.
Tuning crank	Tunes the receiver to the frequency of the received signal.
Tuning meter	Facilitates accurate tuning of the receiver.
BFO switch	Turns BFO ON or OFF.

Figure 3-17. ADF Control Panel ARN-59

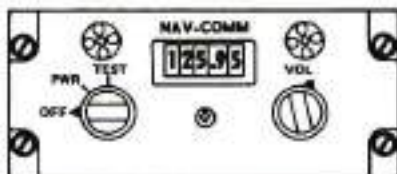


CONTROL/INDICATOR	FUNCTION
VOL control	Controls receiver audio volume.
Power switch	Turns primary power to the radio set and to the R-1863/ARN Marker Beacon/Glideslope Receiver ON or OFF. Allows for accuracy of Course Deviation Indicators and Marker Beacon indicator lamp in the TEST position.
Whole megahertz channel selector knob	This is the control knob on the left side. It is used to select the whole megahertz number of the desired frequency.
Fractional megahertz channel selector knob	This is the control knob on the right side. It is used to select the fractional megahertz number of the desired frequency.

Figure 3-18. Navigation Control Panel ARN-82

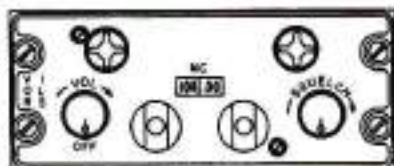


CONTROL/INDICATOR	FUNCTION
VOL-OFF switch	Turns primary power to the radio set ON or OFF and controls the receiver audio volume.
SQUELCH control	Controls receiver squelch circuit.
Whole megahertz control	Selects receiver and transmitter frequency in 1 MHz steps.
Fractional megahertz control	Selects receiver and transmitter frequency in 0.1 MHz steps.

Figure 3-19. VHF Navigation Receiver Control Panel ARN-30E

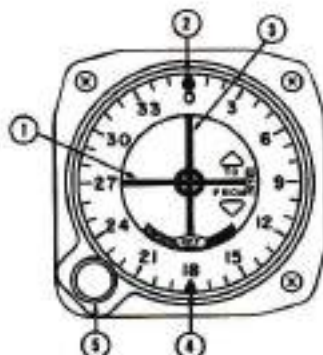

ID-43/ARN-30


1. Horizontal pointer
2. Reciprocal pointer
3. Vertical pointer
4. Course pointer
5. Course selector knob

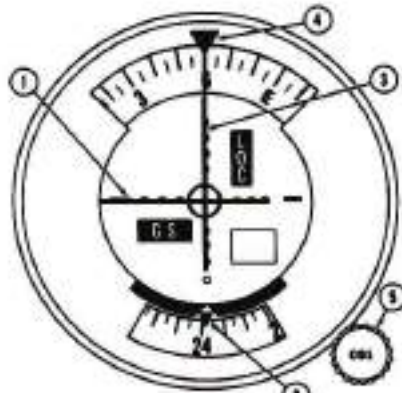

ID-1347/ARN-82


INDICATOR	FUNCTION
OFF vertical	Disappears when FM homing circuits are functioning properly. Remains in view when FM homing circuits are not functioning properly.
OFF horizontal flag	Disappears when homing circuits are functioning properly. Remains in view when FM homing circuits are not functioning properly. <u>NOTE: Do not use if either OFF flag is in view.</u>
Horizontal pointer	Indicate strength of FM homing signal being received. Deflects downward as signal strength decreases.
Vertical (reciprocal) pointer	Indicates when pointer is centered that helicopter is flying directly toward or away from the station. Deflection of the pointer indicates the direction (right or left) to turn to fly to the station.

Figure 3-20. Course Deviation Indicators ID-43/ARN-30 and ID-1347/ARN-82

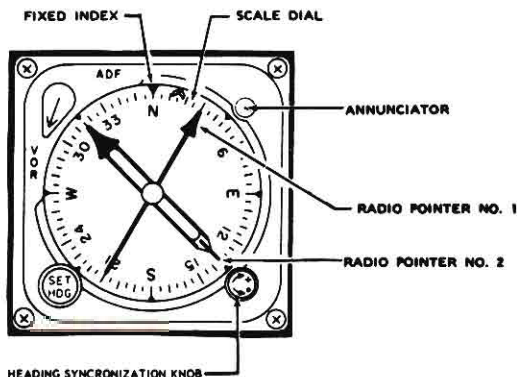


CONTROL/INDICATOR	FUNCTION
Pointer No. 1	Indicates course to ADF or VOR radio station.
Pointer No. 2	Indicates course to VOR station.
Synchronizing control	Is manually rotated to null annunciator and synchronize compass system.
SET HDG control	Moves the heading select cursor to desired heading.
Heading select cursor	Indicates desired heading.
ADF/VOR control	Selects ADF or VOR for pointer No. 1
Fixed index	Provides reference mark for rotating compass card.
Rotating compass card	Rotates under fixed index to indicate helicopter magnetic heading.
Annunciator	Show dot (●) or cross (×) to indicate misalignment (nonsynchronization) of compass system.
Power failure indicator (OFF) (flag)	Shows to indications loss of power to compass system.
Compass switch (located on pilots instrument panel)	MAG position slaved gyro mode DG position free gyro mode.

Figure 3-21. Gyromagnetic Compass Indicator (RMI)

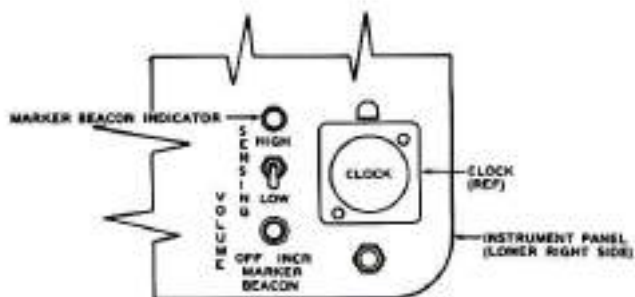


CONTROL/INDICATOR	FUNCTION
VOLUME OFF-INCR control	Turns set ON or OFF and adjusts volume.
SENSING switch	HIGH position — Increases sensitivity. LOW position — Decreases sensitivity.
Marker beacon indicator	Flashes when marker beacon receiver is operating and aircraft is passing over the ground transmitter.

Figure 3-22. Marker Beacon Controls

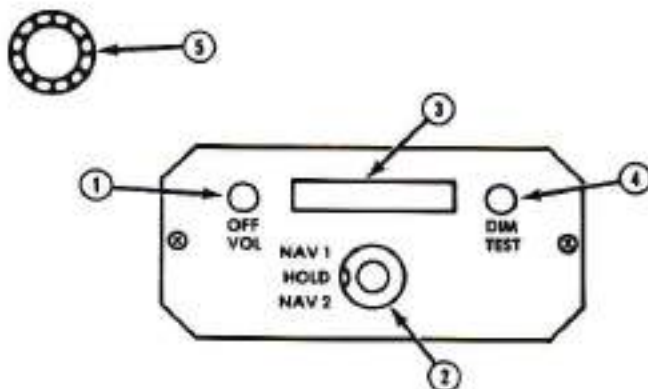

CONTROL	FUNCTION
1. OFF/VOL switch.	Controls powers to indicator and interrogator. Adjusts volume of audio identification (1350 Hz continuous tone).
2. NAV 1/HOLD/NAV 2 switch NAV 1 NAV 2 HOLD	Selects DME frequency controlled by VOR control panel C-5873B/ARN-32. When two VOR sets are installed, selects DME frequency controlled by No. 2 VOR. Holds DME frequency test selected by VOR control panel. Change of VOR frequency does not change DME frequency.
3. Distance Display	Digital readout indicating distance to DME station in hundreds, tens, units, and tenths of nautical miles.
4. DIM/TEST switch DIM TEST	Controls brightness of display lighting. Push test function provides digital readout of 0.0 or 0.1 in display window.
5. Hold light.	Lamp illumination indicates a DME frequency is in the hold mode.


Figure 3-23. DME Indicator ID-2192/ARN-124

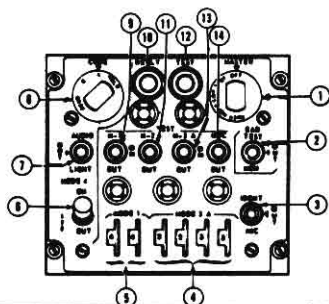

CONTROL/INDICATOR	FUNCTION
1. MASTER Control OFF STBY LOW NORM EMER	Turns set off. Places in warmup (standby) condition. Set operates at reduced receiver sensitivity. Set operates at normal receiver sensitivity. Transmits emergency reply signals to MODE 1, 2, or 3/A interrogations regardless of mode control settings.
2. RAD TEST — MON Switch RAD TEST MON OUT	Enables set to reply to TEST mode interrogations. Other functions of this switch position are classified. Enables the monitor test circuits. Disables the RAD TEST and MON features.
3. IDENT-MIC Switch IDENT OUT MIC	Initiates identification reply for approximately 25 seconds. Prevents triggering of identification reply. Spring loaded to OUT. Not used.
4. MODE 3/A Code Select Switches	Selects and indicates the MODE 3/A four-digit reply code number.
5. MODE 1 Code Select Switches	Selects and indicates the MODE 1 two-digit reply code number.
6. MODE 4 Switch ON OUT	Enables the set to reply to MODE 4 interrogations. Disables the reply to MODE 4 interrogations.

CONTROL/INDICATOR	FUNCTION
7. AUDIO-LIGHT Switch AUDIO LIGHT OUT	Enables aural and REPLY light monitoring of valid MODE 4 interrogations and replies. Enables REPLY light only monitoring of valid MODE 4 interrogations and replies. Disables aural and REPLY light monitoring of valid MODE 4 interrogations and replies.
8. CODE Control	Holds, zeroizes or changes mode 4 code.
9. M-1 Switch ON OUT TEST	Enables the set to reply to MODE 1 interrogations. Disables the reply to MODE 1 interrogations. Provides test of MODE 1 interrogation by indication on TEST light.
10. REPLY Indicator	Lights when valid MODE 4 replies are present, or when pressed.
11. M-2 Switch ON OUT TEST	Enables the set to reply to MODE 2 interrogations. Disables the reply to MODE 2 interrogations. Provides test of MODE 2 interrogation by indication on TEST light.
12. TEST Indicator	Lights when the set responds properly to a M-1, M-2, M-3/A or M-C test, or when pressed. Note Computer, transponder must be installed before set will reply to a MODE 4 interrogation.
13. M-3/A Switch ON OUT TEST	Enables the set to reply to MODE 3/A interrogations. Disables the reply to MODE 3/A interrogations. Provides test of MODE 3/A interrogation by indication on TEST light.
14. M-C Switch ON OUT TEST	Used with AIMS altimeter. Enables set to reply to MODE C Interrogation. Disables reply to MODE C Interrogation. Enables TS-1843/APX to locally interrogate set.

Figure 3-24. Transponder Set AN/APX-72

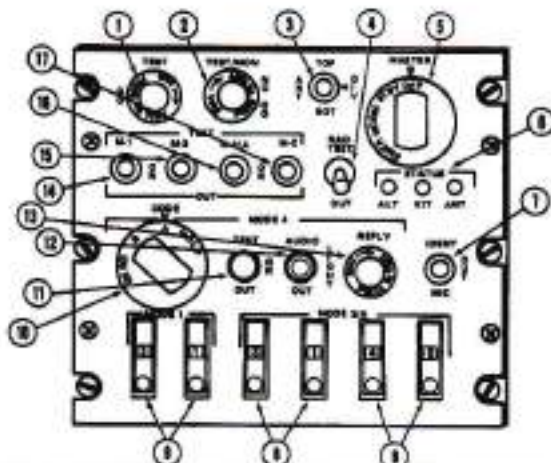

CONTROL/INDICATOR	FUNCTION
1. TEST GO	Indicates successful built in test (BIT).
2. TEST/MON NO GO	Indicates unit malfunction.
3. ANT TOP BOT DIV	Selects antenna located on top of helicopter. Selects antenna located on bottom of helicopter. Monitor received signals from both antennas and allows transmission via antenna receiving the strongest signal.
4. RAD TEST switch RAD TEST OUT	Enables set to reply to TEST mode interrogations. Disables to RAD TEST features.
5. MASTER control OFF STBY NORM EMER	Turns set off. Places in warmup (standby) condition. Set operates at normal receiver sensitivity. Transmits emergency reply signal to MODE 1, 2, or 3/A interrogations regardless of mode control settings.
6. STATUS indicators ANT KIT ALT	Indicates that built in test (BIT) or monitor (MON) failure is due to high voltage standing wave ratio (VSWR) in antenna. Indicates that built in test (BIT) or monitor (MON) failure is due to external computer. Indicates that built in test (BIT) or monitor (MON) failure is due to altitude digitizer.

Figure 3-25. Transponder Set (AN/APX-100) Control Panel (Sheet 1 of 2)

CONTROL/INDICATOR	FUNCTION
7. IDENT-MIC switch IDENT OUT MIC	Initiates identification reply for approximately 25 seconds. Prevents triggering of identification reply. Spring loaded to OUT. Not used.
8. MODE 3/A code select switches	Selects and indicates the MODE 3/A four-digit reply code number.
9. MODE 1 code select switches	Selects and indicates the MODE 1 two-digit reply code number.
10. MODE 4/CODE control HOLD/A/B/ZERO	Selects condition of code changer in remote computer
11. MODE 4 TEST switch TEST ON OUT	Selects MODE 4 BIT operation. Selects MODE 4 ON operation. Disables MODE 4 operation.
12. MODE 4 AUDIO/LIGHT control AUDIO LIGHT OUT	MODE 4 is monitored by audio. MODE 4 is monitored by a light. MODE 4 not monitored.
13. MODE 4/REPLY	Indicates that a MODE 4 reply is generated.
14. TEST/M-1 TEST/ON/OUT	Selects ON, OFF or BIT of MODE 1 operation.
15. TEST/M-2 TEST/ON/OUT	Selects ON, OFF, or BIT of MODE 2 operation.
16. TEST/M-3/A TEST/ON/OUT	Selects ON, OFF, or BIT of MODE 3/A operation.
17. TEST/M-C TEST/ON/OUT	Selects ON, OFF, or BIT of MODE C operation.

Figure 3-25. Transponder Set (AN/APX-100) Control Panel (Sheet 2 of 2)

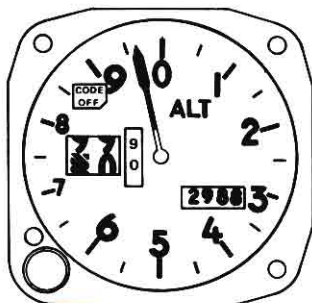


Figure 3-26. AAU-32/A Altitude Encode/Pneumatic Altimeter



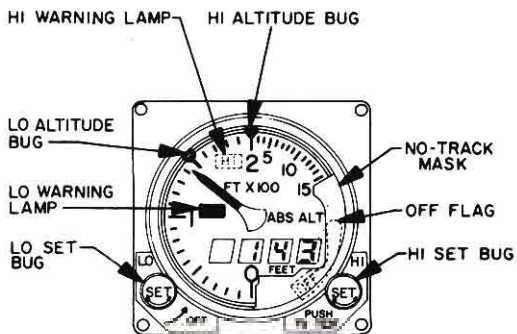


Figure 3-27. AN/APN-209 Radar Altimeter (V)

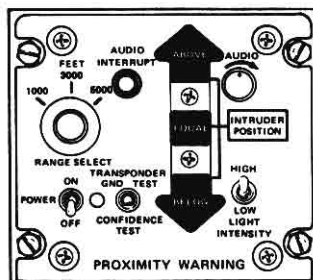

CONTROL/INDICATOR	FUNCTION												
POWER ON/OFF switch	Controls 28Vdc power to system												
POWER lamp	Indicates when 28Vdc power is applied to system												
RANGE SELECT switch	Sets range gate circuitry to accept a reply signal within selected distances												
AUDIO INTERRUPT push button switch	Silences audio alarm signal for approximately one minute												
INTRUDER POSITION indicator lamps	Flash singly or in combination to indicate position of intruder as follows:												
	<table> <thead> <tr> <th>FLASHING LAMP(S)</th><th>RELATIVE INTRUDER POSITION</th></tr> </thead> <tbody> <tr> <td>ABOVE</td><td>Between 110 and 300 feet above</td></tr> <tr> <td>ABOVE and EQUAL</td><td>Between 80 and 110 feet above</td></tr> <tr> <td>EQUAL</td><td>Between 80 feet above and 80 feet below</td></tr> <tr> <td>EQUAL and BELOW</td><td>Between 80 and 110 feet below</td></tr> <tr> <td>BELOW</td><td>Between 110 and 300 feet below</td></tr> </tbody> </table>	FLASHING LAMP(S)	RELATIVE INTRUDER POSITION	ABOVE	Between 110 and 300 feet above	ABOVE and EQUAL	Between 80 and 110 feet above	EQUAL	Between 80 feet above and 80 feet below	EQUAL and BELOW	Between 80 and 110 feet below	BELOW	Between 110 and 300 feet below
FLASHING LAMP(S)	RELATIVE INTRUDER POSITION												
ABOVE	Between 110 and 300 feet above												
ABOVE and EQUAL	Between 80 and 110 feet above												
EQUAL	Between 80 feet above and 80 feet below												
EQUAL and BELOW	Between 80 and 110 feet below												
BELOW	Between 110 and 300 feet below												
AUDIO control	Varies the volume of the audio tone												
LIGHT INTENSITY switch	Switches INTRUDER POSITION and POWER indicator lamps to LOW or HIGH intensity												
TRANSPONDER TEST switch	In TRANSPONDER GND TEST position, permits unit to accept signals from ground transponder. In CONFIDENCE TEST position, switch initiates confidence test												

Figure 3-26. Proximity Warning Panel

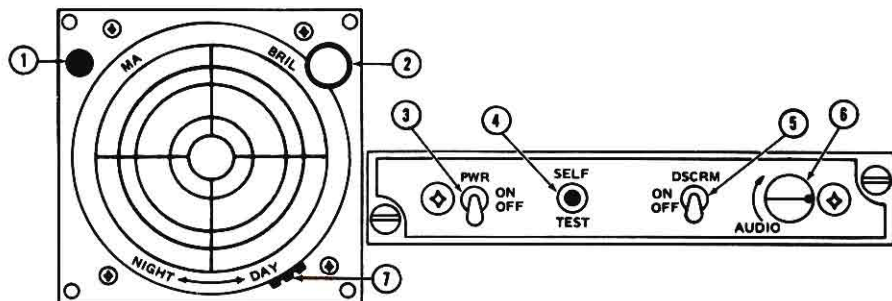

CONTROL/INDICATOR	FUNCTION
1. MA Indicator	Flashing indicates high radar missile threat with DSCRM switch in ON.
2. BRIL Control	Adjusts indicator illumination.
3. PWR Switch: ON OFF	Applies power to radar set. De-energizes radar set.
4. SELF-TEST Switch: With DSCRM Switch OFF With DSCRM Switch ON	No indications. One strobe appears at the top or bottom and primary (normal) audio tone is heard. After short delay, a second strobe will appear 180 degrees from the initial strobe. After another short delay, MA light will start flashing and audio warning (wailing) tone is heard.
5. DSCRM Switch: OFF ON	Without missile activity — Provides strobe lines for ground radar and normal audio indications. With missile activity — Provides strobe lines for ground radar, flashing strobe line(s) for missile activity, and flashing MA (missile alert) light. Without missile activity — No indications. With missile activity — Flashing strobe lines for missile activity (no strobe lines for ground radar), flashing MA light, and audio warning (wailing) tone.
6. AUDIO Control	Adjusts radar warning audio volume.
7. NIGHT-DAY Control	Adjust indicator intensity.

Figure 3-29. Radar Warning System

Chapter 4

Mission Equipment

Section I. ARMAMENT

4-1. Armament Subsystem M23 The armament subsystem M23 is attached to external stores hard point fittings on both sides of the helicopter. The two flexible 7.62 millimeter machine guns M60D are free pointing but limited in traverse, elevation, and depression by cam surfaces and stops on pintleless and pintle post assemblies of the two mount assemblies on which the M60D machine guns are mounted. An ejection control bag is latched to the right side of each M60D machine gun to hold the spent cases, unfired rounds and links. Cartridges travel from ammunition box and cover assemblies to M60D machine gun through flexible chute and brace assemblies. The following paragraphs describe machine gun M60D components.

a. Cover Latch. The cover latch is located at the right rear of the cover assembly. In the vertical position it secures cover assembly in closed position. Turning to horizontal position unlocks cover assembly.

b. Barrel Lock Lever. The barrel lock lever, located at right front of receiver, is secured to barrel locking shaft and rotates shaft to lock or unlock barrel assembly.

WARNING

Cocking handle assembly shall be returned to the forward or locked position before firing to prevent injury to personnel.

c. Cocking Handle Assembly. The cocking handle assembly, at right front of receiver, is used for manually charging the weapon.

d. Safety. The safety, located at lower front of receiver, consists of a cylindrical pin with a sear clearance cut which slides across receiver to block the sear and prevent accidental firing. Ends of pin are marked for pushing to "S" safe and "F" firing positions.

WARNING

Pressing the trigger to release the bolt assembly also accomplishes feeding and releases the firing mechanism. Weapon shall be cleared of cartridges before pressing trigger assembly, unless firing is intended.

e. Grip and Trigger Assembly. The grip and trigger assembly includes the spade grips and is located at rear of receiver. The U-shaped design permits firing of weapon by index finger of either hand.

Caution

When ammunition is not present in machine gun M60D, retard forward force of released bolt assembly by manually restraining forward movement of cocking handle assembly to prevent damage to cartridge tray.

f. Magazine Release Latch. The magazine release latch, located on left side of receiver, locks adapter of the ammunition chute when it is seated in magazine bracket.

g. Ammunition Chute Adapter. The ammunition chute adapter is required for flexible chute installation.

4-2. Preflight Procedures—Machine Gun M60D

1. Gun—Secure—Stowed position.
 2. Barrel—Free of obstruction.
 3. Gas cylinder—Plug tight, safety-wired.
 4. Cover—Free movement, latch secure.
 5. Ejection control bag—Latched.
 6. Ammunition box—Latches and cover—Secure.
- Check cartridges for proper position in links.

7. Chute and brace—Secure.
8. Safety—Safe.
9. Mount—Check free pintle movement.
10. Ammunition boxes—Stowed.

4-3. Before Takeoff/Before Landing Procedure—Machine Gun M60D

1. Bolt—Retract, push handle forward.
2. Safety—Check safe.
3. Cover—Open.
4. Ammunition—Load.
5. Cover—Close, latch secure.

WARNING

Safety harness shall be worn by gunner and attached to helicopter during flight operations.

4-4. Before Leaving Helicopter Procedures—Machine Gun M60D Remove gun. Refer to TM 9-1005-224-10.

4-5. Emergency Procedures—Machine Gun M60D

WARNING

If a stoppage occurs, never retract bolt assembly and allow it to go forward again without inspecting chamber to see it is clear. Such an action strips another cartridge from the belt. If an unfired cartridge remains in the chamber, a second cartridge can fire the first and cause injury to personnel and/or weapon damage. One hundred fifty cartridges fired in a 2 minute period will make a barrel hot enough to produce a cookoff.

a. *Misfire.* A misfire is a complete failure to fire. It must be treated as a hangfire until possibility of a hangfire is eliminated.

b. *Hangfire.* A hangfire is a delay in functioning of the propelling charge. If a stoppage occurs, wait five seconds. Pull handle assembly to rear, ensuring operating rod assembly is held back.

c. *Double Feeding.* When a stoppage occurs with bolt assembly in forward position, assume there is

an unfired cartridge in the chamber. Treat this as a hangfire.

d. *Runaway Gun.* If gun continues to fire after trigger has been released, open cover and permit bolt to go underneath cartridge and stop in the forward position.

e. *Cookoff.* A cookoff is a functioning of any or all of the explosive components of a cartridge chambered in a very hot machine gun. If the primer or propelling charge should cookoff, the projectile may be propelled from the machine gun with normal velocity, even though no attempt was made to fire the primer, by actuating firing mechanism. In such a case, although there may be uncertainty as to whether or when the cartridge will fire, the precautions to be observed are the same as those prescribed for a "hangfire". To prevent a cookoff, a cartridge, which has been loaded into a very hot machine gun, should be fired immediately or removed within 5 seconds to 10 seconds.

4-6. Armament Subsystem M56 and M132 Mine Dispensing

a. The M56 mine dispensing subsystem is attached to external stores hardpoint fittings on both sides of the helicopter and is electrically or manually jettisonable in an emergency. The mine dispenser is designed to provide release of mines from the 40 canisters with application of current through the intervalometer, which is part of the dispenser electrical circuit. Total release of mines in all canisters is accomplished within a variable time span between each canister release, which is set by the pilot. A quick-release safe pin with an attached REMOVE BEFORE FLIGHT red flag is installed in the intervalometer to prevent accidental activation of the intervalometer before flight. A quick-release safe pin with an attached REMOVE BEFORE FLIGHT red flag is also installed in the pylon ejector rack to prevent the accidental dropping of the mines from the pylon. The subsystem consists of a bomb (mine) dispenser SUU-13D/A loaded with 40 mine canisters, each of which contains two anti-tank/anti-vehicle (AT/AV) mines and one mine ejection charge M198. The subsystem is used in conjunction with a dispenser control panel and a helicopter cable (harness) assembly (fig 4-1). A pallet, which is used for safety and handling purposes, attaches to the underside of the subsystem. The dispenser control panel allows the pilot to initiate mine dispensing, stop mine dispensing, control quantity of mines dispersed, set the time interval between the ejection of mines, and

electrically jettison the subsystems in an emergency. The dispenser is fired by pressing the FIRE button of the DISP control. The firing sequence will continue until the quantity of mines selected have been ejected from the dispenser. Anytime after FIRE button is pressed, the firing sequence may be terminated by resetting the SAFE-ARM switch to the center STBY (standby) position. When the switch is again set in the ARM position and the FIRE button is again pressed, a new firing sequence is initiated. The helicopter cable (harness) assembly provides connection of the dispenser control panel to the heated blanket receptacle and to the subsystem firing and jettison circuitry.

6. The subsystem M132 is used by helicopter crews for gaining experience in dispersing mines which simulate those in the M56 subsystem. The M132 consists of a dispenser SUU-130/A containing three practice mine canisters. Dispenser loading for a practice mining mission consists of three practice mine canisters loaded into each dispenser in firing locations 1, 20, and 40. The remaining 37 positions will be left empty. With the dispenser control panel mode selector switch set to PAIRS and the QUANTITY selector switch set to ALL, the dummy mines will be dispersed to land at the beginning, in the middle and at the end of the target area.

4-7. Preflight Procedures—M56 and M132 Mine Dispersing Subsystem

1. Pylons and supports—Secure.
2. Sway braces—Secure to dispenser pads.
3. Electrical connectors—Secure.
4. Wiring harness—Taped to pylon support.
5. Pallet—in place.

Caution

Connector marked with a plus (+) sign must be placed in the heater blanket receptacle properly.

6. Wiring harness—Connected to heater blanket receptacle.
7. HEATED BLANKET circuit breakers—in.
8. Wiring harness—Secure to cabin deck.

9. Press to test lights—Check.

10. HEATED BLANKET circuit breakers—Out.

4-8. Before Takeoff Procedures—M56 and M132 Mine Dispersing Subsystem

1. SAFE/STBY/ARM switch—SAFE.
2. Safety pallets—Remove.
3. Intervalometer safety pins—Remove.
4. Pylon safety pins—Remove.

4-9. Inflight Procedures—M56 and M132 Mine Dispersing Subsystem

1. HEATED BLANKET circuit breakers—in.
2. SAFE-STBY-ARM switch—STBY.
3. Mode selector switch—As desired.
4. QUANTITY selector switch—As desired.
5. INTERVAL selector switch—As desired. Switch shall be position 1 through 10.
6. SAFE-STBY-ARM switch—ARM.
7. FIRE button—Press.

4-10. Before Landing Procedures—M56 and M132 Mine Dispersing Subsystem

1. SAFE-STBY-ARM switch—SAFE.
2. HEATED BLANKET circuit breakers—Out.

4-11. Before Leaving Helicopter Procedures—M56 and M132 Mine Dispersing Subsystem

1. Subsystem—Check for unfired canisters.
2. Maintenance checks—Refer to TM 9-1345-201-12.

4-12. Emergency Procedures—Electrical—M56 and M132 Mine Dispersing Subsystem

1. HEATED BLANKET circuit breakers—Check in.
2. NON-ESS BUS switch—MANUAL ON.
3. FIRE button—Press.

4-13. Emergency Procedures—Fire—M56 and M132 Mine Dispersing Subsystem

1. JETTISON switch cover—Up.
2. JETTISON switch—Up.

4-14. Safety—M56 and M132 Mine Dispersing Subsystem

WARNING

Unfired canisters and mines accidentally released from subsystem will not be handled or moved.

1. Failure to fire—After completion of mission and a check of the subsystem reveals unfired canisters, install safety pallets and notify explosive ordnance disposal or other authorized personnel.
2. If dangerous explosive item is encountered, all operation in the immediate vicinity will be shut down, personnel evacuated to a safe location (800 foot radius) and explosive ordnance disposal or other authorized personnel notified to render assistance in elimination of the hazard.

3. Refer to TM 9-1345-201-12 for minimum safety standards and requirements.

4-15. M52 Smoke Generator Subsystem

WARNING

Never operate the smoke generating subsystem when the helicopter is on the ground and engine is operating.

The smoke generating subsystem basically consists of the oil tank assembly, pump and motor assembly, nozzle ring assembly, operating switch and fog oil level gage. The smoke generating subsystem discharges atomized fog oil into the hot exhaust gases of a helicopter jet engine. A dense white smoke is formed which settles rapidly to the ground when fog oil is released at altitudes less than 50 feet and airspeeds less than 90 knots. The tank capacity is 50 gallons (approximately) and provide approximately three minutes of smoke generator operation. The length of time the smoke screen will obscure enemy vision depends on wind conditions and the altitude at which the smoke is released. The operating switch is a hand-held push button switch, attached to the end of a six foot cable, suspended from the cabin roof and held by a clip near the center line of the roof structure. Its location is accessible to the pilot, copilot, or crewmembers. The tank level fog oil circuit

breaker is located in the overhead panel. The circuit breaker protects the pump and motor assembly. An oil level gage is mounted on the center post in the cockpit. The gage is marked from E (empty) to F (full) in 1/4 tank increments, to indicate the quantity of oil remaining in the oil tank. The prescribed fog oil is type SFG2 (Military Specification MIL-F-12070).

WARNING

Alternate fluids shall not be used in the oil tank.

Caution

Do not operate the smoke generating subsystem when there is no fog oil in the oil tank.

4-16. Preflight Procedures—M52 Smoke Generator Subsystem

1. Fluid—Check.
2. Pump and motor—Secure.
3. Hoses and connections—Leaks—Security.
4. Exhaust ring—Secure.
5. Electrical connections—Secure.

4-17. Before Takeoff—M52 Smoke Generator Subsystem

1. SMOKE GENERATOR circuit breaker—OUT.
2. The circuit breaker must be in to provide operating power to the pump and motor when the operating switch is activated.

4-18. Inflight Procedures—M52 Smoke Generator Subsystem

1. SMOKE GENERATOR circuit breaker—In.
2. Operating switch—Push—As desired. Smoke can be generated either continuously or in short bursts. Smoke generation will stop when the operating switch push button is released.

4-19. Before Landing—M52 Smoke Generator Subsystem SMOKE GENERATOR circuit breaker—Out.

4-20. Before Leaving Helicopter—M52 Smoke Generator Subsystem

1. System—check for leaks.

2. Ring—Condition and security.

Section II. CARGO HANDLING

4-21. Hoist Systems Two hoist systems are available for use with the helicopter. The hoists are similar in function but the operating characteristics for the rescue hoist and the high performance hoist must be addressed separately.

4-22. Rescue Hoist

WARNING

Rescue hoist is totally restricted from any live rescues, noncritical training and demonstrations. Pick up of dummy loads over uninhabited areas is authorized for training.

a. Description. Provisions have been made for the installation of an internal rescue hoist (fig 4-2). The hoist may be installed in any one of four positions in the helicopter cabin. The hoist installation consists of a vertical column extending from the floor structure to the cabin roof, a boom with an electrically powered traction sheave, and an electrically operated winch. Two electrical control stations for the operation of the rescue hoist are provided, one for the pilot, and one for the hoist operator. A control switch is located on the cyclic control stick and provides up and down operation of the hoist as well as positioning the boom (fig 2-5). A pendant control is provided for the hoist operator and contains a boom positioning switch and a toggle switch for hoist operation (fig 4-3). The pilot control will override the hoist operators control. A pressure cartridge cable cutter is provided with two guarded cable cutter switches. The pilots cable cutter switch is mounted on the pedestal and the hoist operators cable cutter switch is mounted on the top of the hoist control box (fig 4-4 and fig 4-5). The hoist has 256 feet of usable cable. The hoist cable is color coded as follows: The first 25 feet at the hook end is yellow, the next 175 feet is unpainted, the next 40 feet is yellow and the last 16 feet is red. Two limiting switches provide automatic stoppage to protect reel-in and reel-out limits of usable cable. The hoist operators intercom speaker is controlled by switch on the pendant and gives the hoist operator interphone communications with the flight crew.

NOTE

When an internal auxiliary fuel tank is installed, it shall be on the opposite side of the helicopter from the hoist. If a pair of auxiliary fuel tanks are installed, the fuel shall be used evenly from both tanks or used first from the tank that is on the same side as the hoist.

b. Rescue Hoist Operations.

(1) The rescue hoist is used to accomplish the lifting of 600 pounds of personnel when a landing cannot be made. The types of lifts usually required in the use of the rescue hoist are:

- (a) Pickups from wooded or obstructed areas.
- (b) Pickups from water.
- (c) Pickups from boats or ships where landings could not be accomplished.

Caution

The hoist should be operated in the full speed condition as slow speed operation will cause the motor to heat excessively.

(2) The hoist operator has variable speed controls for raising or lowering the cable. The further the down/up toggle is pushed from its neutral position, the faster the hoist will run.

c. Operating Data. The following general information is provided for use when operating rescue hoist.

- (1) Maximum load: 600 pounds for raising or lowering.
- (2) Usable cable length: 256 feet.
- (3) Limits: boom in and boom out—Preset limit switches in the actuator.

Up Limit—Trigger at end of boom (contacted by rubber bumper on the hook handwheel).

Down Limit—Switch (actuated when three wraps of cable remain on storage drum).

(4) Override—The pilot control will override the operator control.

d. *Weight and Balance Information.* Refer to Chapter 6.

4-23. Preflight Procedures—Rescue Hoist

The rescue hoist operator may be any certified crewmember designated that position as the mission dictates. Therefore, this duty should be thoroughly understood by all crewmembers.

1. BAT switch/external power—OFF.
2. Base of the hoist assembly positioned on the cabin floor stud.

Caution

Tighten the locknut only by hand. Excessive force may result in damage to the cabin roof.

3. Top of the hoist assembly aligned to the roof stud and locknut tightened.
4. Stud adapters—Installed on actuator plate and secured.
5. Actuator lever—Positioned and secured.
6. Actuator—Installed and secured.
7. Power cable—Connected.
8. Hoist boom retaining pin—Removed.

WARNING

Failure to install the hoist boom retaining pin properly (in center hole) could result in boom failure.

9. Hoist boom—Positioned and retaining pin in stalled.
10. Pressure cartridge—Installed.
11. Pilot CABLE CUT switch guard—Down and safetied.
12. Hoist operator CABLE CUT switch guard—Down and safetied.

13. RESCUE HOIST CABLE CUTTER circuit breaker—In.

14. RESCUE HOIST CONT circuit breaker—In.

15. RESCUE HOIST POWER circuit breaker—In.

16. BAT switch or external power—ON.

17. NON-ESS bus switch—MANUAL.

18. Cabin door by rescue hoist—Full open.

19. Pilot rescue hoist switch—Check.

20. Right—Boom pivots outward to the fully extended position. Should just clear upper doorframe.

21. Neutral—Boom remains in the fully extended position.

WARNING

Rescue hoist traction sheave will be operational prior to usage of the rescue hoist.

22. Operation of the traction sheave can be effectively determined during the required daily check (or preflight check) by the following: Lower the hook one or two feet from the boom. Support the weight of the hook to prevent any tension or pull on the cable. Activate the DOWN switch while observing the cable action. If the traction sheave is not working properly, slack will be indicated in the cable between the cable pulleys and the base of the boom along the hoist post. If the traction sheave is operational, slack will be indicated between the supported hook end and the end of the boom. The cable between the pulleys along the post should always remain under tension. If the traction sheave is not working, the hoist shall not be used until it is repaired and the cable condition and routing verified as serviceable.

23. DOWN—Cable extends.

24. Neutral—Cable holds position.

25. UP—Cable retracts.

26. IN—Boom pivots inward to the stowed position.

27. Hoist operator pendant—Check.

28. BOOM switch—OUT (boom pivots outward to the fully extended position).

Caution

Operate hoist normally at full speed to avoid excessive heating of motor and gearbox. Use slow speed near either end of travel. Switch boom—Check condition and centers switch when pressure is released. Wear gloves while handling cable. The Hoist Operator Pendant check requires an additional crewmember to maintain cable tension and prevent damage to the hoist cable. Do not drag, kink, or crush cable.

29. Pendant cable control switch—Flight and DOWN. (Cable extends.)

30. Hoist oil level sight gauge—Check.

31. Down limit switch—Check.

WARNING

Cable condition is critical; no broken strands allowed.

32. Hoist cable—Check condition and drum attachment.

33. Pendant cable control switch—Up and left (cable retracts).

WARNING

Up limit switch must function and be adjusted properly or hoist cable failure may result.

34. Up limit switch—Check.

35. BOOM switch—IN (boom pivots inward to the stowed position).

36. Audio control panel—Check.

37. KS position—Check.

38. Hot mike position—Check.

39. RESCUE HOIST CABLE CUTTER circuit breaker—Out.

40. RESCUE HOIST CONT circuit breaker—Out.

41. RESCUE HOIST POWER circuit breaker—Out.

42. Battery switch/external power—OFF.

43. Gunner harness—Check condition.

44. Forest penetrator and other equipment—OFF.

4-24. Before Takeoff—Rescue Hoist

1. RESCUE HOIST CABLE CUTTER circuit breaker—Out.

2. RESCUE HOIST CONT circuit breaker—Out.

3. RESCUE HOIST POWER circuit breaker—Out.

4-25. Inflight Procedures—Pilot—Rescue Hoist

1. Check RESCUE HOIST CABLE CUTTER, RESCUE HOIST CONT, and RESCUE HOIST POWER circuit breakers are in.

2. Pilot CABLE CUT switchguard—Down and safed.

3. Establish zero ground speed over pick-up location.

4. Move hoist control, on cyclic stick, to right to swing boom outboard. Pilot controls will override the hoist operator control inputs; however, the pilot has only a single speed capability.

5. Move hoist control switch down to lower hook and handwheel assembly. Hoist cable is painted at each end to provide visual indication of cable footage that is extended. The hoist cable is lowered approximately 150 feet per minute and is retracted approximately 120 feet per minute (table 4-1).

Table 4-1
Operation Limitations—Hoist

255 Foot Cable

Weight	Cycles	Notes
Lower 250 lbs. Raise 250 lbs.	3	1, 3, and 4
Lower 0 lbs. Raise 250 lbs.	4	1, 2, and 3
Lower 5 lbs. Raise 400 lbs.	4	1 and 3
Lower 450 lbs. Raise 0 lbs.	3	1 and 3
Lower 0 lbs. Raise 600 lbs.	3	1 and 3
Lower 600 lbs. Raise 0 lbs.	3	1 and 3

NOTES:

1. One cycle equals one complete lowering and raising of the 255 foot usable cable.

2. Equivalent to lowering a medical attendant and raising nine patients with the attendant.

3. Thirty-second rest period at the end of each raise or lower cycle. A 2.5 hour rest period at completion of listed cycles.

4. Thirty-second rest period at the end of each raise. A 2.5 rest period at the end of four cycles.

WARNING

When a load is attached on the hoist hook (and if conditions permit), it is advisable not to make abrupt changes in helicopter attitude until load is aboard or raised as close as possible. G-forces on hoist could become excessive if hoist load is being raised during abrupt movements of helicopter. These G-forces could result in the yield or failure of the hoist cable.

6. Move hoist control switch to up to raise hoist load.

7. Move hoist control switch to left to swing hoist boom inboard.

8. Bring hoist load into cabin and hoist to stowed position (fully inboard).

9. RESCUE HOIST CABLE CUTTER circuit breaker—Out.

10. RESCUE HOIST CONT circuit breaker—Out.

11. RESCUE HOIST POWER circuit breaker—Out.

4-26. Inflight Procedures—Hoist Operator—Rescue Hoist

WARNING

When any crewmember is not in his seat and is in the vicinity of the open cargo door, he shall be secured with a gunner harness.

1. Door—Full open and locked.

2. Hoist operator CABLE CUT switch guard—Down and safetied.

3. Hoist operator ICS panel—HOT MIC/PRIVATE.

WARNING

All hoist operation will be coordinated with the pilot. Continuous status reports.

4. After pilot has established zero airspeed over the desired location, move BOOM control switch—OUT to swing hoist boom outboard.

WARNING

Attempt to discharge electrostatic charge on hook before letting it touch person to be hoisted.

5. HOIST control switch—DOWN to lower cable hook (right and forward).

6. HOIST control switch—UP to raise hoist load (left and rearward).

7. BOOM control switch—IN to swing hoist boom inboard.

8. Bring hoist load into cabin and swing hoist boom to stowed position (fully inboard).

4-27. High Performance Hoist Provisions have been made for the installation of an internal rescue hoist (fig 4-2). The hoist may be installed in any one of four positions in the helicopter cabin. The hoist installation consists of a vertical column extending from the floor structure to the cabin roof, a boom with an electrically powered traction sheave, and an electrically operated winch. Two electrical control stations for the operation of the rescue hoist are provided, one for the pilot, and one for the hoist operator. A control switch is located on the cyclic control stick and provides up and down operation of the hoist as well as positioning the boom (fig 2-5). A pendant control is provided for the hoist operator and contains a boom positioning switch and a toggle switch for hoist operation (fig 4-6). The pilot control will override the hoist operators control. A pressure cartridge cable cutter is provided with two guarded cable cutter switches. The pilot cable cutter switch is mounted on the pedestal and the hoist operators cable cutter switch is mounted on the back of the hoist control box (fig 4-4 and fig 4-5). The high performance hoist is an electronically speed controlled unit. Speed varies from 125 fpm at 600 pounds to 250 fpm at 300 pounds. The winch has four positive action switches. Number One is an all-stop switch that opens when three wraps of cable remain on drum. Number Two is a deceleration switch that opens when five wraps of cable remain on drum. Number Three switch has two functions, operates caution indicator light on control pendant (when caution light is on, a cable deceleration should occur) and limits cable speed when hook is 8 to 10 feet from up-stow position. Number Four switch further limits cable

speed when hook is 12 to 18 inches from the up-stow position. The first and last 20 feet of the cable are painted red. An elapsed time meter and power-on indicator are located on the control panel. A pistol grip control (fig 4-6) is provided for the hoist operator and contains a boom in/out switch, a variable speed control, cable limit and overtemperature indicator (when hoist operating temperature limit has been exceeded the over temp light will come on). (Secure hoist as soon as operations permit), and an intercommunication switch. The hoist has 250 feet of usable cable. Power is provided by the nonessential bus. Circuit protection is provided by the RESCUE HOIST POWER, RESCUE HOIST CONT, and RESCUE HOIST CABLE CUTTER circuit breakers. RESCUE HOIST CABLE CUTTER circuit breaker controls only the pilot's cable cutter switch.

WARNING

All hoist operators must, prior to any "LIVE" hoist mission, have at least five (5) practice hoist lifts of 100 feet or more using a dummy load of 200 pounds or more. The practice lifts must have been within the last 6 months. The rescue hoist operator may be any certified crewmember designated that position as the mission dictates. Therefore, this duty should be thoroughly understood by all crewmembers.

4-28. Preflight Procedures

1. Check that vertical shaft for ceiling attaching point is raised vertically to prevent the ceiling attaching device from disconnecting.
2. Oil level—Check in hoist and boom head.
3. RESCUE HOIST CONT, RESCUE HOIST POWER AND RESCUE HOIST CABLE CUTTER circuit breakers—Check out.
4. CABLE CUT switches (pilot and hoist operator) guard—Down and safetied.
5. Cable cutter connector—Check connected.
6. Boom sheave—Check that no foreign matter is entrapped at sheave.
7. GPU—Connect to helicopter.

8. RESCUE HOIST CONT and RESCUE HOIST POWER circuit breakers—In. Blue POWER ON light and yellow CAUTION light should be on and fan should be operating.

9. BOOM switch—Rotate boom out and in, and then out to test boom operation.

10. HOIST switch (pilot)—Rotate boom in, and then out.

WARNING

A crewmember must reel cable out from the boom head in line with the boom axis during the following test procedures. Care must be taken not to pull the cable taut around the cable guide/roller since kinking of the cable might result. Avoid damaging cable on rough surfaces including the ground. No broken strands are allowed.

NOTE

After multiple and consecutive cable extensions (four or more) at one time under no load, apply 200 pound load with cable extended 250 feet to again properly seat cable elements.

11. SPEED MODE switch—HIGH.

12. HOIST switch (pilot)—Down. Reel cable out until caution light is out on pendant (approximately 10 feet).

13. HOIST control switch (pilot)—Reel in cable and observe that cable speed slows when caution light comes ON (approximately 10 feet).

14. Boom up limit switch actuator arm—Push up on arm during reeling in to check that hoist stops running when up limit switches are actuated. Observe that cable speed slows when hook is 12 to 18 inches from the full up position when cable is reeled in with no load on hook.

15. SPEED MODE switch—LOW SPEED and repeat steps 9 through 11.

16. Repeat steps 9 through 11 using the control pendant assembly. Check that cable speed can be regulated by the control from 0 to 250

fpm when cable is reeled out beyond 10 foot caution limit (caution light is out).

17. BOOM switch—Rotate boom in to stowed position.

18. RESCUE HOIST CONT, RESCUE HOIST POWER and RESCUE HOIST CABLE CUTTER circuit breakers—Out upon completion of preflight check.

4-29. Operating Procedures

1. RESCUE HOIST CONT, RESCUE HOIST POWER and CABLE CUTTER breakers—In.

2. Blue POWER ON and yellow CAUTION indicator lights should be on.

WARNING

Hands must be kept off hoist boom during operation to prevent hand entrapment and injury.

3. BOOM switch—Rotate boom out.

4. SPEED MODE switch—As required.

5. HOIST switch—DOWN. Adjust cable—reel-out speed as required. CAUTION light should be out when 8 to 10 feet of cable is reeled out.

6. HOIST control switch—UP and adjust cable reel-in speed as required. CAUTION light should be ON when rescue hook is 8 to 10 feet from up stow position. Reel cable completely up.

Caution

When hoist is installed in positions 1 or 4, the boom head assembly and hook assembly could bump the pilot/copilot helmets if stowed behind seat back.

7. BOOM OUT/IN switch—Rotate boom in.

8. RESCUE HOIST POWER, RESCUE CONT and CABLE CUTTER circuit breakers—Out.

4-30. Before Takeoff RESCUE HOIST CABLE CUTTER, RESCUE HOIST CONT and RESCUE HOIST POWER circuit breakers—Out.

4-31. Inflight Procedures

WARNING

Operations during gusty or turbulent wind conditions may result in contracting the lateral cyclic control stops. During hoisting operations the helicopter should be positioned to maximize the control margins.

1. Hover over pick-up location.

2. Use operating procedures as required.

3. Pilot should lift load off ground by increasing collective to ensure helicopter control with the load.

WARNING

When a load is attached on the hoist hook (and if conditions permit), it is advisable not to make abrupt changes in helicopter attitude until load is aboard or raised as close as possible. G-forces on hoist could become excessive if hoist load is being raised during abrupt movements of helicopter. These G-forces could result in the yield or failure of the hoist cable.

4-32. Inflight Procedures—Hoist Operator

WARNING

When any crewmember is not in his seat and is in the vicinity of open cargo door, he shall be secured with a gunner harness. All hoist operations will be coordinated with the pilot. Continuous status reports required.

1. Doors—Open as required.

2. Hoist operator ICS panel—HOT MIC/PRIVATE

WARNING

Attempt to discharge electrostatic charge on hook before letting it touch person to be hoisted. With personnel suspended on the hoist cable, adjust cable sway and speed as needed in order to avoid catching personnel under the aircraft or bumping personnel against the aircraft.

3. When helicopter is hovered over pickup location use operational procedures as required.

4. Pull out RESCUE HOIST CONT, RESCUE HOIST POWER and RESCUE HOIST CABLE CUTTER circuit breakers upon completion of hoist operations.

4-33. Engine Shutdown Procedures

1. RESCUE HOIST CONT circuit breaker—In.

2. Hoist—Stowed position.

3. RESCUE HOIST CONT circuit breaker—Out.

4. Enter the length of cable and number of lifts used in the remarks section of DA Form 2408-13.

4-34. Cargo Hook

Caution

Helicopters equipped with a nonrotating cargo suspension unit, which maintains the hook in a fixed position (facing forward), should be used only with a cargo sling having a swivel attachment ring. A device which may be used for this application is: Sling, Endless, Nylon Webbing, Type 1, 10 inch, NSN 3940-00-675-5001.

a. *Description.* External cargo can be carried by means of a short single cable suspension unit, secured to the primary structure and located at the approximate center of gravity. This method of attachment and location has proved to be the most satisfactory for carrying external cargo. Pitching and rolling due to cargo swinging is minimized, and good stability and control characteristics are maintained under load. A MANUAL CARGO RELEASE PUSH pedal is located between the pilot tail rotor control pedals, and an electrical release pushbutton switch is on the cyclic control stick. Before the electrical release switch on the cyclic control stick can be actuated, the CARGO RELEASE switch on the overhead panel must be positioned to ARM MISC. When not in use, the cargo suspension unit need not be removed, nor does it require stowing. Three cable and spring attachments keep the unit centralized, and the hook protrudes only slightly below the lower surface of the helicopter. A rear view mirror enables the pilot to visually check operation of the external cargo suspension hook.

b. *Preflight Procedure.*

1. Hook assembly—Check as follows:

(a) Condition and installation.

(b) Freedom of movement: fore, aft, and lateral.

(c) Centering springs (3)—Check for centering of the hook.

(d) Shear pin installation—The hook should not rotate.

(e) Electrical wiring—Condition and installation.

(f) Manual release cable—Condition and installation.

(g) Cargo hook—Closed.

2. Hook operation—Check as follows:

(a) BAT switch—ON.

(b) CARGO RELEASE switch—ARM. The CARGO RELEASE light should illuminate.

(c) Pilot electrical release switch—Press and hold. The cargo hook should open with slight pressure applied to the hook.

(d) Cargo hook—Close. Release the pilot electrical release switch.

(e) Copilot electrical release switch—Press and hold. The cargo hook should open with slight pressure applied to the hook.

(f) Cargo hook—Close. Release the copilot electrical release switch.

(g) Manual release—Press. The cargo hook should open with 20 to 30 pounds pressure applied to the hook.

(h) Cargo hook—Close.

(i) CARGO RELEASE switch—OFF The CARGO RELEASE light should go off.

(j) Apply approximately 20 to 30 pounds pressure to the hook—The cargo hook should not open.

(k) Pilot and copilot electrical release switches—Press. The cargo hook should not open. Release the switches.

(l) BAT switch—OFF.

c. *Hookup Procedures.*

1. CARGO RELEASE switch—ARM.

2. Approach the object to be picked up with caution. A ground handler or crewmember will direct the helicopter movement.

3. Maintain a constant altitude and position over the ground while the object is being placed on the cargo hook. Normally, the helicopter will be hovered into the wind.

WARNING

Attempt to discharge electrostatic charge on the hook before being touched by a person.

4. After the object is secured to the cargo hook, raise the helicopter until sling is taut and lift the load off the ground. Takeoff will be accomplished to allow adequate clearance over all obstacles.

5. A minimum amount of control movement (to prevent oscillation of the cargo load) is desired.

d. In Flight Procedures. CARGO RELEASE switch—OFF when cruise altitude and airspeed are reached. The switch should remain in the ON position at low altitude and airspeed.

e. Before Landing. CARGO RELEASE switch—ARM.

f. Release Procedures.

1. The landing approach angle will be determined by load weight and wind conditions, usually shallower than a normal approach. Do not allow the load to touch the ground until the helicopter is in a stable hover.

2. To deliver the load, lower the helicopter to relieve the tension on the sling, then use the electrical release button or mechanical release pedal to release the load. In order to release the cargo load safely using the cargo hook release button, the button must be pressed continually while at least 20 to 30 pounds of tension is put on the cargo hook. After the load is released, the cargo hook release button must be depressed again to close the hook. The crewman does not have the capability to release the cargo load from the aft cabin.

4-35. Parachute Operations

a. Crewmembers must become familiar with procedures outlined in TM 57-220 prior to parachute operations.

Caution

At no time during flight will the static line, snap hook or safety pins be disconnected from the aircraft static line anchor cable.

b. After the last chutist has exited the aircraft, the crew chief will pull in the static lines and will hold them secured until the aircraft has landed.

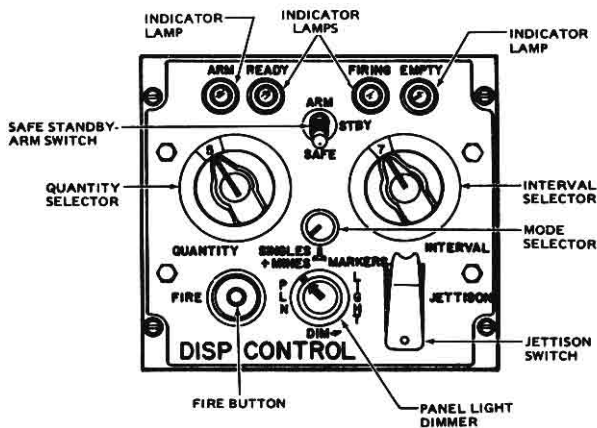


Figure 4-1. Mine Dispenser Control Panel—Typical

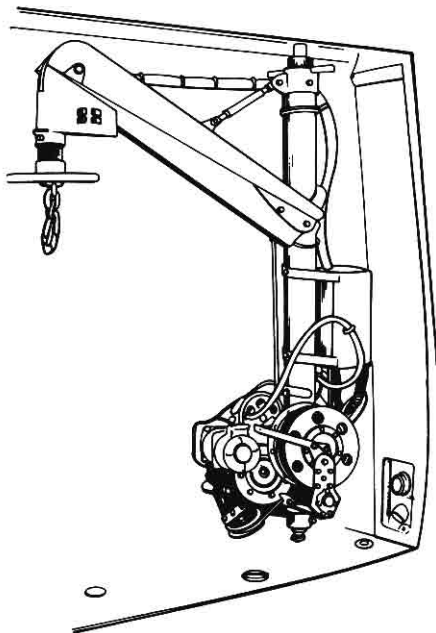


Figure 4-2. Hoist Installation—Typical

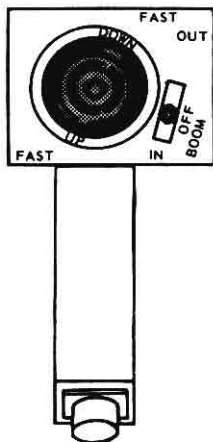


Figure 4-3. Pendant Control—Rescue Hoist

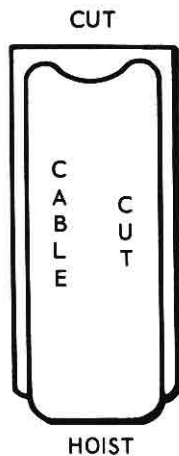


Figure 4-5. Hoist Cable Cut Switch—Hoist Operator—Typical

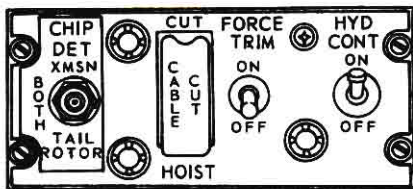


Figure 4-4. Hoist Cable Cutter Switch—Pilot—Typical

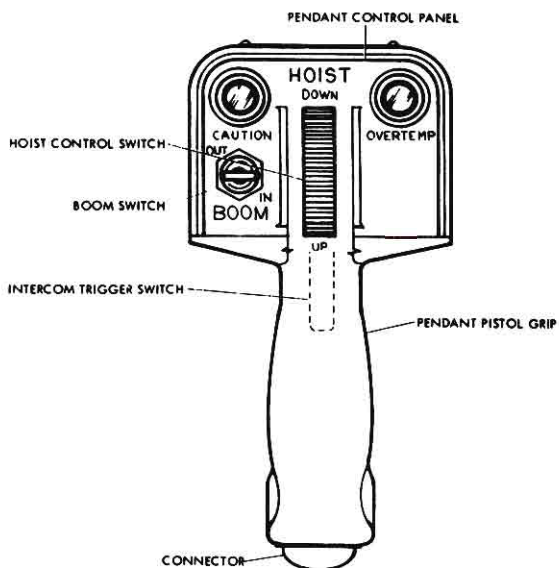


Figure 4-6. Control Pendant Assembly, High Performance Hoist