

AEROPLANE HEAVEN



You're virtually there.

COCKPIT & FLYING GUIDE



de Havilland DHC-1 T10
Chipmunk
FOR MICROSOFT FLIGHT SIMULATOR



de Havilland Canada DHC-1

LEADING PARTICULARS

Principal dimensions

Span34ft. 4 in.

Length, overall25ft. 5 in.

Height, over canopy (tail down)7ft. 0 in.

Ground angle12 deg.

Fuselage width (maximum)2ft. 6 in.

Fuselage height (including canopy)4ft. 7 in.

Wing

Chord at root ..6ft. 7 in.

Chord (mean) ..5ft. 0 in.

Gross wing area172.5 Sq. ft.

Tail plane

Span11ft. 11 in.

Incidence-1 - +15 deg.

Areas

Ailerons (total)13.9 Sq ft.

Flaps (total)22 Sq ft.

Tailplane (without elevators)17 Sq ft.

Elevators (total)14 Sq ft.

Elevator trim tab1.21 Sq ft.

Fin5.9 Sq ft.

Rudder7.4 Sq ft.

Control surface movements

Ailerons

UP21 deg.

DOWN16 deg.

Flaps

DOWN15 & 30 deg

Elevators

UP38 deg.

DOWN15 deg.

Rudder (each way)31 deg.

Engine

TypeGypsy Major 10

4 cyl. Inverted

in-line air-cooled

Propeller

TypeFairrey Reed

Metal Fixed-pitch

6ft. 9 in.

Diameter

Tank capacities

Fuel tanks (one flexible cell in each main plane): 12.5 gallons (imp.) EACH

Oil tank2.5 gallons (imp.)

de Havilland DHC-1 T10

Chipmunk

FOR MICROSOFT FLIGHT SIMULATOR

The Chipmunk is a "tail-dragger". In other words, it has a castoring tail wheel and two solid main gear struts which are non-retractable.

It is not a large aircraft having a wing-span of just 34 feet and an overall length of around 25 feet.

The engine is accessible from either side by unlatching and lifting the light alloy engine covers, much like an old car bonnet (hood).

A fully detailed Gypsy Major engine has been included in this model. You can lift the starboard cover to inspect the detail, via a switch in the cockpit.

A simple, robust engine makes for ease of maintenance and all the key components are easily reached.

Note the uncompromising exhaust manifold and pipes exiting the bottom cowlings. The prop is a metal fixed-pitch type and will pull the Chipmunk along to its 138 mph top speed.

Each wing has a tank incorporated in the main spar, close to the fuselage. The tank is filled using the fillers in the top of the wing and a fuel gauge is embedded in the wing surface adjacent to the filler in each wing.

The fuel gauge dials are configured to allow for the tilt when on the ground due to the tail-low stance of the aircraft. From the cockpit, when flying, the other scales are used to read the tank contents. A tank breather system of short tubes protrudes from the wing surfaces at this point.

Clambering up and onto the wing, the canopy is slid aft to reveal the two cockpits.

In the sim you must be in the virtual cockpit view to use the "T" handles to open the canopy (long "Birdcage" canopy). In the Bubble-canopy version, just click the hood-latch (red) at the top of the screen-frame.



The perfect military two-seat trainer.

tail on each side of the
akes which aid with
ontrol in a spin or tight
s all metal but is fitted
udder of large
effective control.
e also fabric covered
ounted to starboard
d from a wheel
in module in each
wing. The rudder, like
as a simple metal
on the ground prior

storing tail wheel is
handling. We have
e area of ground han-
o problems with this
in the current
u will notice a

aboard and familiarise
xpits.



CHOOSE TO FLY FROM FRONT OR
REAR COCKPIT SIMPLY BY USING THE
CAMERA MENU OF THE SIMULATOR.

YOUR CO-PILOT WILL AUTOMATICALLY
APPEAR.



TOP TIP!

IF YOU DO NOT WANT PILOTS IN EITHER
VIEW, GO TO THE FUEL/PAYLOAD DROP-
DOWN IN THE SIMULATOR AND ZERO
THE WEIGHT OF THE PILOT(S)



Almost every switch, knob and lever in the
cockpit is functional. Make sure you use the
panel guides to fully acquaint yourself with
the layout and location of various systems
before getting into any serious flying.

de Havilland DHC-1 T10
Chipmunk
FOR MICROSOFT FLIGHT SIMULATOR

AEROPLANE HEAVEN
You're virtually there.

The Chipmunk

TH
are to a
cockpit
otherw
ment as
cockpit
You
on the
a series
This is
ing sys
releas
rear of
will slic
For
use the
at the t
A
should
closed
optiona





REAR COCKPIT

The rear cockpit is essentially the same as the front except for a couple of differences. There is no starter in the rear cockpit but you do have the two magneto switches.

The Chipmunk has been fitted with many varied "extras" over the years including navigational equipment and modern radios, GPS and so on. For those planning a little cross-country navigation, we have included an optional set of navigation instruments which can be toggled using the emergency light switch in the rear cockpit.

This position a standard RMI gauge with NAV1 and ADF pointers. Alongside is a standard OMI with course adjustment knob in the right top of the instrument front face. Radio equipment for these instruments is mounted on the starboard cockpit rail and comprises a standard VHF Navigation tuner/receiver, and ADF tuner/receiver and a VHF Comms receiver.

FUEL CONTENTS

To port and starboard of the main cockpit area, out on the wings, you will find the fuel gauges for each wing tank. Each tank holds 12.5 imperial gallons. THERE ARE SPECIAL CAMERA VIEWS FOR THESE GAUGES.



EACH FUEL GAUGE HAS TWO SCALES THE WHITE ONE INDICATES IN LEVEL FLIGHT. THE RED ONE WHEN STATIONARY ON THE GROUND AT AN ANGLE.





USING THE P8 COMPASS.

The P8 "grid" compass is a traditional "marine" style compass that was used in a wide variety of aircraft from basic trainers like the D.H. Tiger Moth to the front-line Supermarine Spitfire.

Known for its reliability, it is often considered, quite wrongly, to be difficult and confusing to operate. It is in fact, quite simple and once mastered, will always give perfect readings and rock-steady navigation.

Let's begin with the basic components

1. Adjustable compass card
2. Fixed "lubber" line
3. Compass needle
4. Card ring lock
5. The compass "T" grid

The compass needle will, of course, like all compass needles point to magnetic North. In the case of the P8, the needle has a "cross" shape denoting the North pointer of the needle or "top" of the needle.

To find the heading of your aircraft, rotate the compass card ring 1. until the "T" shaped bars sit over the body of the needle and the red North box on the compass card is opposite the needle cross. Now read off the figure under the lubber line 2, (white tip) and you have the heading of your aircraft.

The P8 can also be used as a navigational aid by pre-setting a given course for later use.

Spin the card until the desired course in degrees is under the white tip of the lubber line and lock the ring in place by using the ring lock (4).

Now when you are ready to take up the new course, simply turn the aircraft until the cross of the needle falls under the "T" and opposite the red North box.

This compass can also be used to check the accuracy of your gyro compass.



USING THE OPTIONAL NAVIGATION SUITE.

Your Chipmunk is fitted with a basic navigation and communications radio suite. The three radio heads are fitted to the starboard wall of the rear cockpit. A Comms radio (COM1) is also fitted to the starboard wall of the front cockpit.

Click on the switch marked "SWITCH_NavGear" and the two navigation instruments will appear in a binnacle atop the coming directly in front of you.

Tune the radios to the correct frequencies and you will be able to navigate using basic IFR.



Flying the Chipmunk.

The De Havilland DHC-1 is an easy aircraft to fly, providing you follow the prescribed operations and obey some simple rules.

The T-10 trainer is fully aerobatic but must be flown with strict adherence to limitations.

We assume from here on in that you have familiarised yourself with the cockpit(s) and location of major controls.

You have checked the aircraft over according to the checklists and are aboard the cockpit of choice. **(Please remember that the Chipmunk needs to be started from the front cockpit.)**

SIMULATED "COLD, DARK" STARTS

Simulator set to "Hard"

Set the start point with ALL switches off and all controls to minimums and SAVE the flight.

Reload the flight.

Parkbrake lever ON

Check fuel levels in wing tanks.

1) Move electrical power control to ground power
A GPU (ground power unit) will appear in outside view, connected to the external electrical socket on the port side of the fuselage.

2) Open fuel cock

3) Set mixture control to full rich

4) Crack the throttle 1/2 inch

5) Switch both magnetos switches to ON

6) Click on starter flap

7) Pull starter ring

8) Switch electrical control to battery

9) Check generator light is out.

Ensure starter flap is returned to its original position.

Carburettor air temperature control

By means of a controllable shutter, warmed air can be drawn through a flame trap, close to the engine, or cold air through the duct and the scoop on the starboard cowl. A cable and pulley assembly is connected to a control for each occupant, with a locking gate in the front cockpit and a return spring on the assembly.

To select hot air, the control handle is moved rearwards and into the down position, against the spring tension.

Take-off and climb should normally be made in COLD but, should icing conditions be suspected, HOT air may be used. In the latter case it should be remembered that some loss of maximum power will be experienced.

Warm the engine at 1,000 to 1,200 RPM, to an oil temperature of 30 degrees: observing the instruments. Increase RPM to 1,500 and check each magneto by momentarily switching each off. A drop in RPM should be seen.

Also, check that the generator warning lamp is OUT.

Open throttle to full power and check the RPM which should be at

2,000 to 2,100. Do not hold on full power for more than a few seconds or beyond the time it takes for the tachometer to settle.

The aircraft can be manoeuvred on the ground with judicious use of throttle and differential braking. The fully-castering tail wheel will assist with turning.

Whilst taxiing check the operation of the artificial horizon, direction indicator, and turn and slip indicator. The maximum crosswind component in which the aircraft has been demonstrated to be safe for taxiing is 30 knots. This wind speed relates to a height of 33 ft.

Once aligned on the runway, do your final checks, acquire clearance and prepare for takeoff.

With park-brake released, open the throttle GRADUALLY to full power, keeping straight with rudder. There will be a tendency to swing to starboard so correct with the rudder, GENTLY.

Fly off the runway at around 45 knots indicated and when at a safe height, raise the flaps if you have used them. N.B. Select half-flap for short takeoffs.

Climb with full throttle at a speed of 70 knots, maintaining full rich mixture until at altitude. Then reduce mixture for maximum running, whilst monitoring oil temperature. **WARNING! IF ENGINE TEMPERATURE EXCEEDS 100° AT ANY TIME ON THE GROUND OR IN THE AIR, THE ENGINE WILL FAIL.**

Carburettor icing will be indicated by rough running and loss of engine power. If icing conditions are suspected, select the carburettor air control to HOT.

If icing does not clear immediately after the selection of HOT air, manipulation of the throttle may assist.

GENERAL FLYING

Trim out for neutral handling.

The aircraft is naturally very stable and reacts predictably to control inputs. With flaps down, the nose trim will generally be down. More power will result in a slight nose-up trim.

When using flaps, the aircraft will stall at speeds below 35 knots.

Mixture control is critical to good engine management and must be constantly adjusted to suit altitudes. Generally speaking, the higher you go, the leaner the mixture should be. However, ALWAYS use full rich mixture in a dive.

In cruising flight, HOT air should be used continuously unless the ambient air temperature exceeds 30°C. DO NOT exceed 2,100RPM in cruise. Recommended cruise speed is 85 - 90 knots.

AEROBATICS

Your Chipmunk is fully aerobatic.

Before performing aerobatic manoeuvres, carry out cockpit checks, paying particular attention to engine monitoring gauges and mixture control.

All aerobatic manoeuvres may be carried out at the maximum all-up-weight of 2,100lb. Take care not to exceed the airspeed limitations.

It is recommended that the following aerobatic manoeuvres are performed at the indicated airspeeds quoted:

Roll 120 knots

Loop 130 knots

Barrel Roll 120 knots

Half Roll off the top of loop 130

knots

Note: The aircraft is not designed for sustained inverted flight.

STALLING

Stalling speeds for the aircraft are:

Flaps down 43 knots

Flaps UP 47 knots

SPINNING

Before carrying out practice spins complete the relevant checklist and take note of the limitations. For training safety, the aeroplane is intentionally difficult to spin properly in almost all centre of gravity positions.

Therefore it is usually necessary to apply aileron against the intended direction of spin, in addition to the normal pro-spin control movements. Entry with central aileron will probably cause the aeroplane to describe a semi-spiral. This is often confused with a true spin.

More information on spins, aerobatics and general flying techniques is contained in the official Pilot's Notes included with this package.

We hope you enjoy your de Havilland Canada DHC-1 Chipmunk as much as we enjoyed building it. Good luck, happy flying and stay safe.

AEROPLANE HEAVEN



Copyright AeroPlane Heaven 2022

de Havilland DHC-1 T10
Chipmunk
FOR MICROSOFT FLIGHT SIMULATOR